

24. Keyless Entry Control Module


A: REMOVAL

NOTE:

Except for model with keyless access

1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear shelf trim. <Ref. to EI-120, REMOVAL, Rear Shelf Trim.>
- 3) Remove the keyless entry control module.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and remove the keyless entry control module.

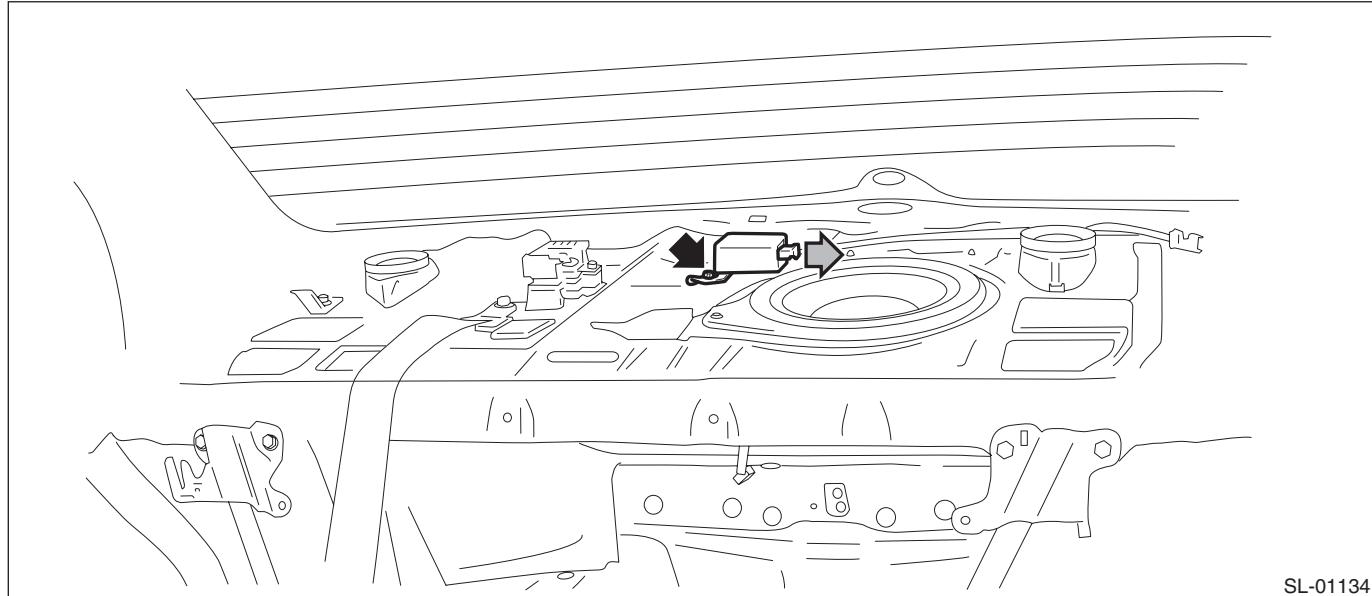


2. WAGON/OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear quarter trim LH. <Ref. to EI-112, OUTBACK MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Remove the keyless entry control module.
 - (1) Disconnect the connector.

Keyless Entry Control Module

SECURITY AND LOCKS

(2) Remove the bolt and remove the keyless entry control module.

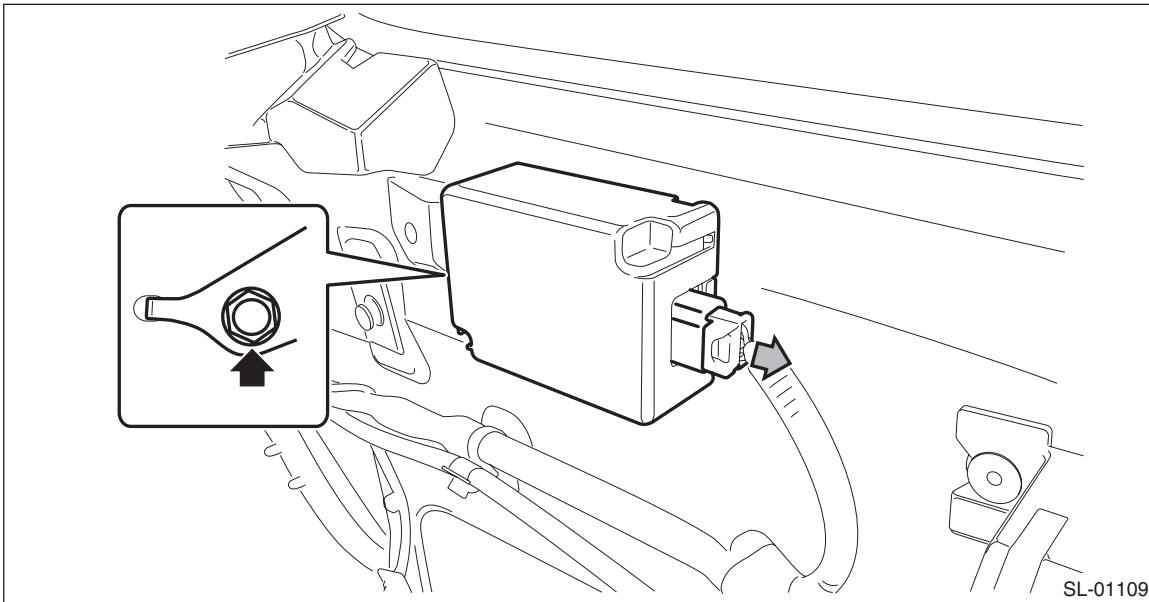

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Keyless entry control module: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)