


25.Keyless Buzzer

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the front bumper face assembly. <Ref. to EI-36, REMOVAL, Front Bumper.>
- 3) Remove the keyless buzzer.
 - (1) Disconnect the connector.
 - (2) Remove the clip and detach the keyless buzzer.

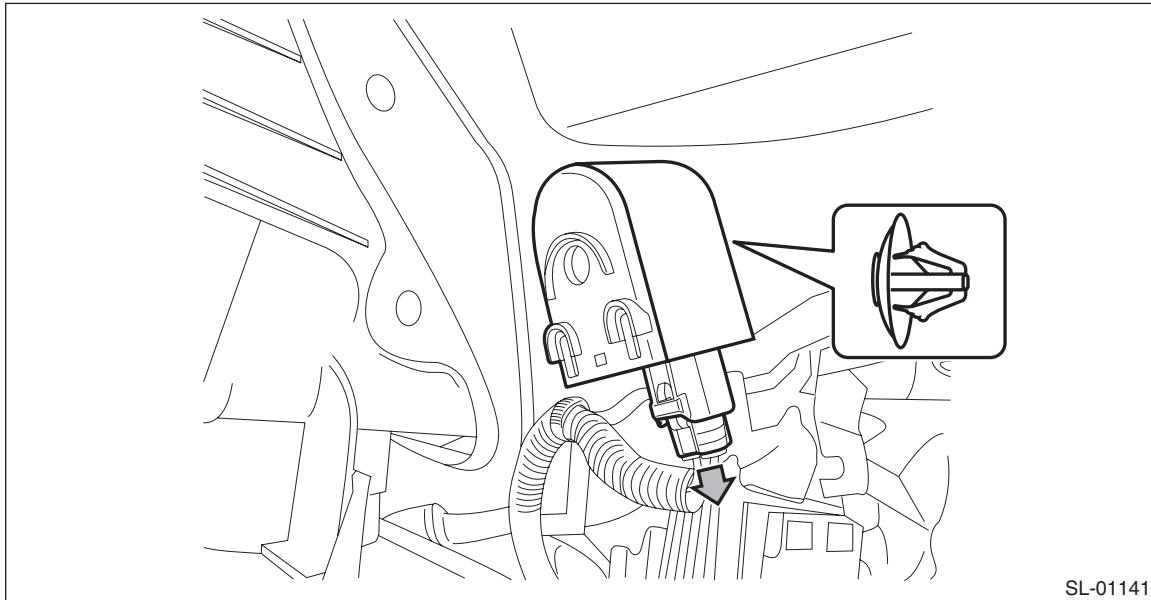

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Using the Subaru Select Monitor, perform the forced operation of keyless buzzer. <Ref. to BC(diag)-16, OPERATION, User Customizing.>
- 2) If the buzzer does not sound, replace the keyless buzzer.