

## 26. Body Integrated Unit

### A: NOTE

#### 1. WHEN REPLACING THE BODY INTEGRATED UNIT

1) Check and record the current setting. <Ref. to BC(diag)-18, CONFIRM CURRENT SETTING, OPERATION, Registration Body Integrated Unit.>

2) Prepare the following.

- Security ID plate (models without keyless access)
- Required number of registered immobilizer keys or new (not registered) immobilizer keys (model without keyless access).

#### 2. AFTER REPLACING THE BODY INTEGRATED UNIT

1) Register the immobilizer. For detailed operation procedures, refer to "PC application help for Subaru Select Monitor". (Model without keyless access)

2) Set the current settings as recorded.

### B: REMOVAL

1) Disconnect the ground cable from battery.


2) Remove the instrument panel lower cover. <Ref. to EI-61, REMOVAL, Instrument Panel Lower Cover.>

3) Remove the body integrated unit.

#### CAUTION:

**Be careful to keep water and other foreign materials away from body integrated unit.**

- (1) Remove the harness clip and connector.
- (2) Remove the bolts, and remove the body integrated unit.

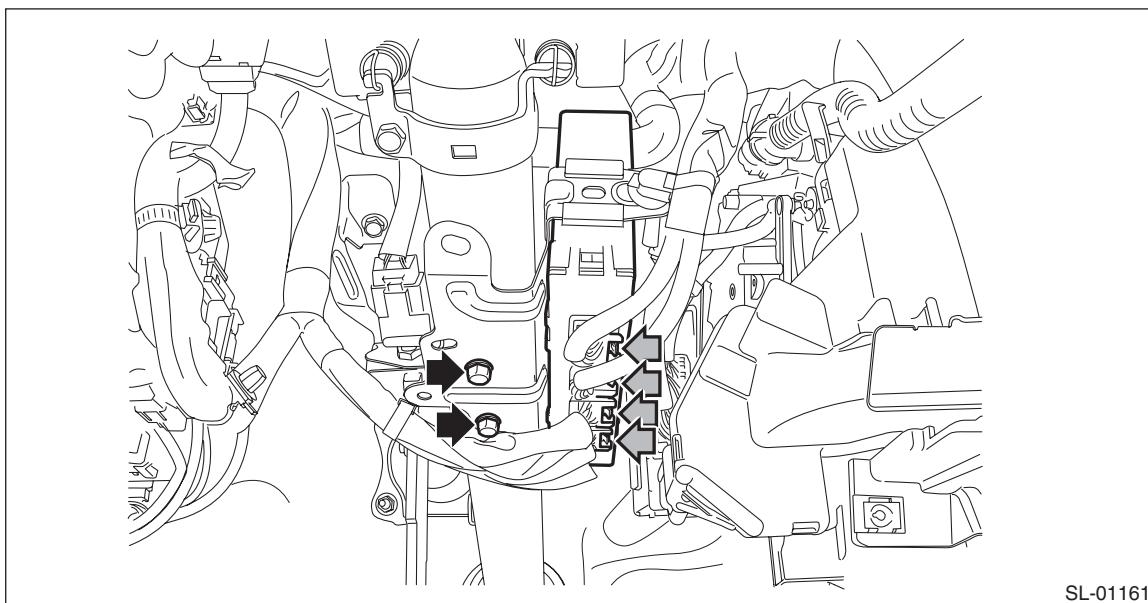

### C: INSTALLATION

Install each part in the reverse order of removal.

#### *Tightening torque:*

**Body integrated unit: 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)**

#### NOTE:

Make sure that there are no differences from the contents of the current settings after installation. <Ref. to BC(diag)-12, LIST, Read Current Data.>