


### 37. Receiver

#### A: REMOVAL

NOTE:

Except for model with keyless entry

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear quarter trim LH. <Ref. to EI-112, OUTBACK MODEL, REMOVAL, Rear Quarter Trim.>
- 3) Remove the receiver.
  - (1) Disconnect the connector.
  - (2) Remove the bolt and remove the receiver.

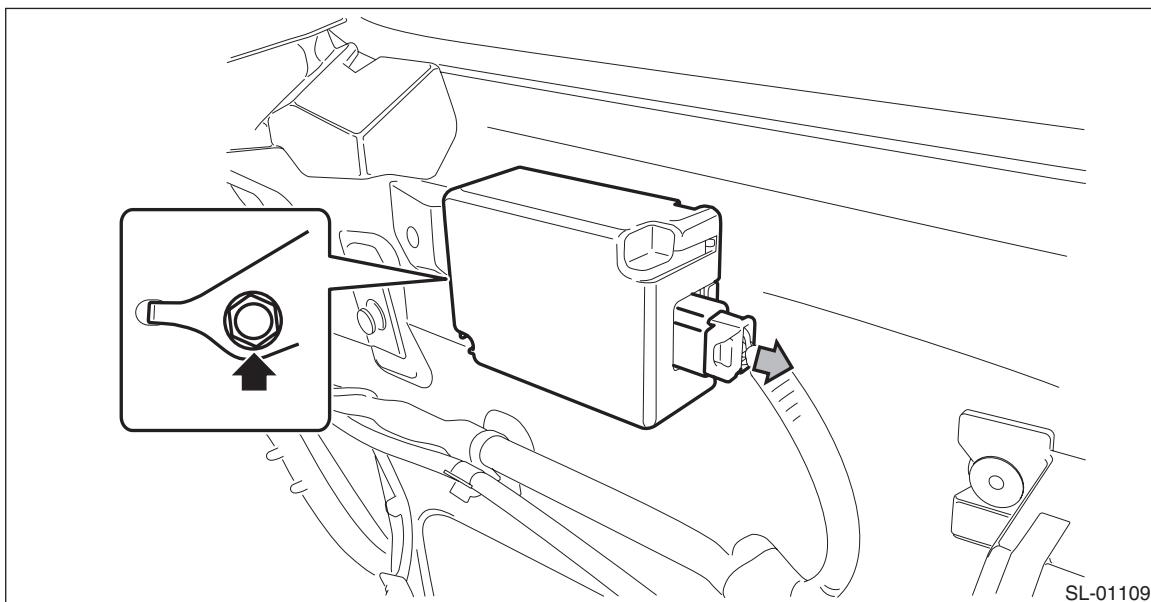

#### B: INSTALLATION

Install each part in the reverse order of removal.

***Tightening torque:***

**Receiver: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

#### C: INSPECTION

- 1) Check if the door lock operates when the front lock button and rear lock button are operated.
- 2) If the system does not operate normally as the result of inspection, refer to "General Diagnostic Table" of the "KEYLESS ACCESS WITH PUSH BUTTON START SYSTEM (DIAGNOSTICS)" section. <Ref. to KPS(diag)-90, KEYLESS ACCESS SYSTEM, INSPECTION, General Diagnostic Table.>