


## 39.ID Code Box

### A: REMOVAL

- 1) Remove the heater and cooling unit. <Ref. to AC-66, REMOVAL, Heater and Cooling Unit.>
- 2) Remove the ID code box.
  - (1) Disconnect the connector.
  - (2) Remove the nut and remove the ID code box.

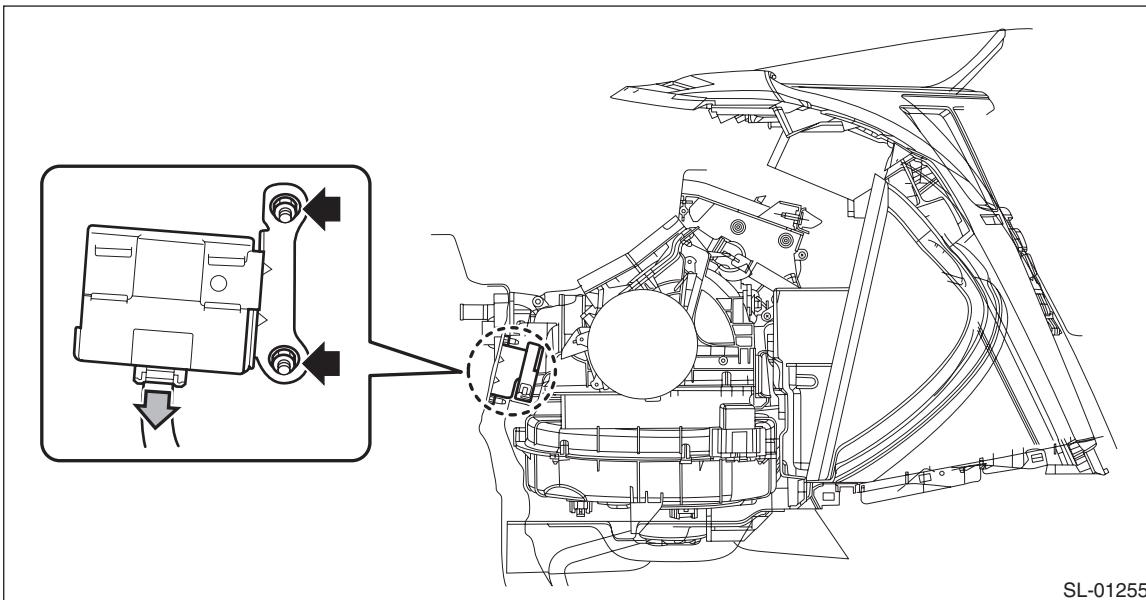

### B: INSTALLATION

**CAUTION:**

You must register the immobilizer when a immobilizer-related control module has been replaced. For procedures, refer to the “PC application help for Subaru Select Monitor”.

Install each part in the reverse order of removal.