

8. Sunshade

A: REMOVAL


CAUTION:

When removing the clip, use great care not to damage the roof trim.

1) Remove the glass lid.

(1) Completely close the glass lid, and then open the sunshade.


(2) Disconnect the claws and then remove the lid cover.

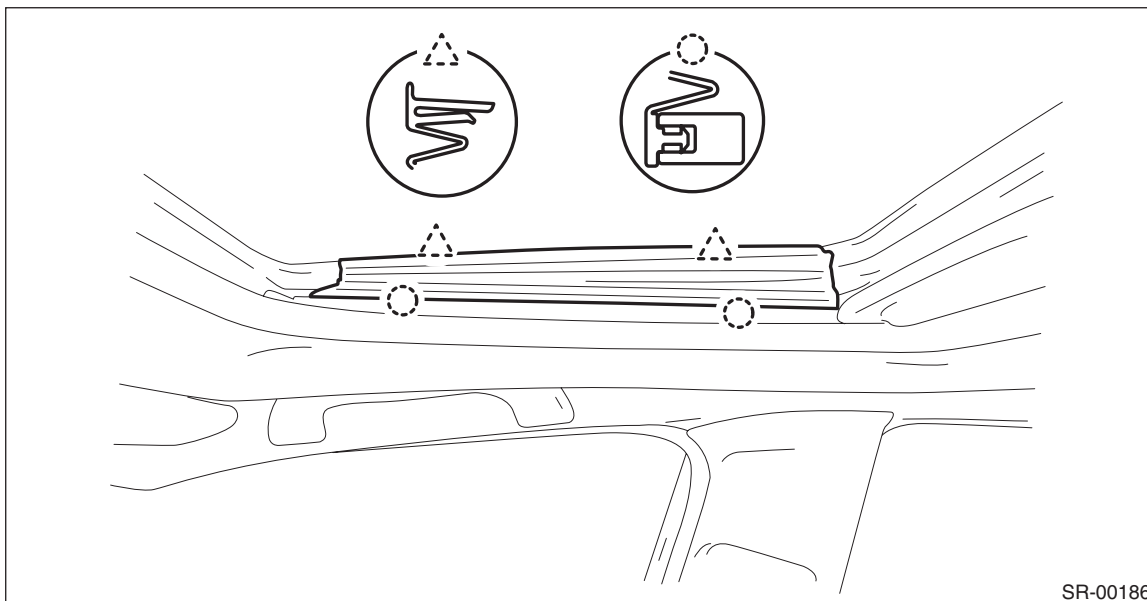

(3) Remove the bolts, then remove the glass lid.

CAUTION:

Be careful not to damage the glass lid.

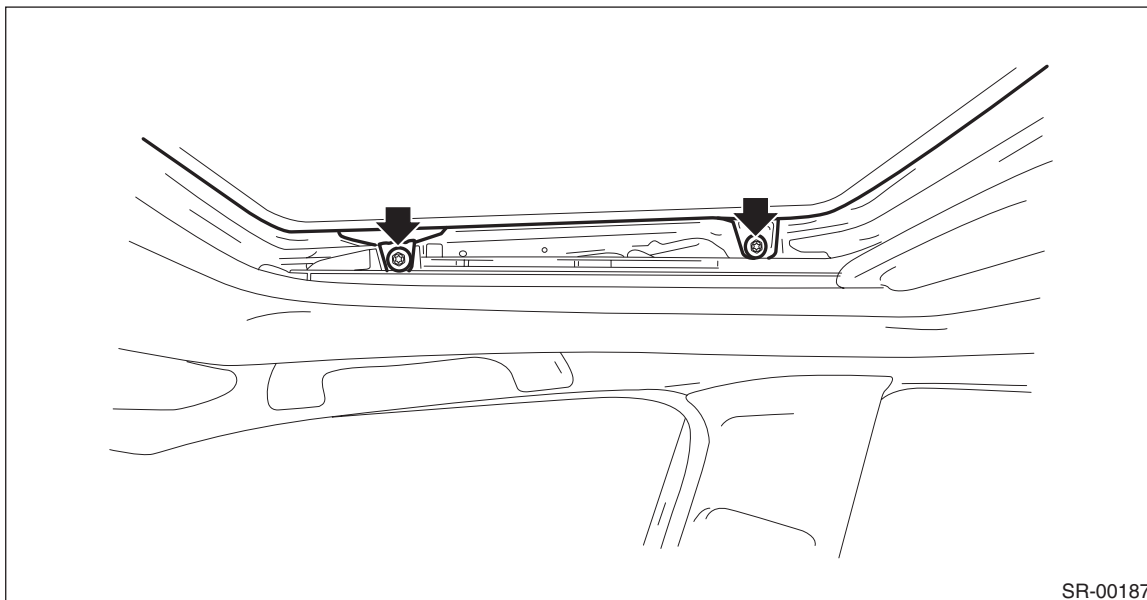


2) Remove the roof trim. <Ref. to EI-131, REMOVAL, Roof Trim.>

3) Disconnect the sunroof motor connector.

Sunshade


SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

- 4) Remove the frame assembly.
(1) Remove the drain tube.

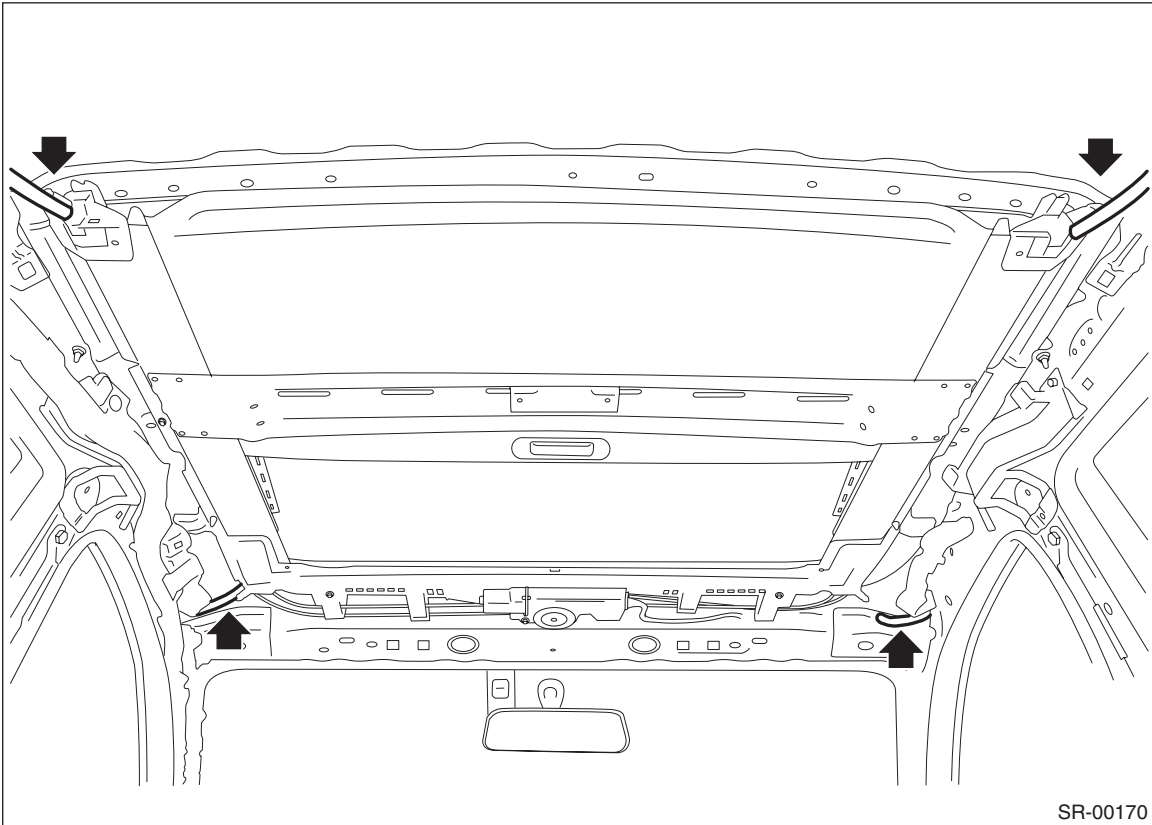


SR-00170

- (2) Remove the bolts and then remove the sunroof bracket.

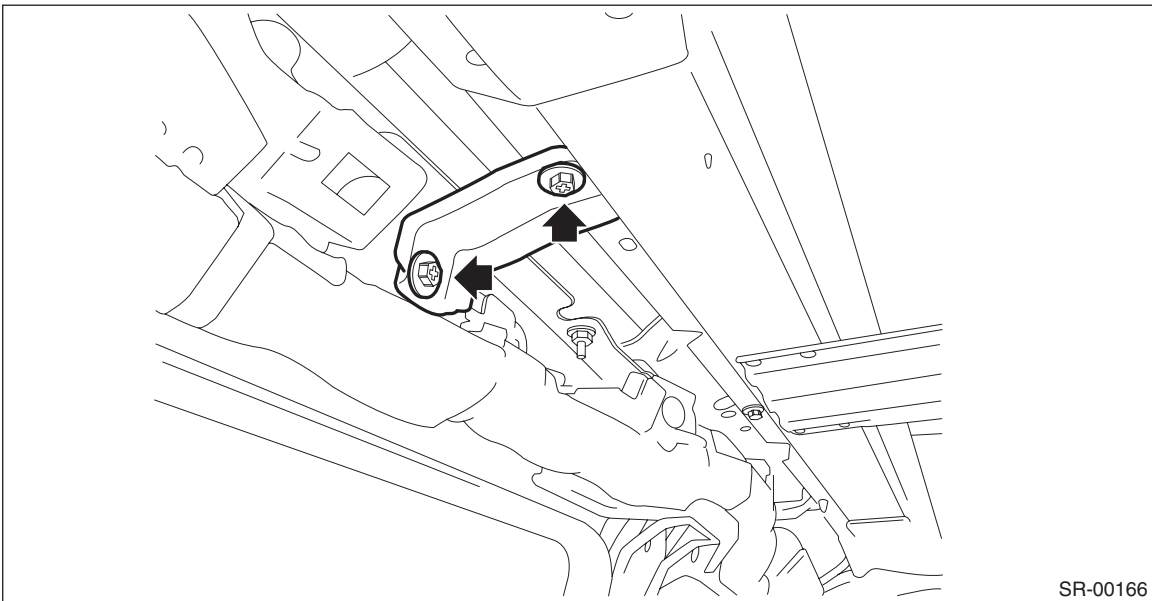


SR-00166

- (3) Remove the bolts, then remove the frame assembly.

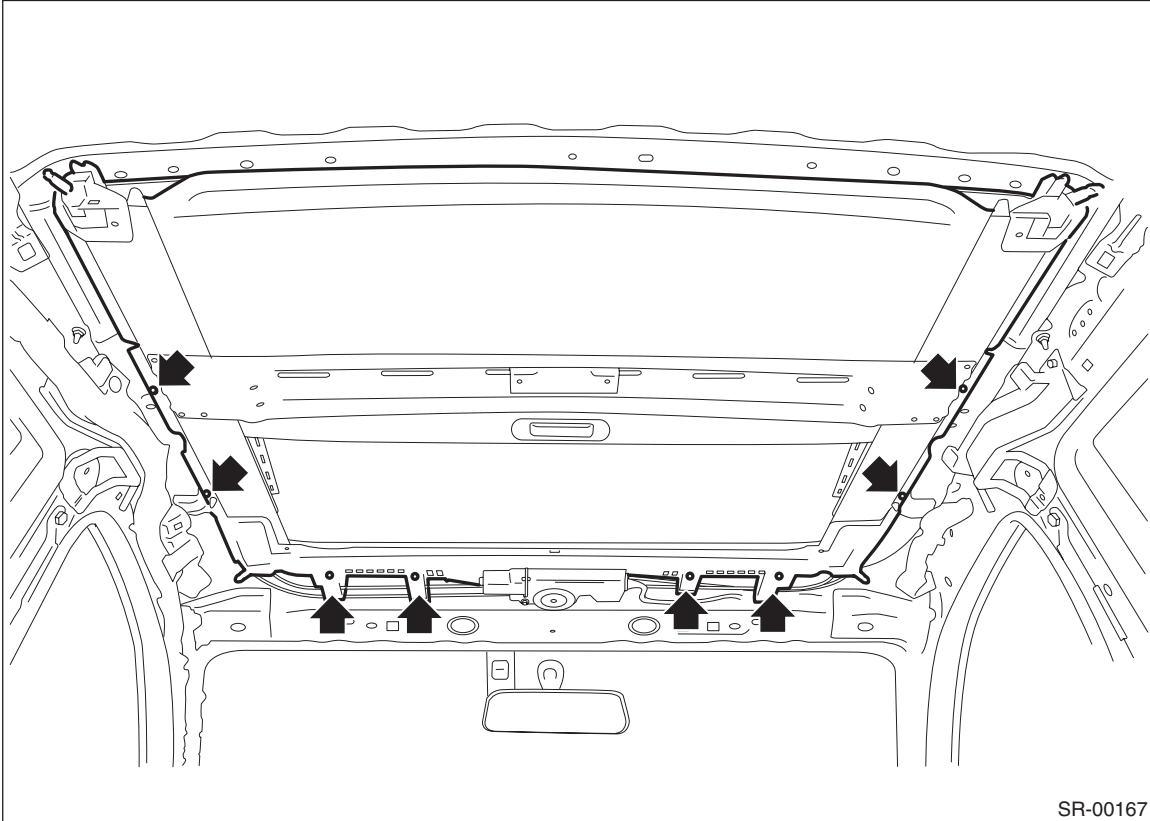

- 5) Remove the stopper rubber and pull out the sunshade from sunroof frame.

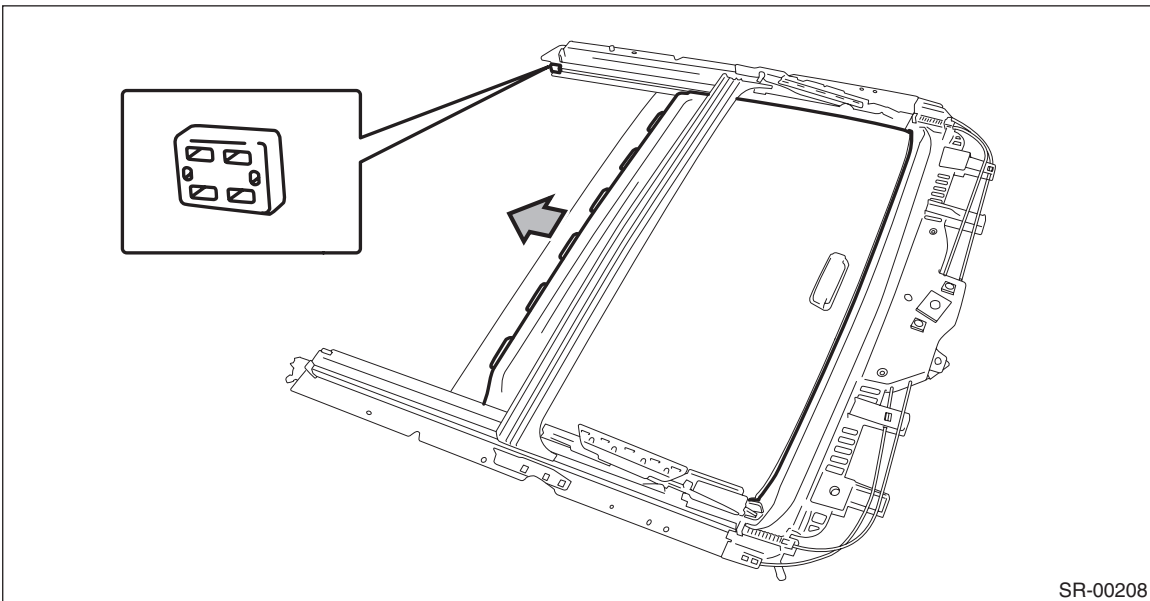

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SR-2, COMPONENT, General Description.>

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring scale to sunshade edge using a cloth.
- 2) Pull the spring scale to check the moving load of the sunshade.

Moving load of sunshade:

14 ± 6 N (1.43 kgf, 3.1 lbf $\pm$ 0.61 kgf, 1.3 lbf)

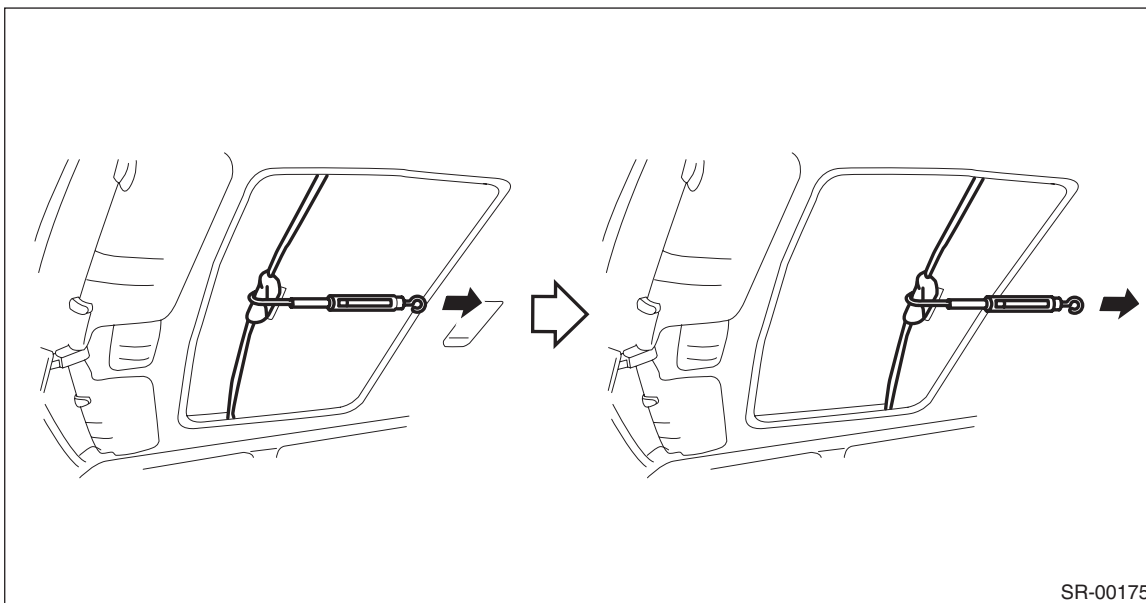

SR-00175

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

- 3) If the inspection result exceeds the standard value, check if the installation to sunshade or frame assembly is sufficient, and replace if necessary.

EXTERIOR/INTERIOR TRIM

EI

	Page
1. General Description	2
2. Front Grille	25
3. Cowl Panel	29
4. Front Under Cover	32
5. Floor Under Protector	33
6. Fuel Tank Protector	34
7. Mud Guard	35
8. Front Bumper	36
9. Rear Bumper	47
10. Side Sill Spoiler	52
11. Roof Molding	53
12. Roof Rail	56
13. Door Trim	57
14. Instrument Panel Lower Cover	61
15. Glove Box	63
16. Center Console	66
17. Console Box	70
18. Instrument Panel Assembly	73
19. Lower Inner Trim	94
20. Upper Inner Trim	100
21. Rear Quarter Trim	108
22. Rear Shelf Trim	120
23. Trunk Room Trim	127
24. Sun Visor	129
25. Assist Grip	130
26. Roof Trim	131
27. Rear Gate Trim	164
28. Floor Mat	166
29. Trunk Lid Garnish	168
30. Rear Gate Garnish	169
31. Heat Shield Cover	172
32. Ornament	173