


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. FRONT UNDER COVER

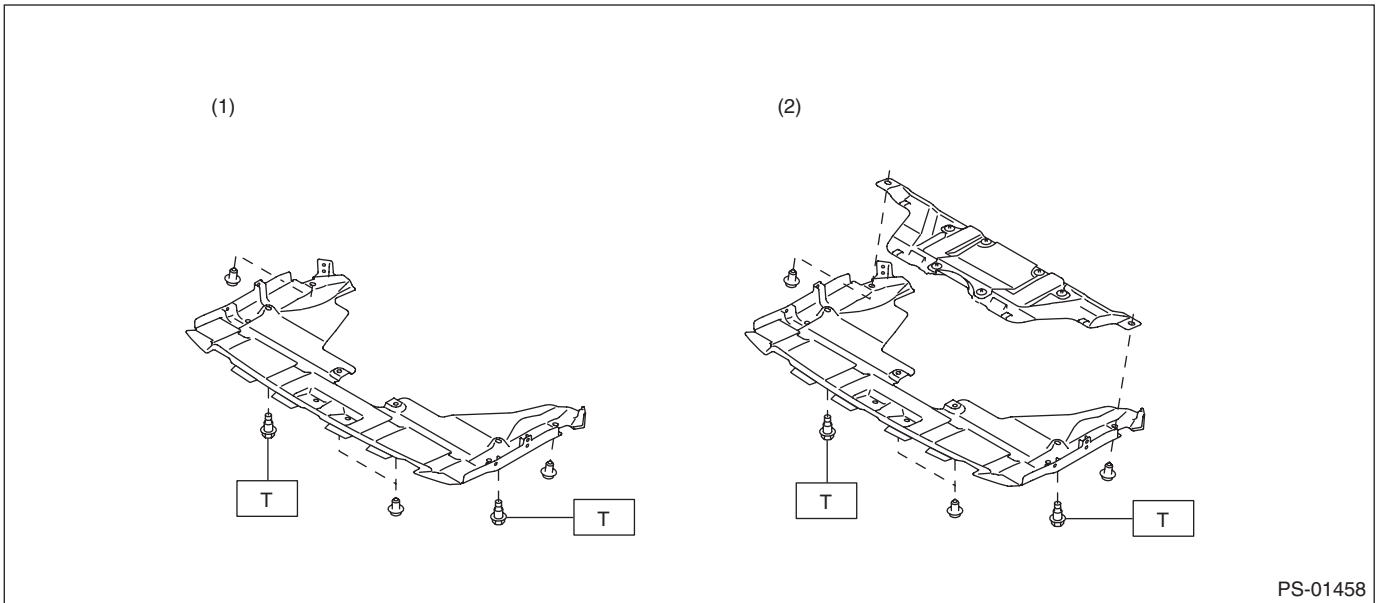


(1) Small type

(2) Medium type

Tightening torque: N·m (kgf-m, ft-lb)

T: 17.5 (1.78, 12.9)


2. FLOOR UNDER PROTECTOR

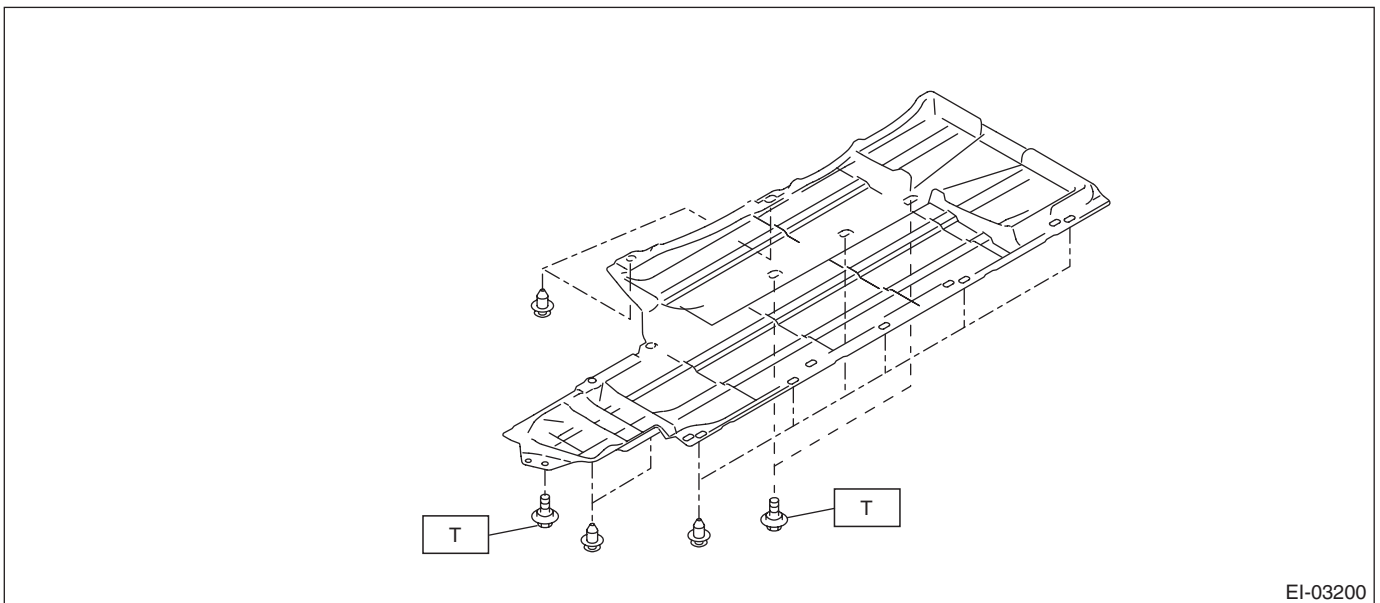

Tightening torque: N·m (kgf-m, ft-lb)

T: 7.5 (0.76, 5.5)

3. FUEL TANK PROTECTOR

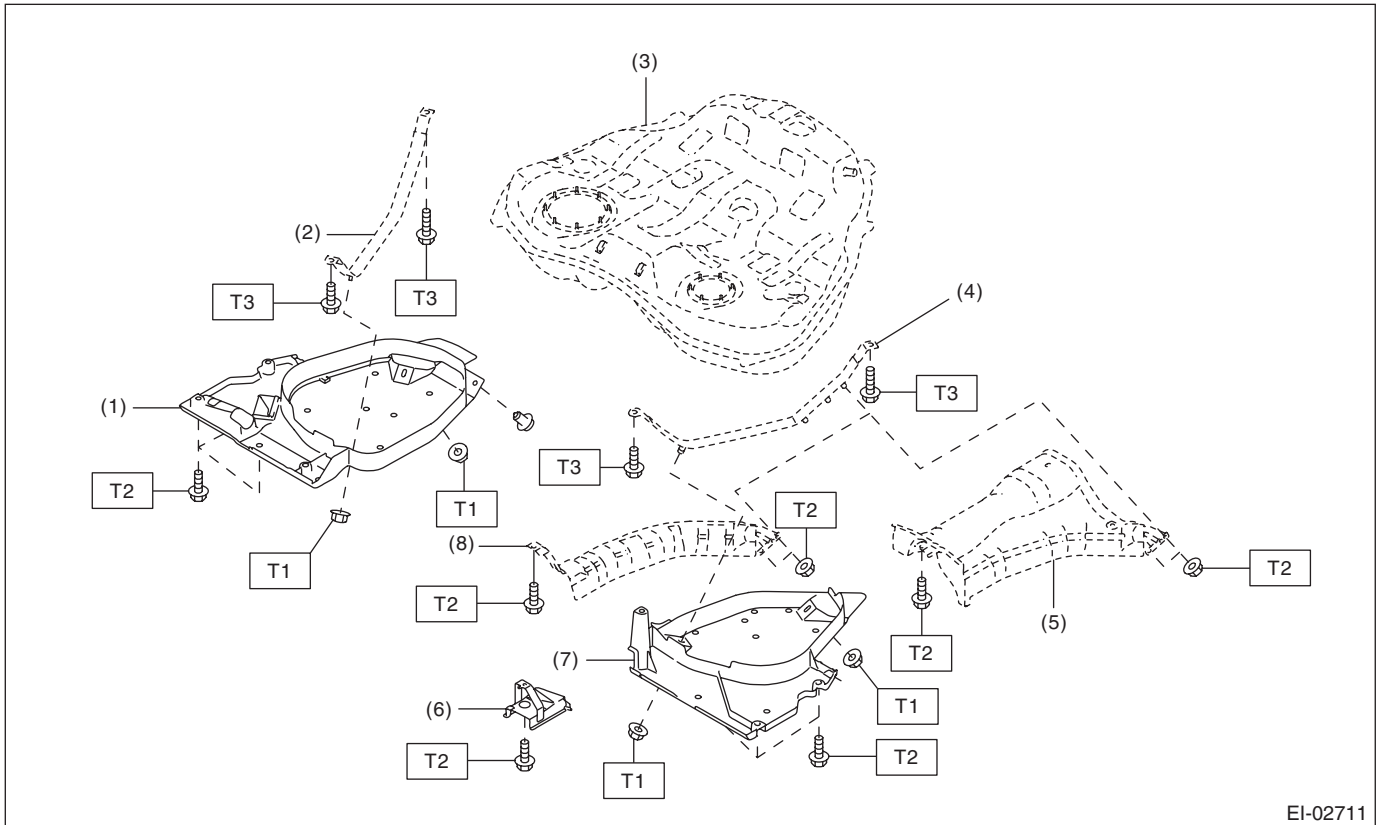

EI-02711

- | | |
|----------------------------|---|
| (1) Fuel tank protector RH | (5) Center heat shield cover (H6 model) |
| (2) Fuel tank band ASSY RH | (6) Fuel tank bracket |
| (3) Fuel tank ASSY | (7) Fuel tank protector LH |
| (4) Fuel tank band ASSY LH | (8) Center heat shield cover (H4 model) |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 9 (0.92, 6.6)


T2: 18 (1.84, 13.3)

T3: 33 (3.36, 24.3)

General Description

EXTERIOR/INTERIOR TRIM

4. FRONT BUMPER

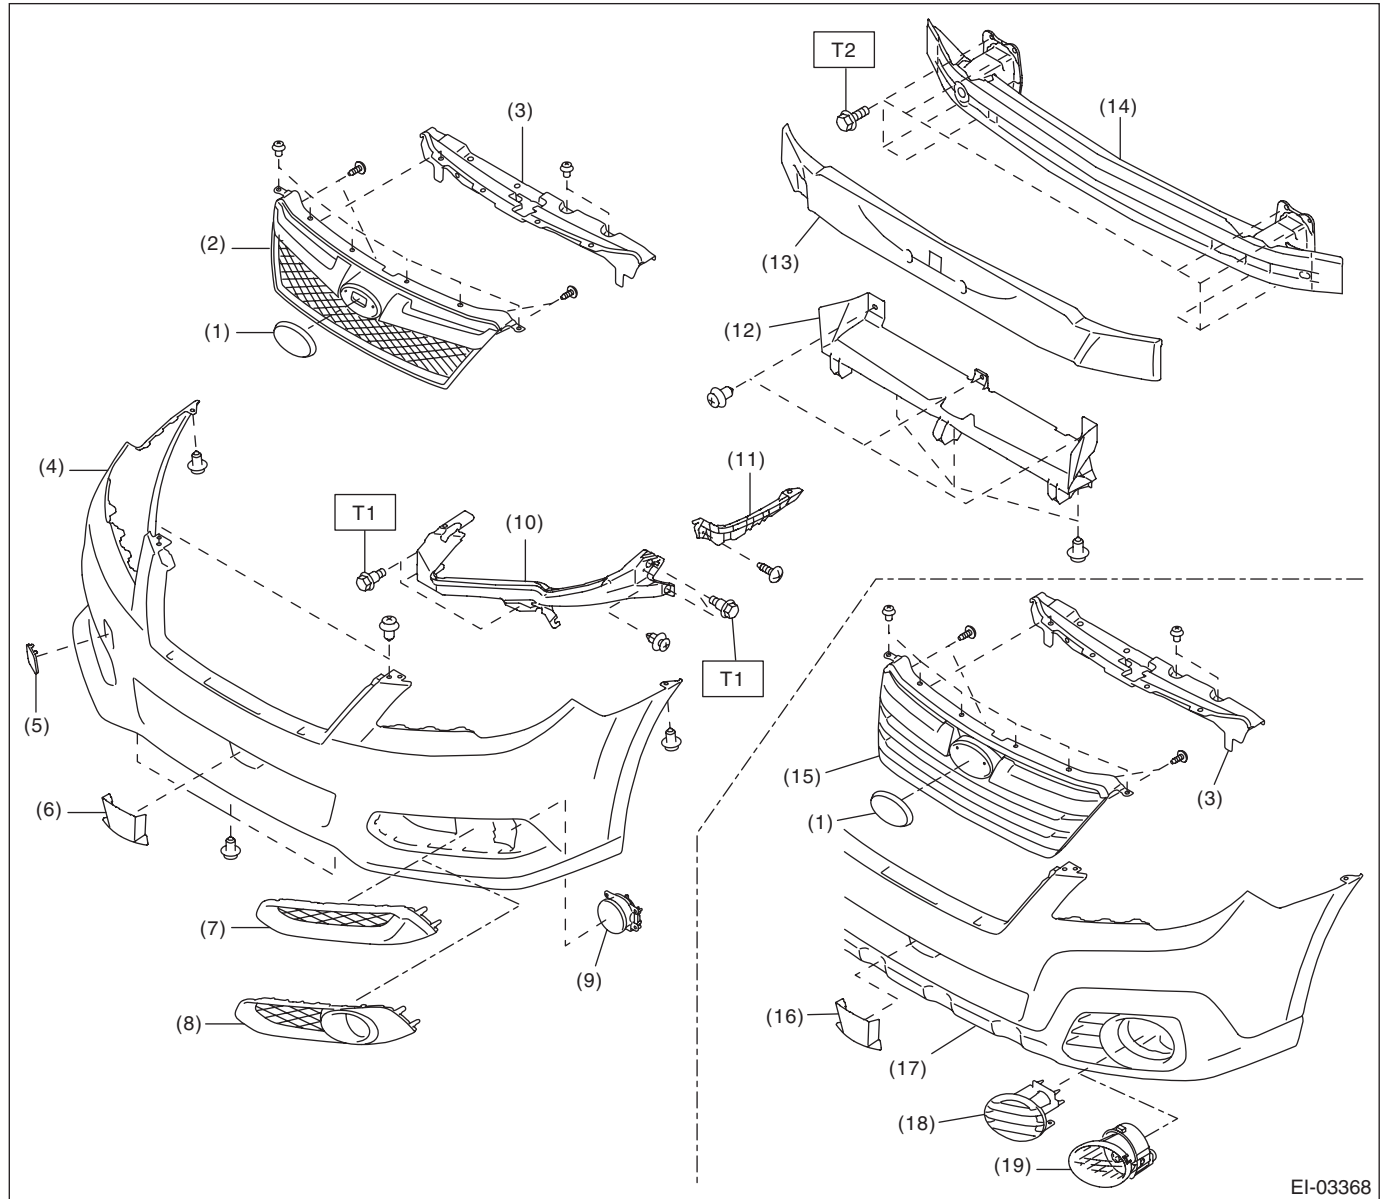

EI-03368

(1) Floor ornament	(9) Fog light ASSY (Sedan model)	(17) Front bumper face (OUTBACK model)
(2) Front grille ASSY (Sedan model)	(10) Bracket corner front	(18) Fog light cover (OUTBACK model)
(3) Grille bracket	(11) Bracket side front UPR	(19) Fog light ASSY (OUTBACK model)
(4) Front bumper face (Sedan model)	(12) Bracket center LWR front	
(5) Front hook cover	(13) Energy absorber foam front	
(6) Bumper cover CTR (Sedan model)	(14) Beam COMPL front	
(7) Bumper cover (Sedan model)	(15) Front grille ASSY (OUTBACK model)	
(8) Fog light cover (Sedan model)	(16) Bumper cover CTR (OUTBACK model)	


Tightening torque: N-m (kgf-m, ft-lb)

T1: 7.5 (0.76, 5.5)

T2: 32 (3.26, 23.6)

5. REAR BUMPER

- Sedan model

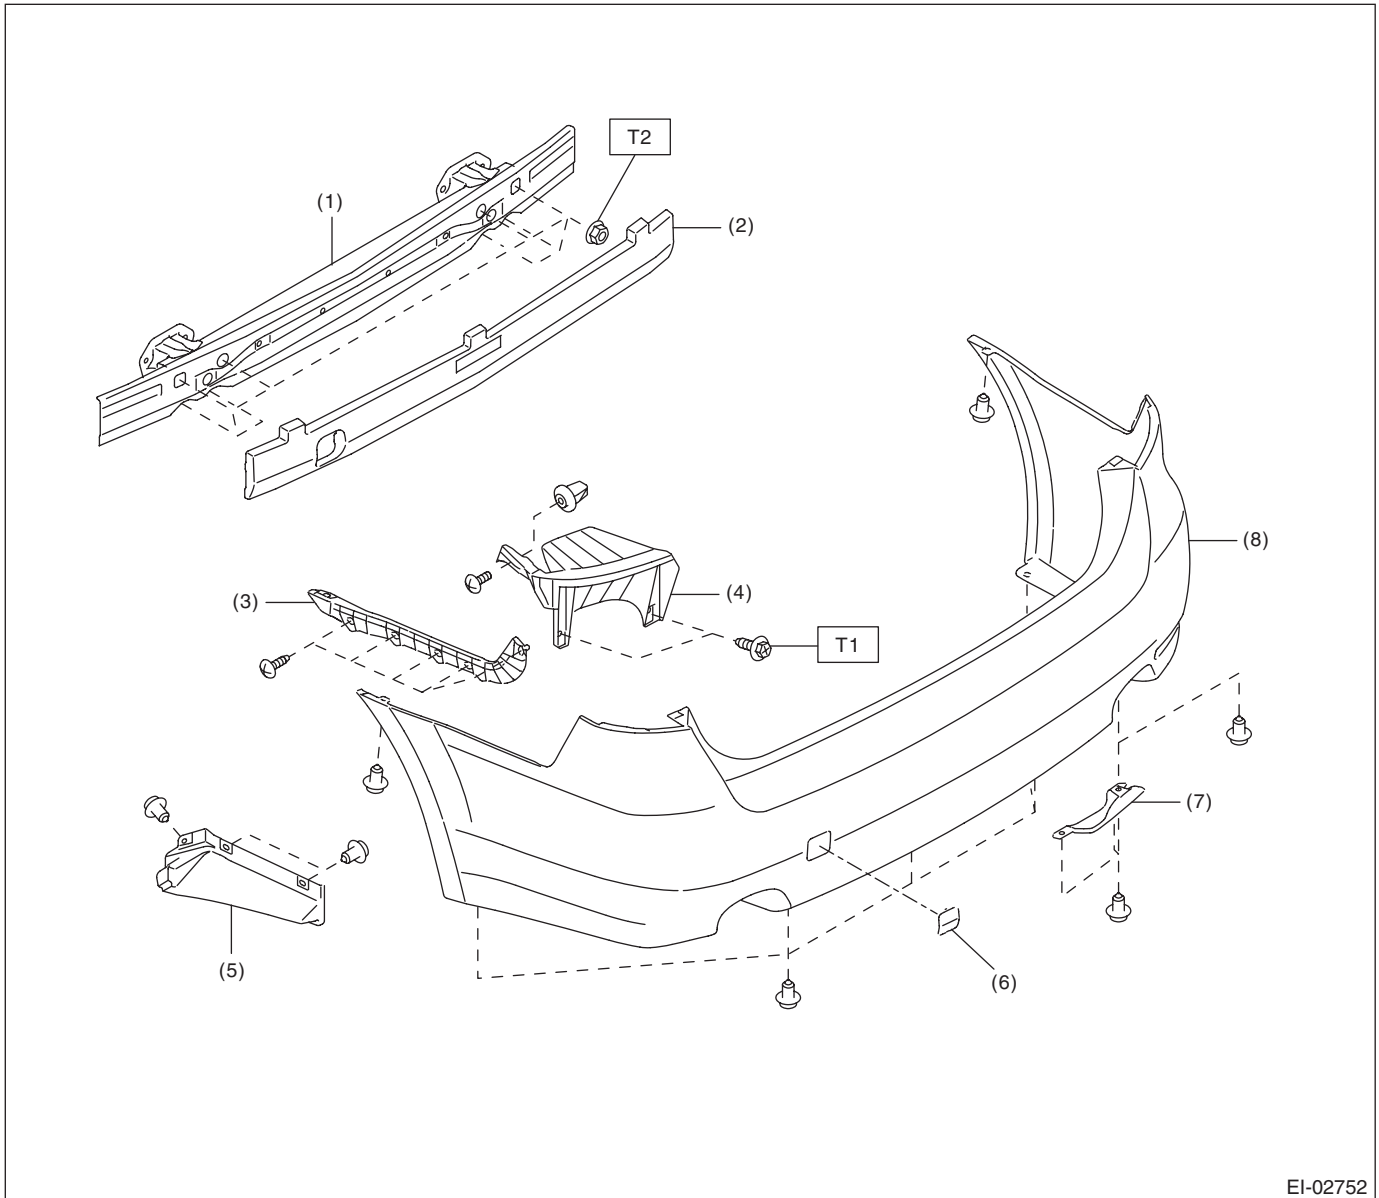

EI-02752

- | | |
|-------------------------------|---------------------------|
| (1) Beam COMPL rear | (5) Bracket side rear LWR |
| (2) Energy absorber foam rear | (6) Rear hook cover |
| (3) Bracket side rear UPR | (7) Bumper cover rear |
| (4) Bracket corner rear | (8) Rear bumper face |

Tightening torque: N·m (kgf·m, ft·lb)


T1: 7.5 (0.76, 5.5)

T2: 45 (4.59, 33.2)

General Description

EXTERIOR/INTERIOR TRIM

- OUTBACK model

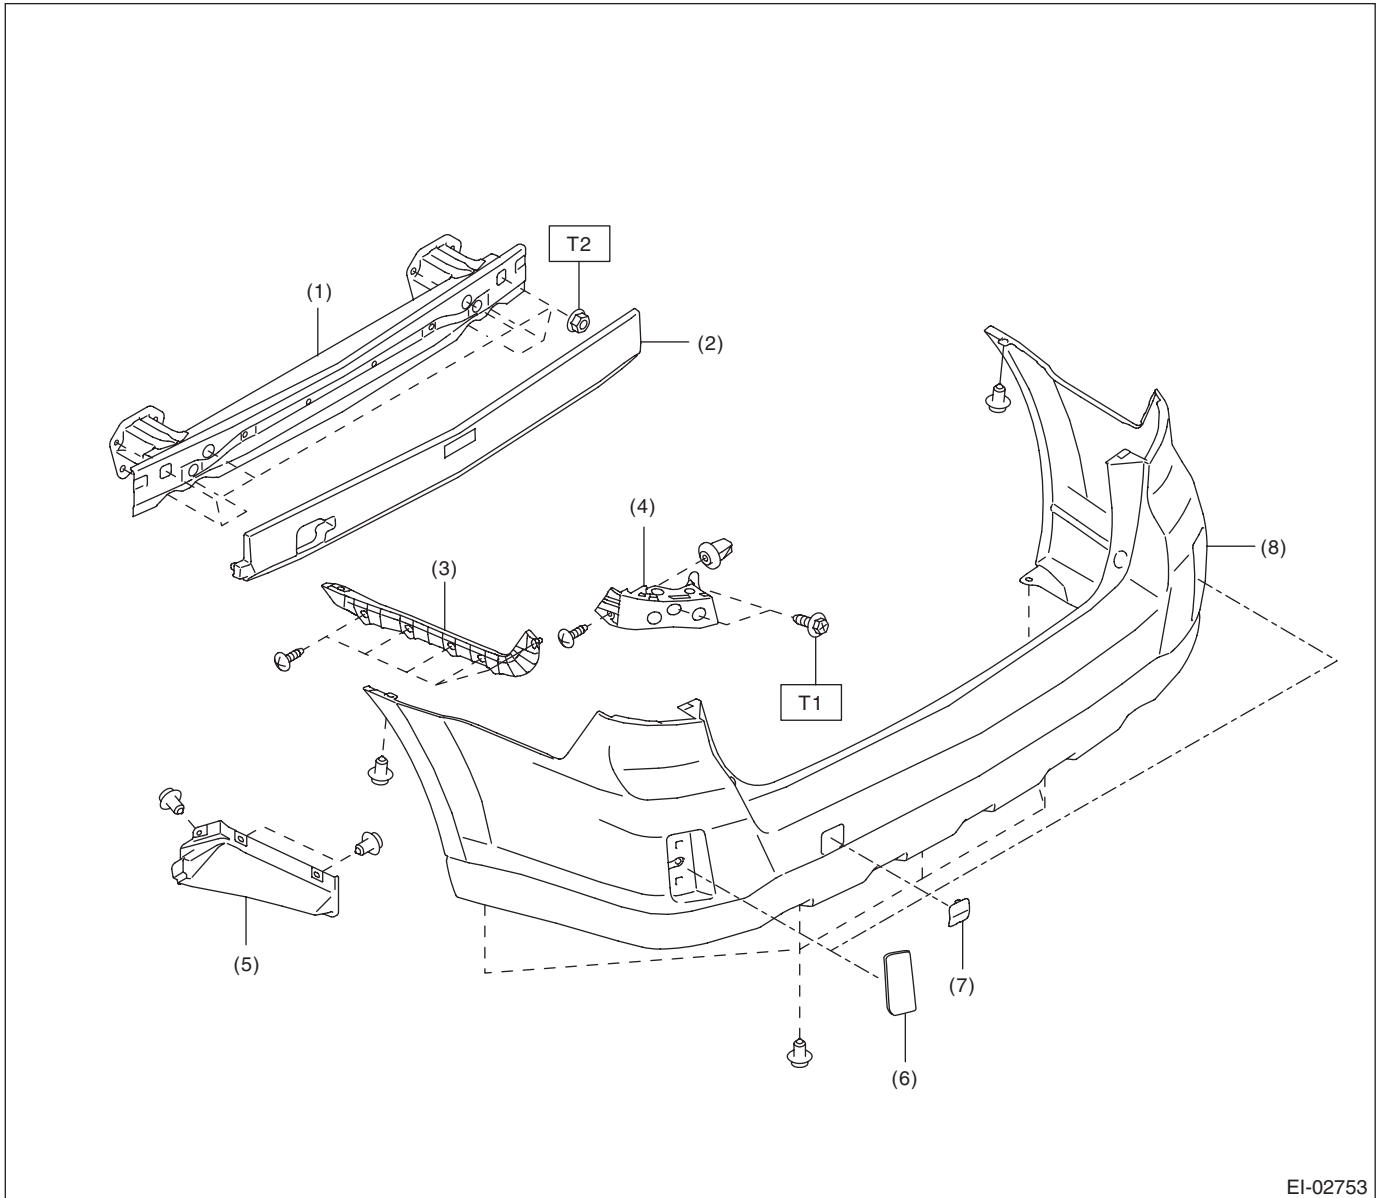


- | | |
|-------------------------------|---------------------------|
| (1) Beam COMPL rear | (5) Bracket side rear LWR |
| (2) Energy absorber foam rear | (6) Reflex reflector |
| (3) Bracket side rear UPR | (7) Rear hook cover |
| (4) Bracket corner rear | (8) Rear bumper face |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.5)

T2: 45 (4.59, 33.2)


6. MUD GUARD

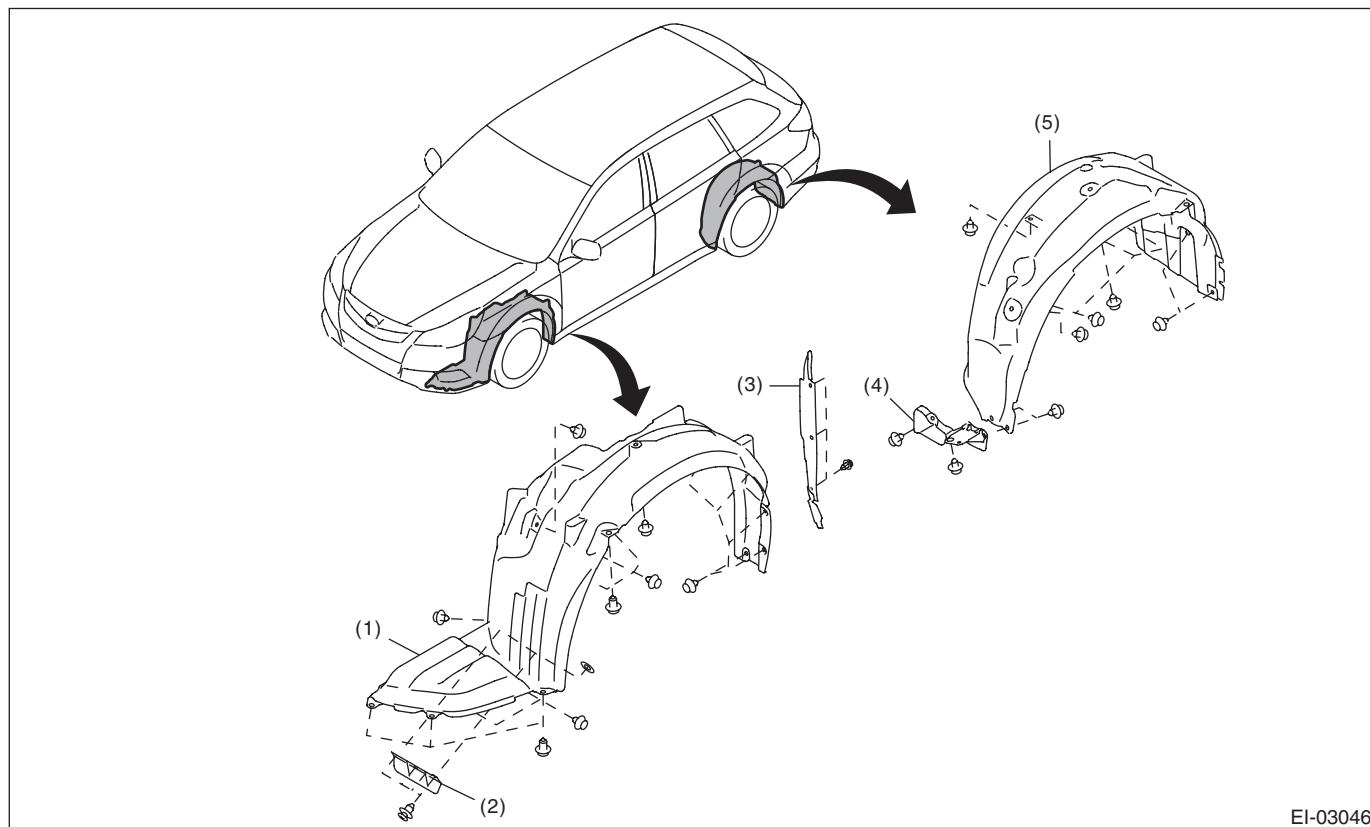

EI-03046

- | | | |
|--------------------------|-------------------------|--------------------|
| (1) Front mud guard | (3) Fender cover lower | (5) Rear mud guard |
| (2) Front air flap plate | (4) Rear air flap plate | |

7. COWL PANEL

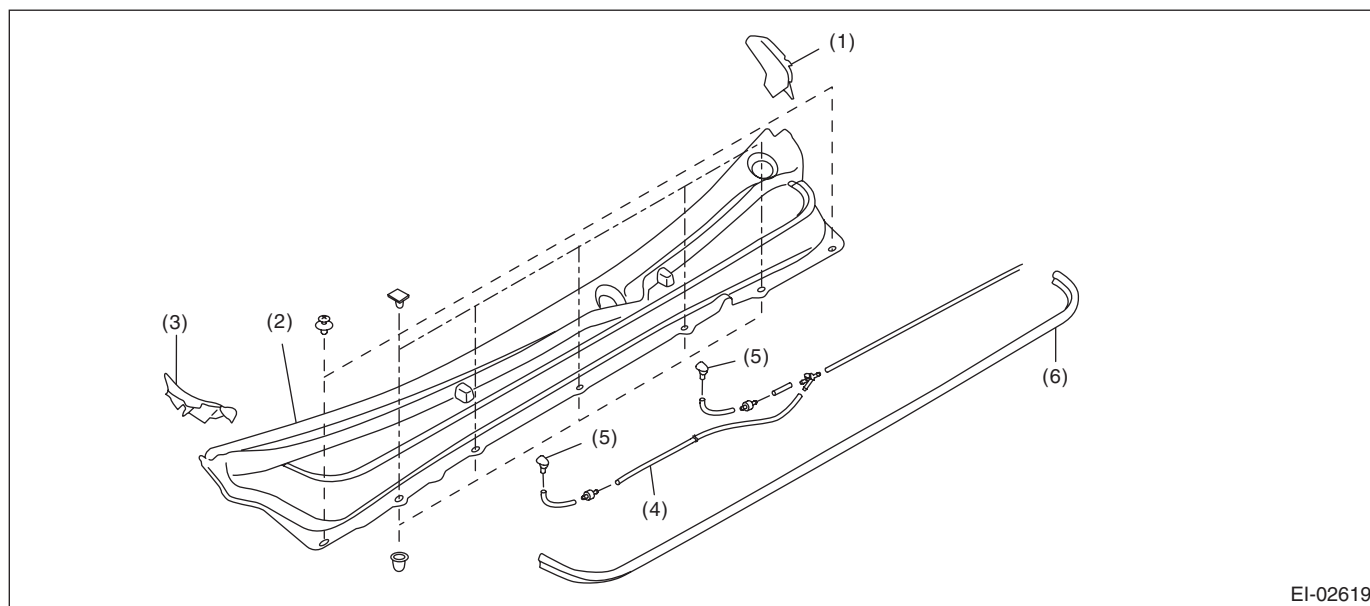



EI-02619

- | | | |
|------------------------|------------------------|---------------------|
| (1) Cowl panel side LH | (3) Cowl panel side RH | (5) Washer nozzle |
| (2) Cowl panel | (4) Washer hose | (6) Cowl panel seal |

General Description


EXTERIOR/INTERIOR TRIM

8. SIDE SILL SPOILER

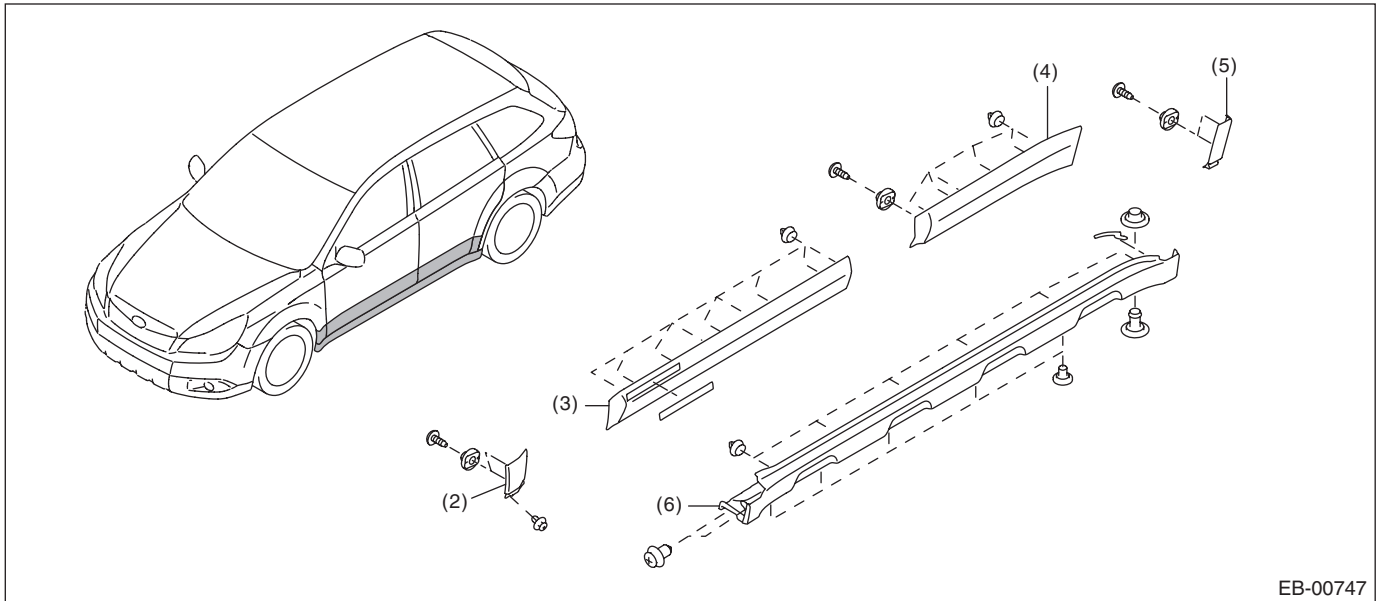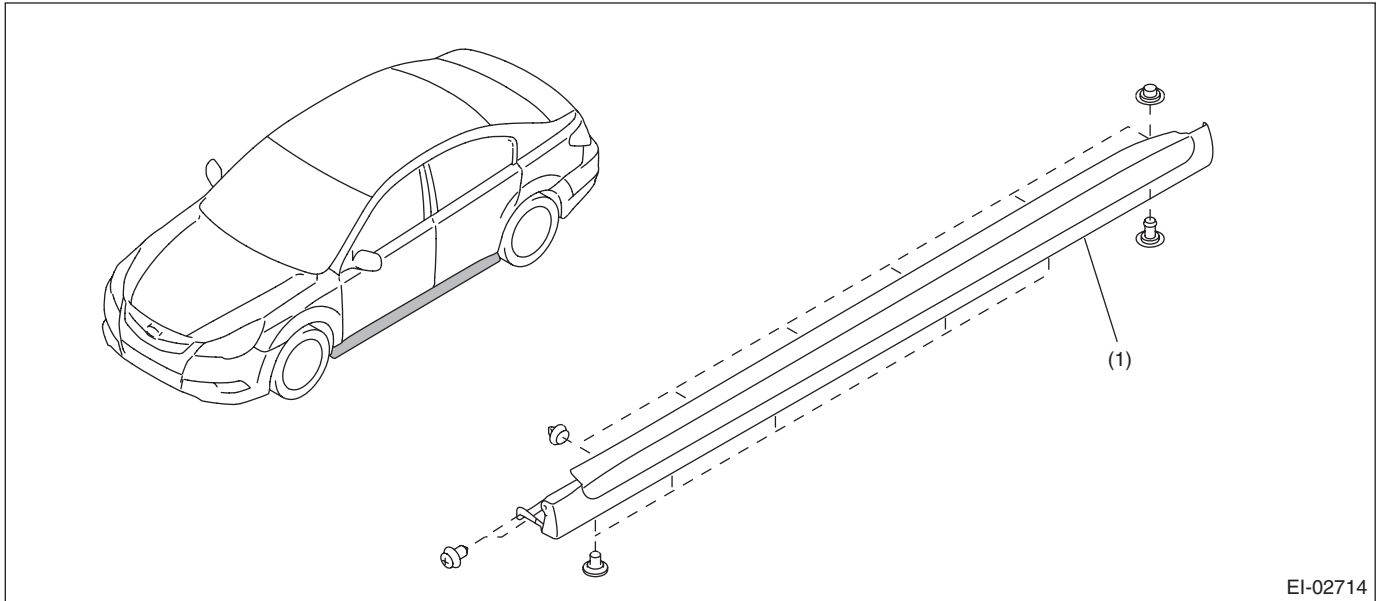

- | | | |
|--|--|--|
| (1) Side spoiler ASSY (Sedan model) | (3) Garnish ASSY front door (OUT-BACK model) | (5) Garnish ASSY rear quarter (OUT-BACK model) |
| (2) Garnish ASSY front fender (OUT-BACK model) | (4) Garnish ASSY rear door (OUT-BACK model) | (6) Side sill garnish ASSY (OUT-BACK model) |


9. ROOF MOLDING

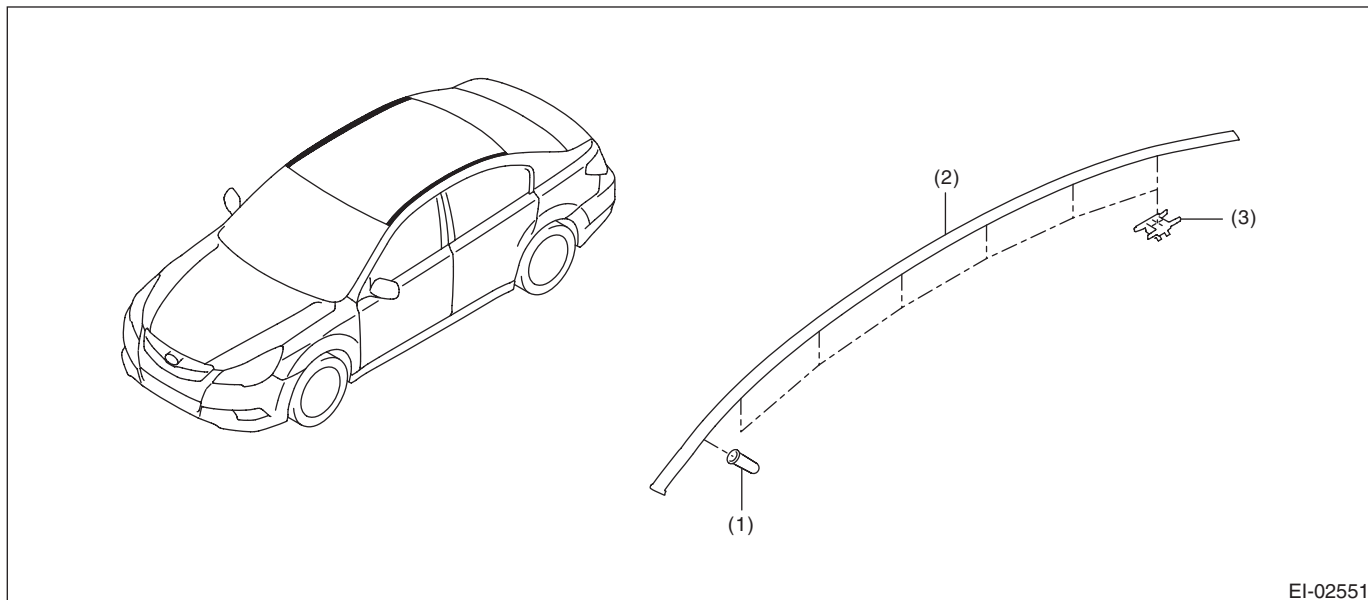

EI-02551

- (1) Rivet
- (2) Roof molding
- (3) Clip

10. ROOF RAIL

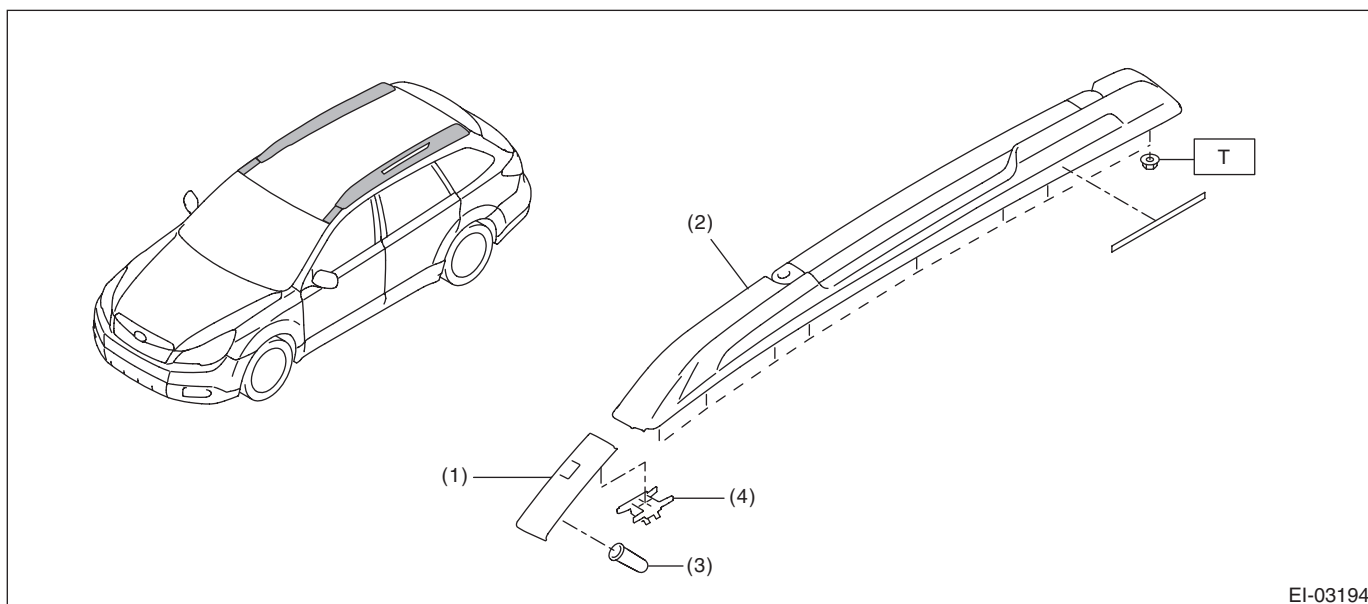

EI-03194


- (1) Roof molding
- (2) Roof rail ASSY
- (3) Rivet
- (4) Clip

Tightening torque: N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.5)

General Description

EXTERIOR/INTERIOR TRIM

11. TRUNK LID GARNISH

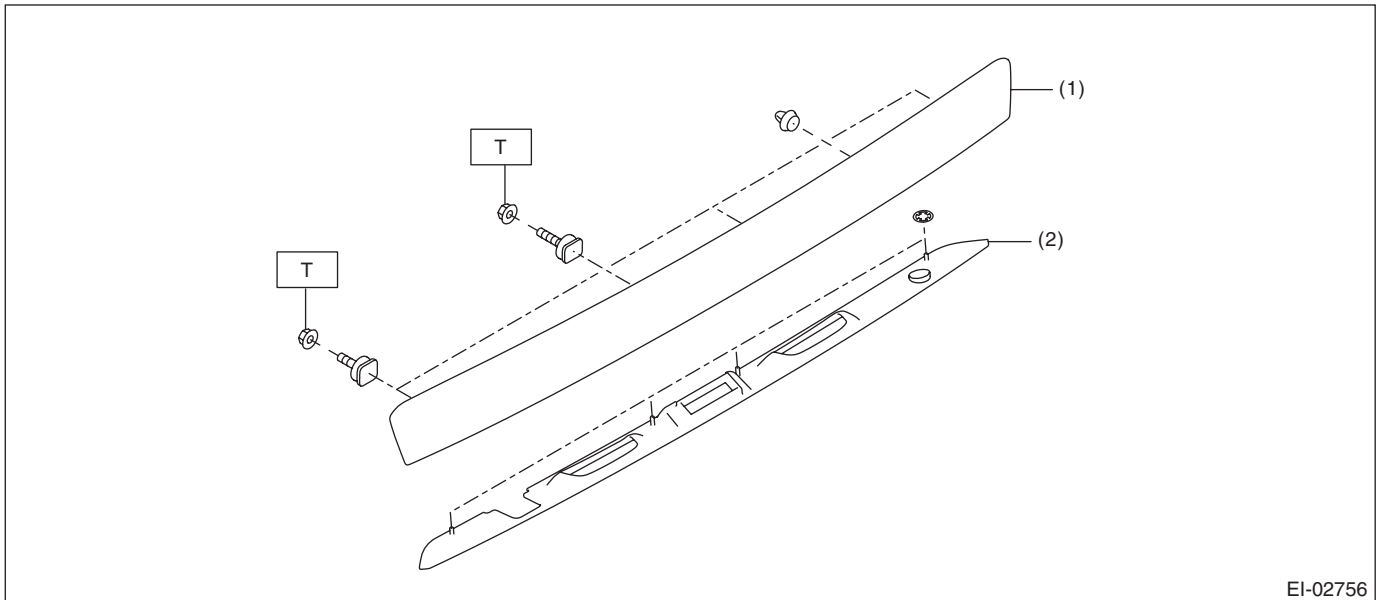


EI-02756

- (1) Trunk lid garnish
- (2) Undercover-trunk lid garnish

Tightening torque: N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)

12. REAR GATE GARNISH

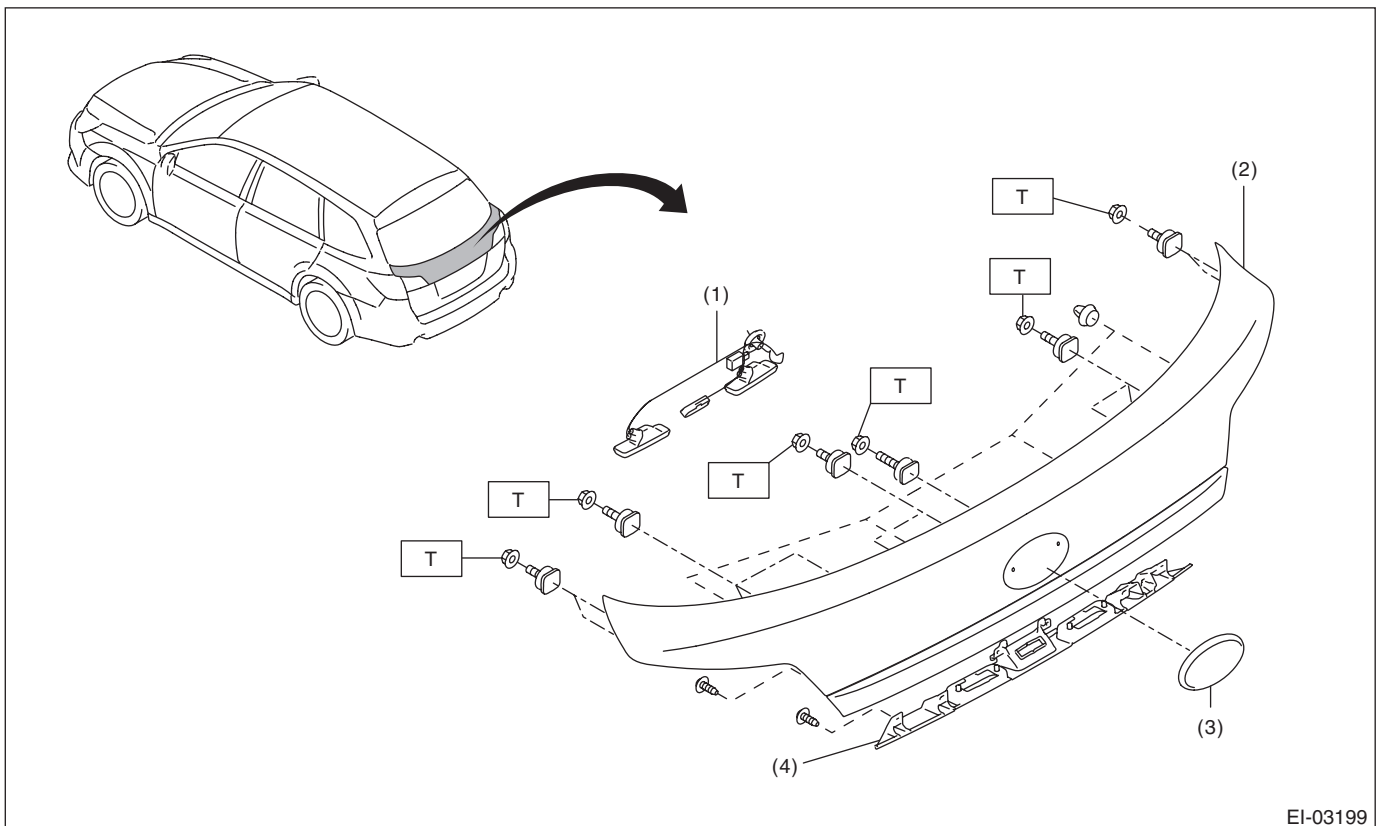


EI-03199

- (1) License light ASSY and rear gate opener ASSY harness.
- (2) Rear gate garnish
- (3) Ornament
- (4) Garnish LWR

Tightening torque: N·m (kgf-m, ft-lb)

T: 4.5 (0.46, 3.3)


13.DOOR TRIM

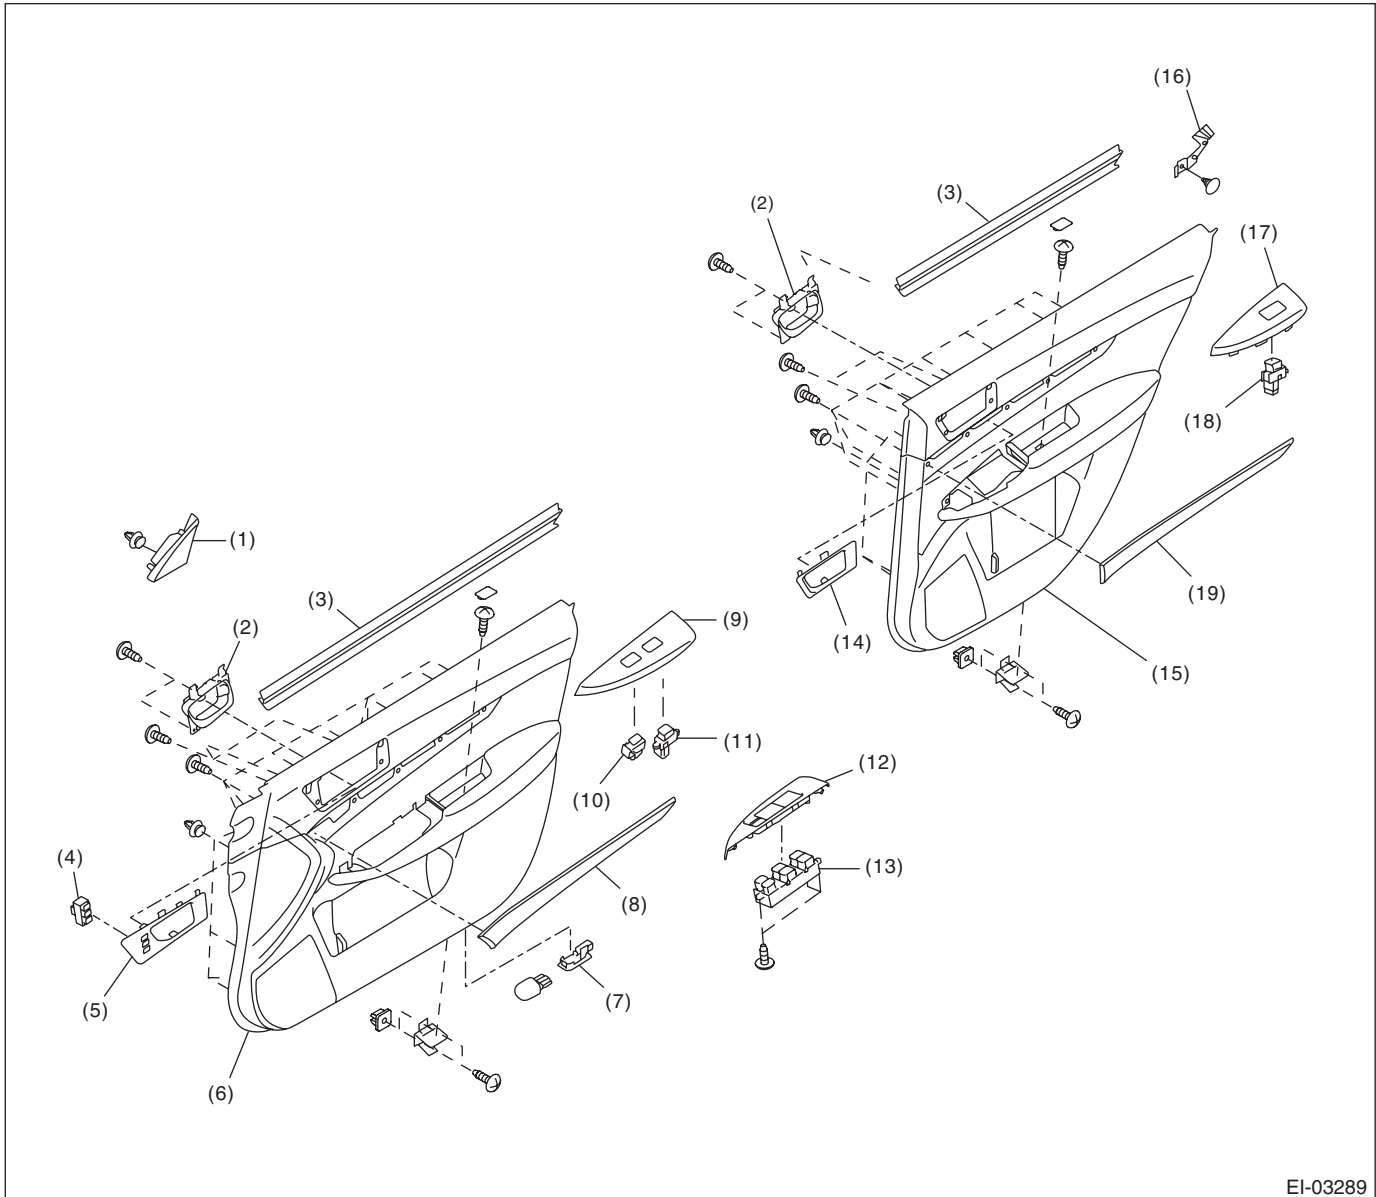

EI-03289

- | | | |
|--|---|--|
| (1) Gusset cover front | (8) Front door ornament panel | (15) Rear door trim |
| (2) Inner remote ASSY | (9) Power window switch panel front RH | (16) Rear door cover upper |
| (3) Weather strip inner | (10) Door lock switch ASSY | (17) Power window switch panel rear |
| (4) Power seat memory switch ASSY (only for seat with memory function) | (11) Power window sub-switch ASSY front | (18) Power window sub-switch ASSY rear |
| (5) Front door inner remote cover | (12) Power window switch panel front LH | (19) Rear door ornament panel |
| (6) Front door trim ASSY | (13) Power window main switch ASSY | |
| (7) Door step light | (14) Rear door inner remote cover | |

- Tightening torque: N·m (kgf-m, ft-lb)**
T: 6.5 (0.66, 4.8)

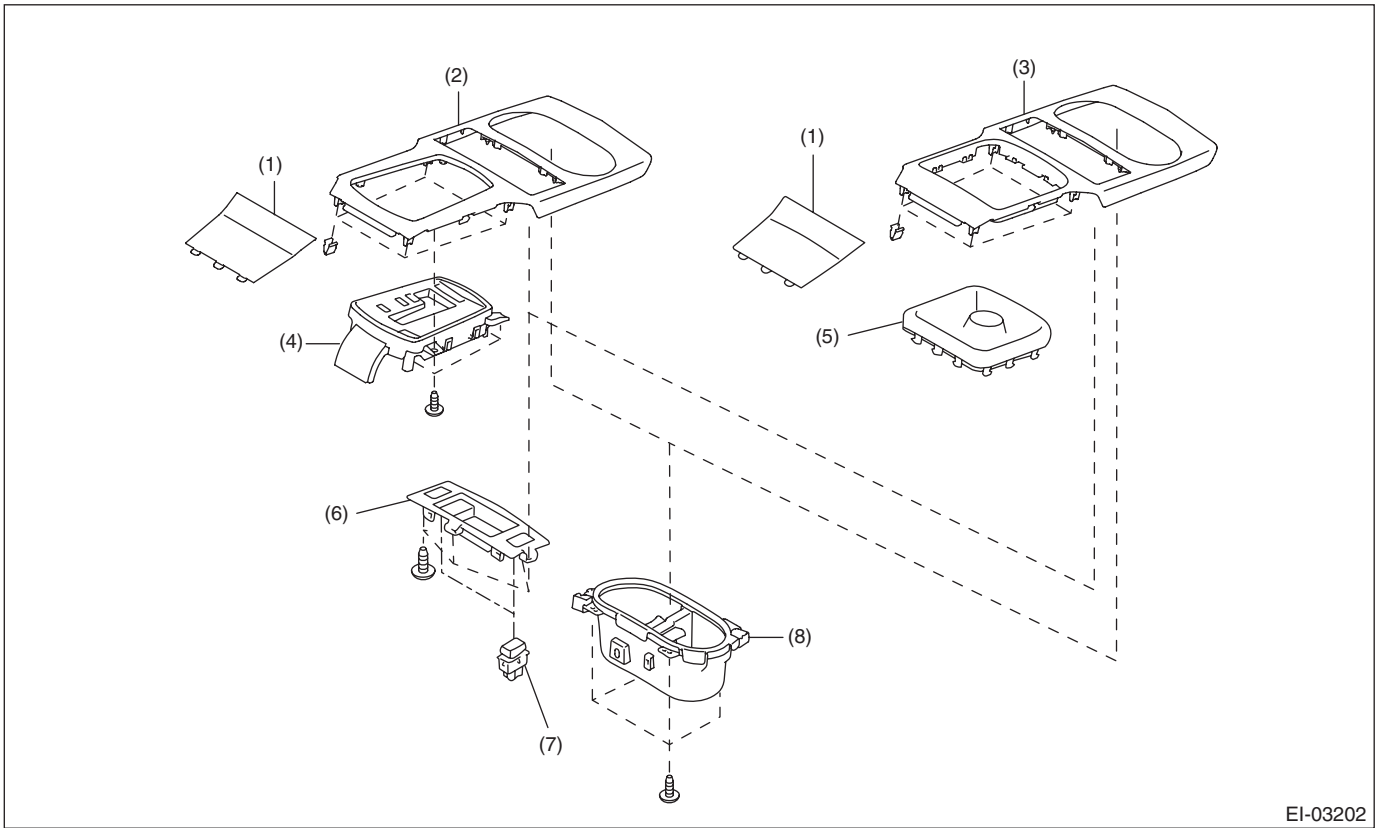


EI-03202

- | | | |
|-----------------------|---------------------------|------------------------|
| (1) Center pocket mat | (4) Indicator ASSY AT | (7) Seat heater switch |
| (2) Front cover AT | (5) Shift boot (MT model) | (8) Cup holder ASSY |
| (3) Front cover MT | (6) Switch case | |

General Description


EXTERIOR/INTERIOR TRIM

15.INSTRUMENT PANEL

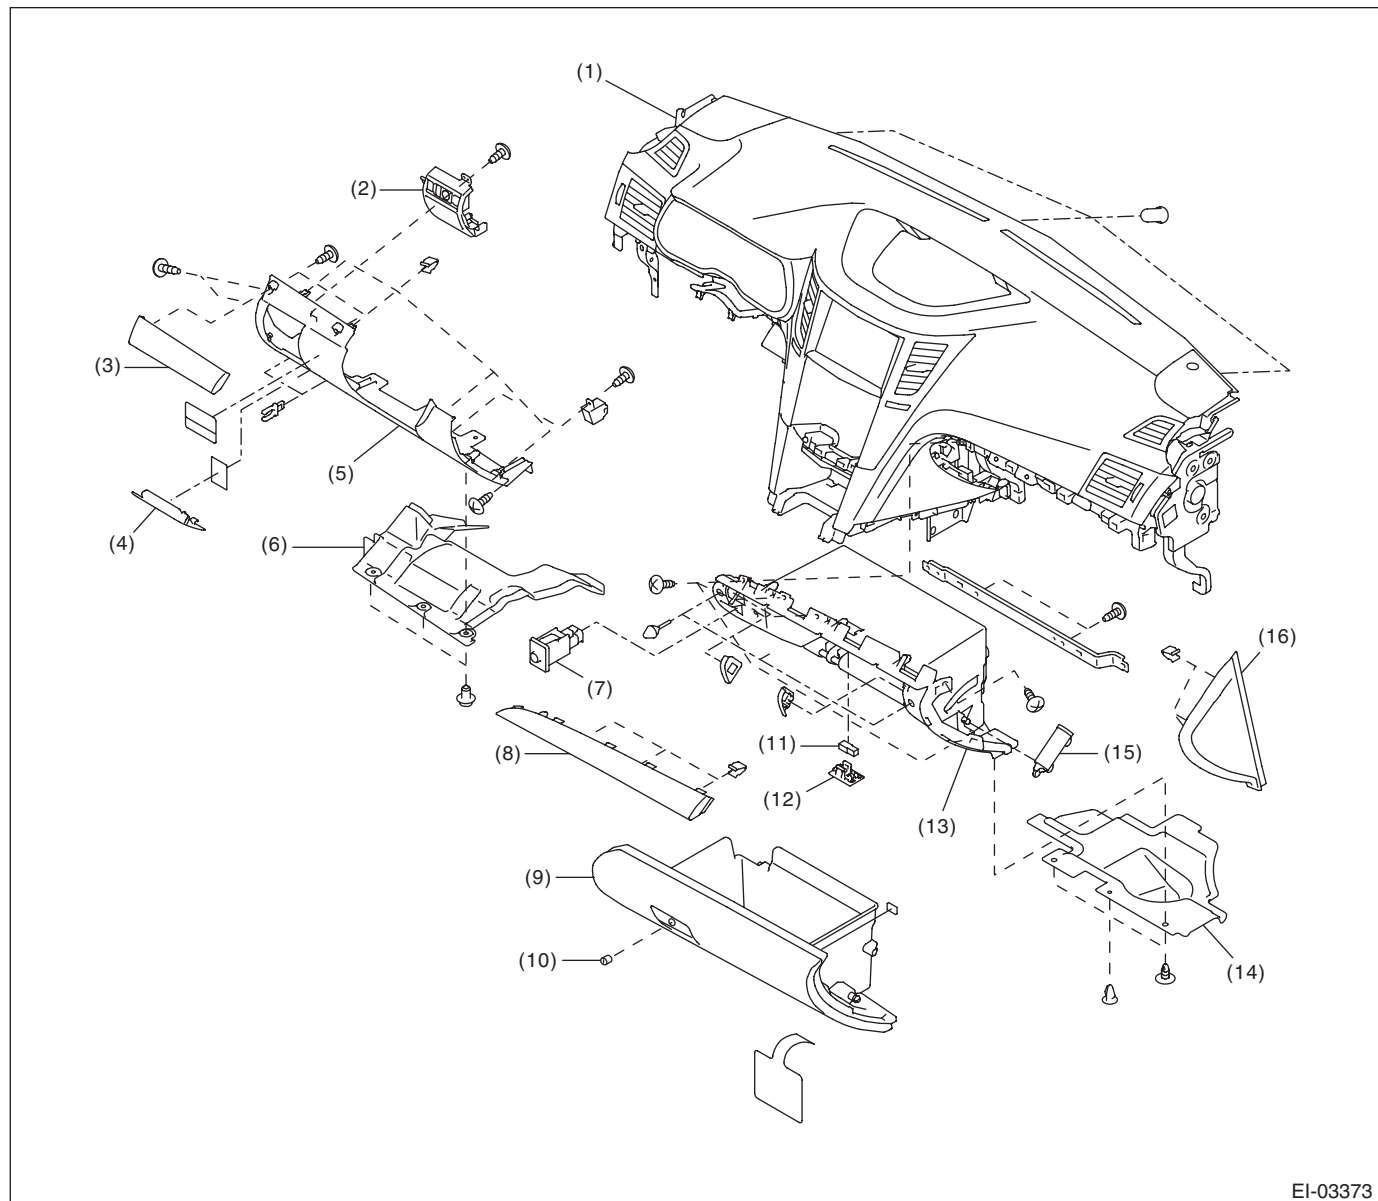

EI-03373

- | | | |
|--|--------------------------------|----------------------------------|
| (1) Instrument panel ASSY | (7) Trunk opener cancel button | (12) Illumination bracket |
| (2) Switch panel ASSY | (8) Ornament panel ASSY P | (13) Glove box back panel |
| (3) Ornament panel ASSY D OUT | (9) Glove box lid ASSY | (14) Glove box under cover |
| (4) Fuse lid | (10) Key cylinder - glove box | (15) Glove box damper |
| (5) Instrument panel lower cover | (11) Illumination LED ASSY | (16) Instrument panel side cover |
| (6) Instrument panel lower cover under | | |

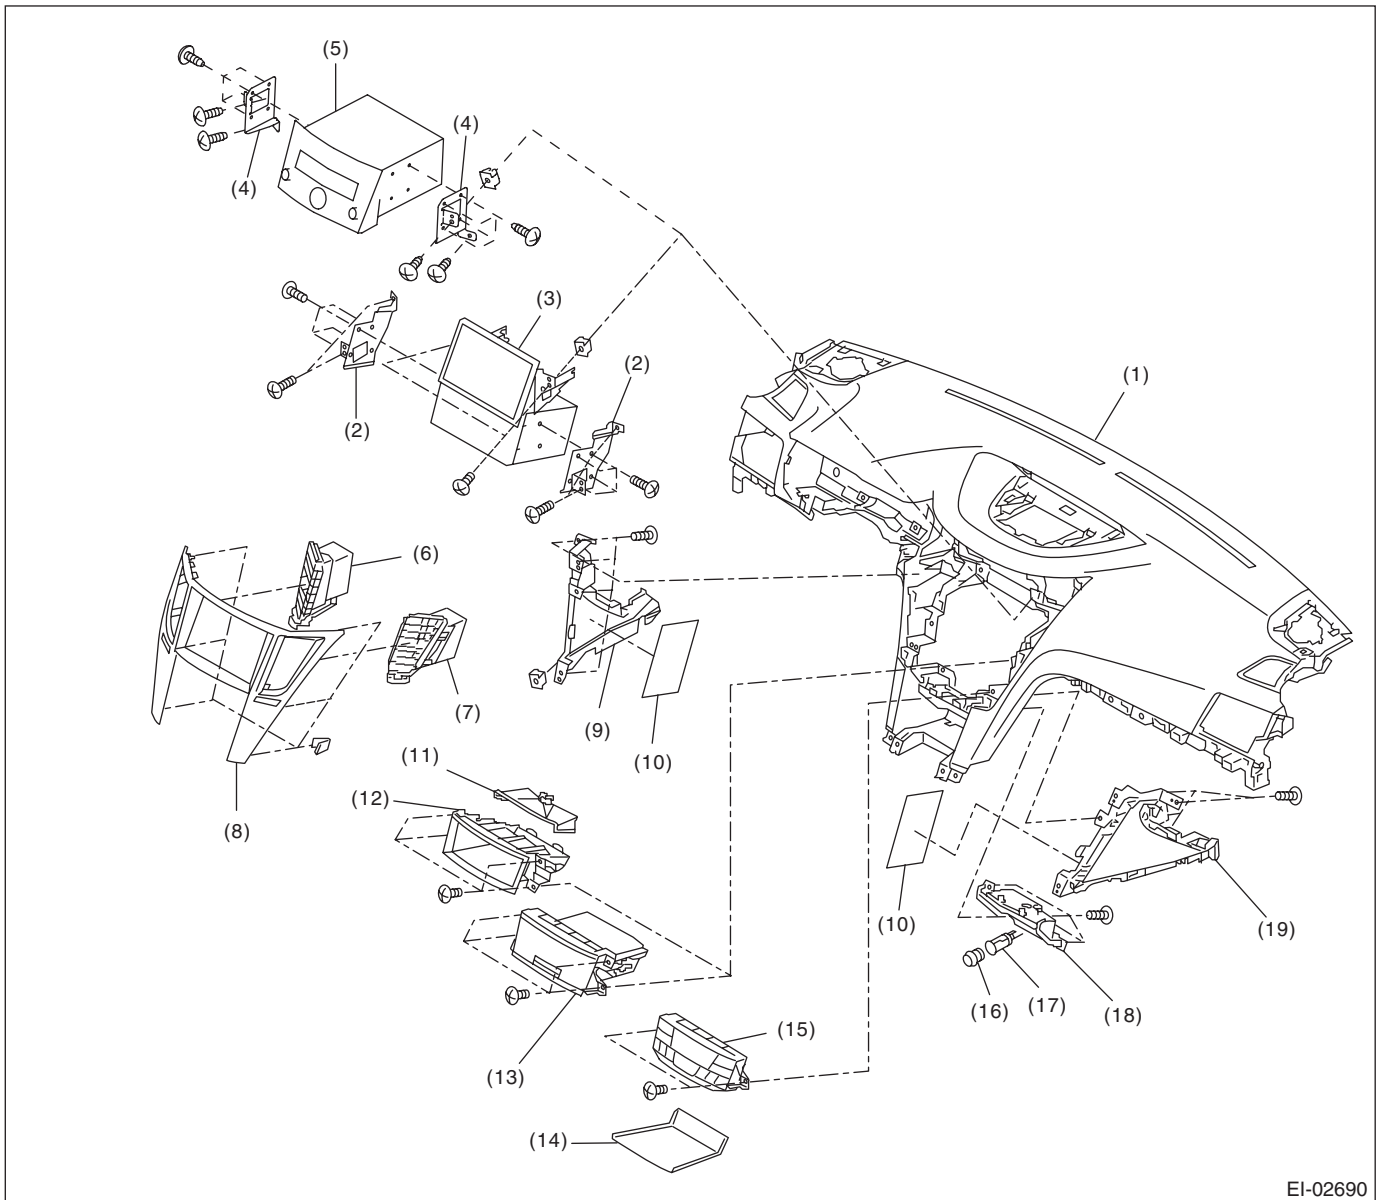


EI-02690

- | | | |
|---|--------------------------------|-------------------------------|
| (1) Instrument panel pad and frame ASSY | (8) Center panel ASSY | (15) Control panel ASSY |
| (2) Navigation bracket | (9) Center cover side RH | (16) Plug |
| (3) Navigation ASSY | (10) Insulator | (17) Accessory socket ASSY |
| (4) Audio bracket | (11) Pocket center light | (18) Center pocket back panel |
| (5) Audio ASSY | (12) Pocket ASSY (without lid) | (19) Center cover side LH |
| (6) Center grille ASSY LH | (13) Pocket ASSY (with lid) | |
| (7) Center grille ASSY RH | (14) Center pocket mat | |


General Description

EXTERIOR/INTERIOR TRIM

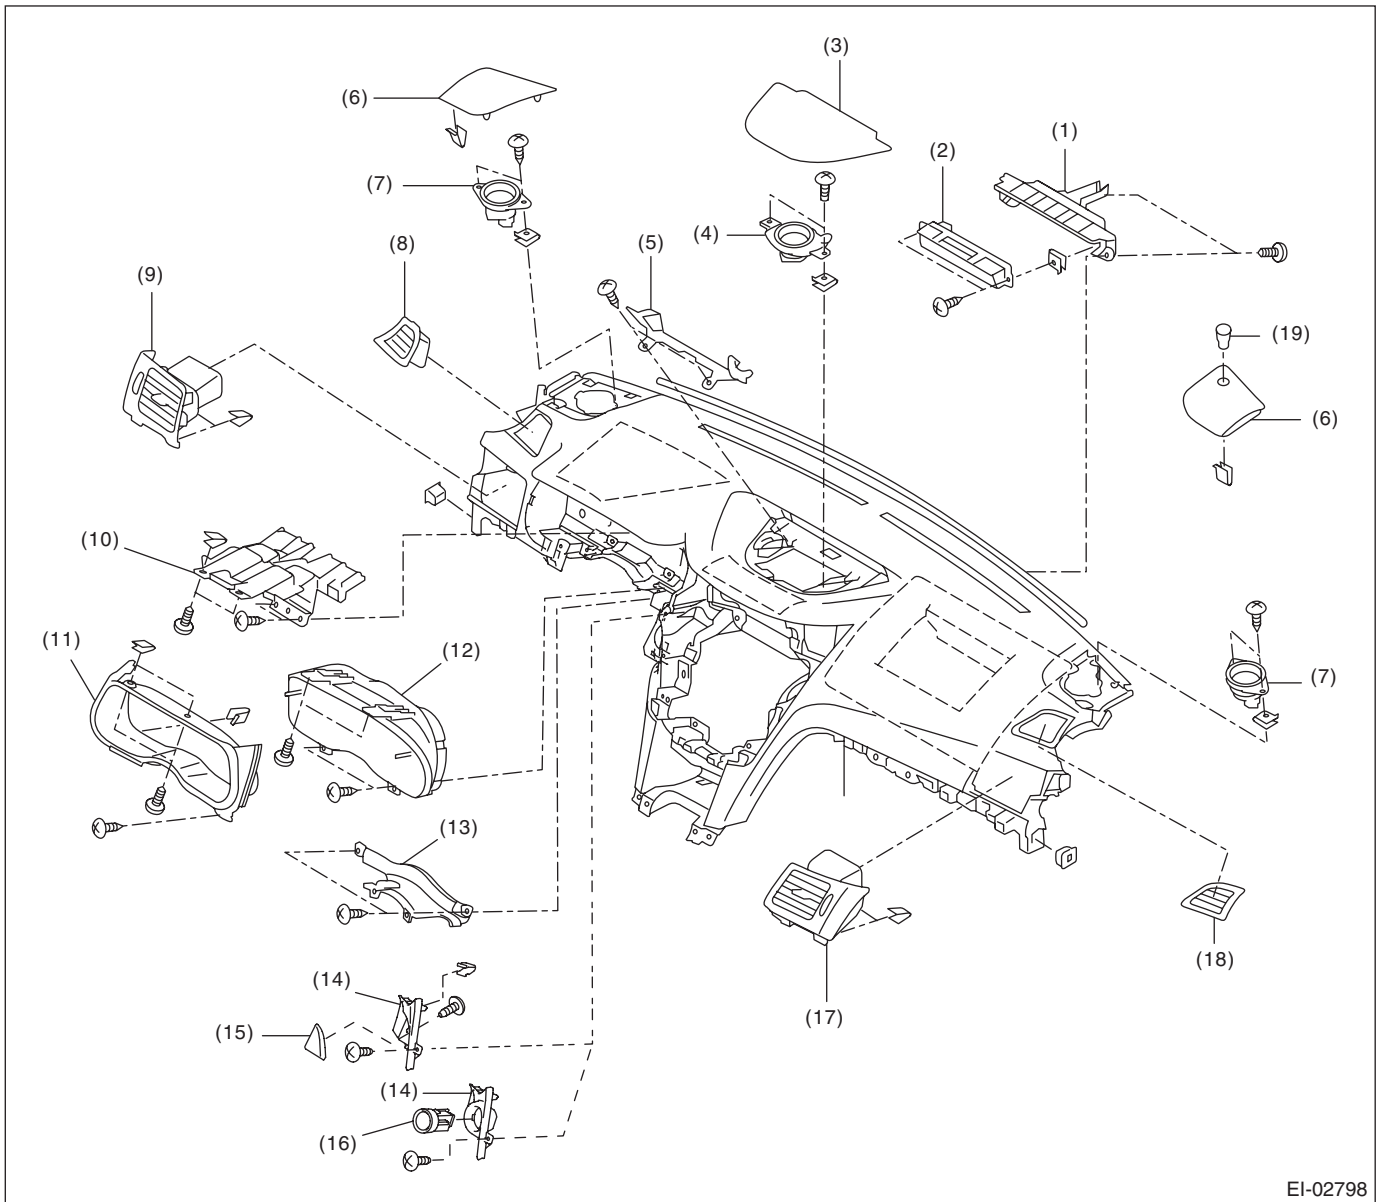

EI-02798

- | | | |
|-----------------------------|--------------------------------|---|
| (1) Multi display panel UPR | (8) Defroster side grille RH | (15) Ornament panel ASSY D INN |
| (2) Multi display ASSY | (9) Side vent grille ASSY RH | (16) Starter switch ASSY (with push button start) |
| (3) Center speaker cover | (10) Meter reinforcement panel | (17) Side vent grille ASSY LH |
| (4) Center speaker ASSY | (11) Meter visor ASSY | (18) Defroster side grille LH |
| (5) Multi display panel LWR | (12) Combination meter ASSY | (19) Sunload sensor |
| (6) Side speaker cover | (13) Steering upper cover | |
| (7) Front side speaker ASSY | (14) Starter switch cover | |

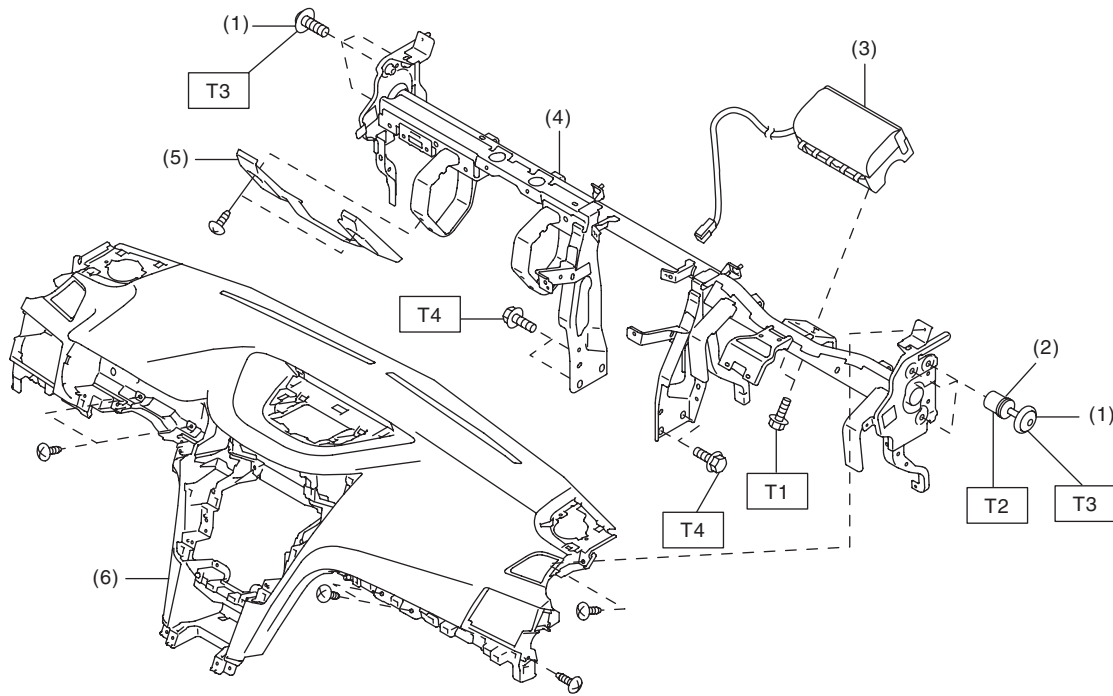

EI-02692

- | | |
|------------------------------------|---|
| (1) TORX® bolt | (4) Steering support beam ASSY |
| (2) Adjuster bolt | (5) Knee guard panel COMPL |
| (3) Passenger's airbag module ASSY | (6) Instrument panel pad and frame ASSY |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.5 (0.76, 5.5)


T2: 3 (0.31, 2.2)

T3: 18 (1.84, 13.3)

T4: 25 (2.55, 18.4)

General Description

EXTERIOR/INTERIOR TRIM

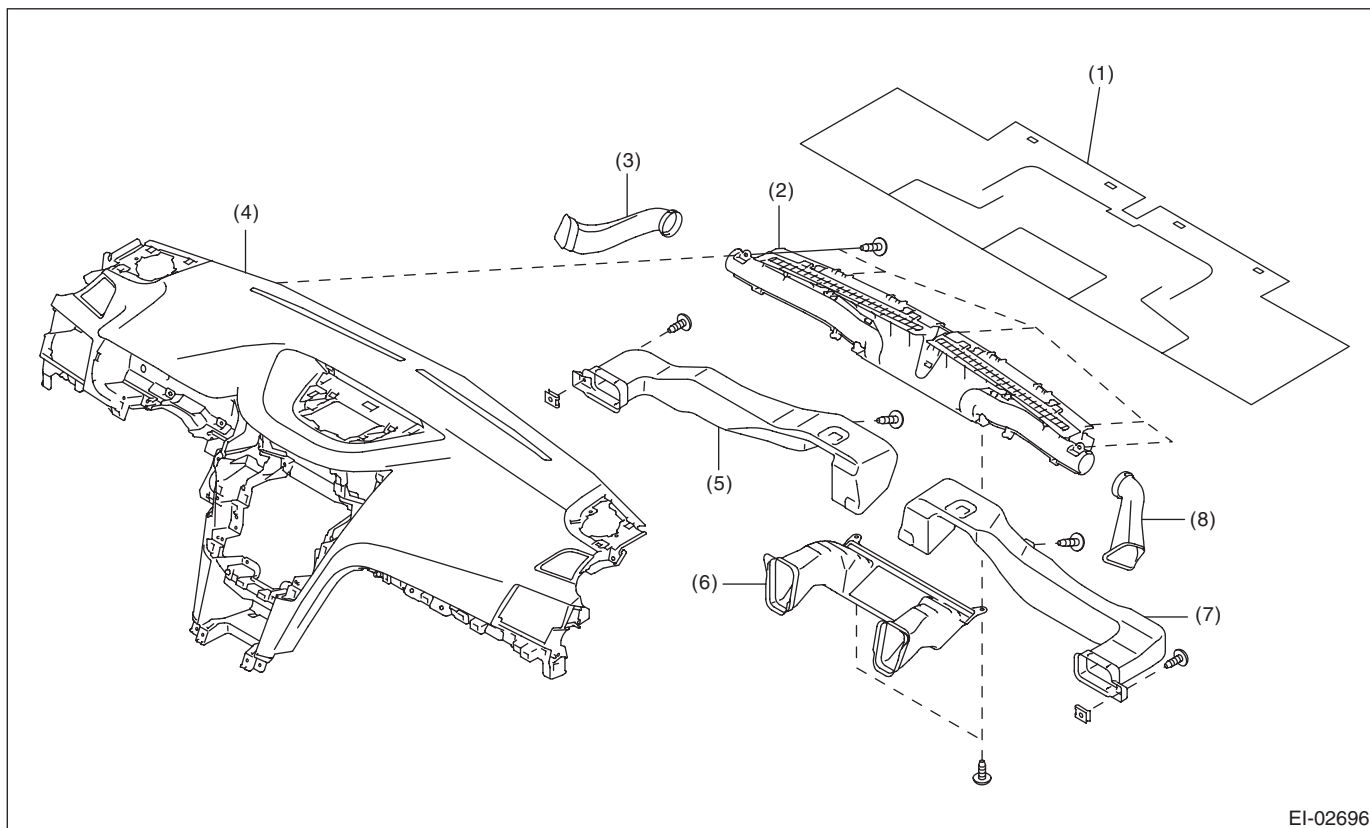


EI-02696

- | | | |
|---------------------------------|---|----------------------------|
| (1) Insulator | (4) Instrument panel pad and frame ASSY | (7) Side vent duct RH |
| (2) Front defroster nozzle ASSY | (5) Side vent duct LH | (8) Side defroster duct LH |
| (3) Side defroster duct RH | (6) Center vent duct | |

16.INNER TRIM

- Sedan model

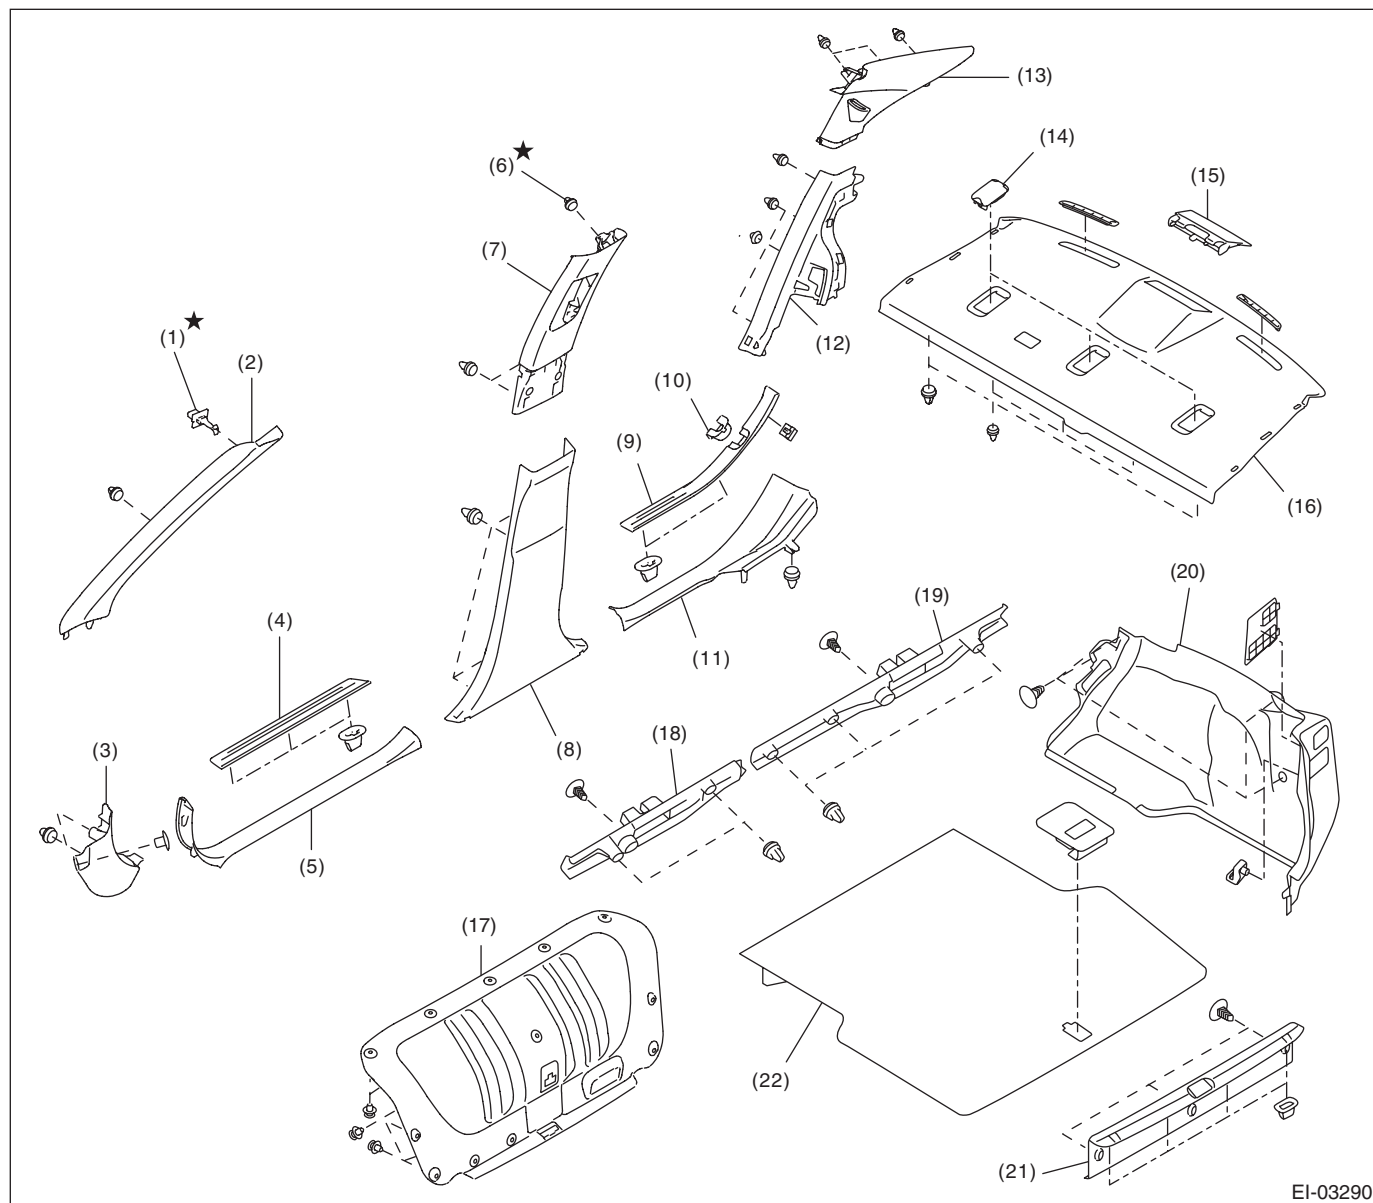


- | | | |
|---------------------------------|-----------------------------------|---------------------------------------|
| (1) Tether clip | (9) Side sill cover - rear OUT | (17) Trunk lid trim |
| (2) Front pillar trim | (10) Catcher cover | (18) Trunk trim panel ASSY - front LH |
| (3) Side sill cover front | (11) Side sill cover - rear INN | (19) Trunk trim panel ASSY - front RH |
| (4) Side sill cover - front OUT | (12) Rear quarter trim LWR | (20) Trunk trim panel ASSY - side |
| (5) Side sill cover - front INN | (13) Rear quarter trim UPR | (21) Trunk trim panel ASSY - rear |
| (6) Clip | (14) Child anchor cap | (22) Trunk mat |
| (7) Center pillar trim UPR | (15) High-mounted stop light ASSY | |
| (8) Center pillar trim LWR | (16) Rear shelf panel | |

General Description

EXTERIOR/INTERIOR TRIM

• OUTBACK model

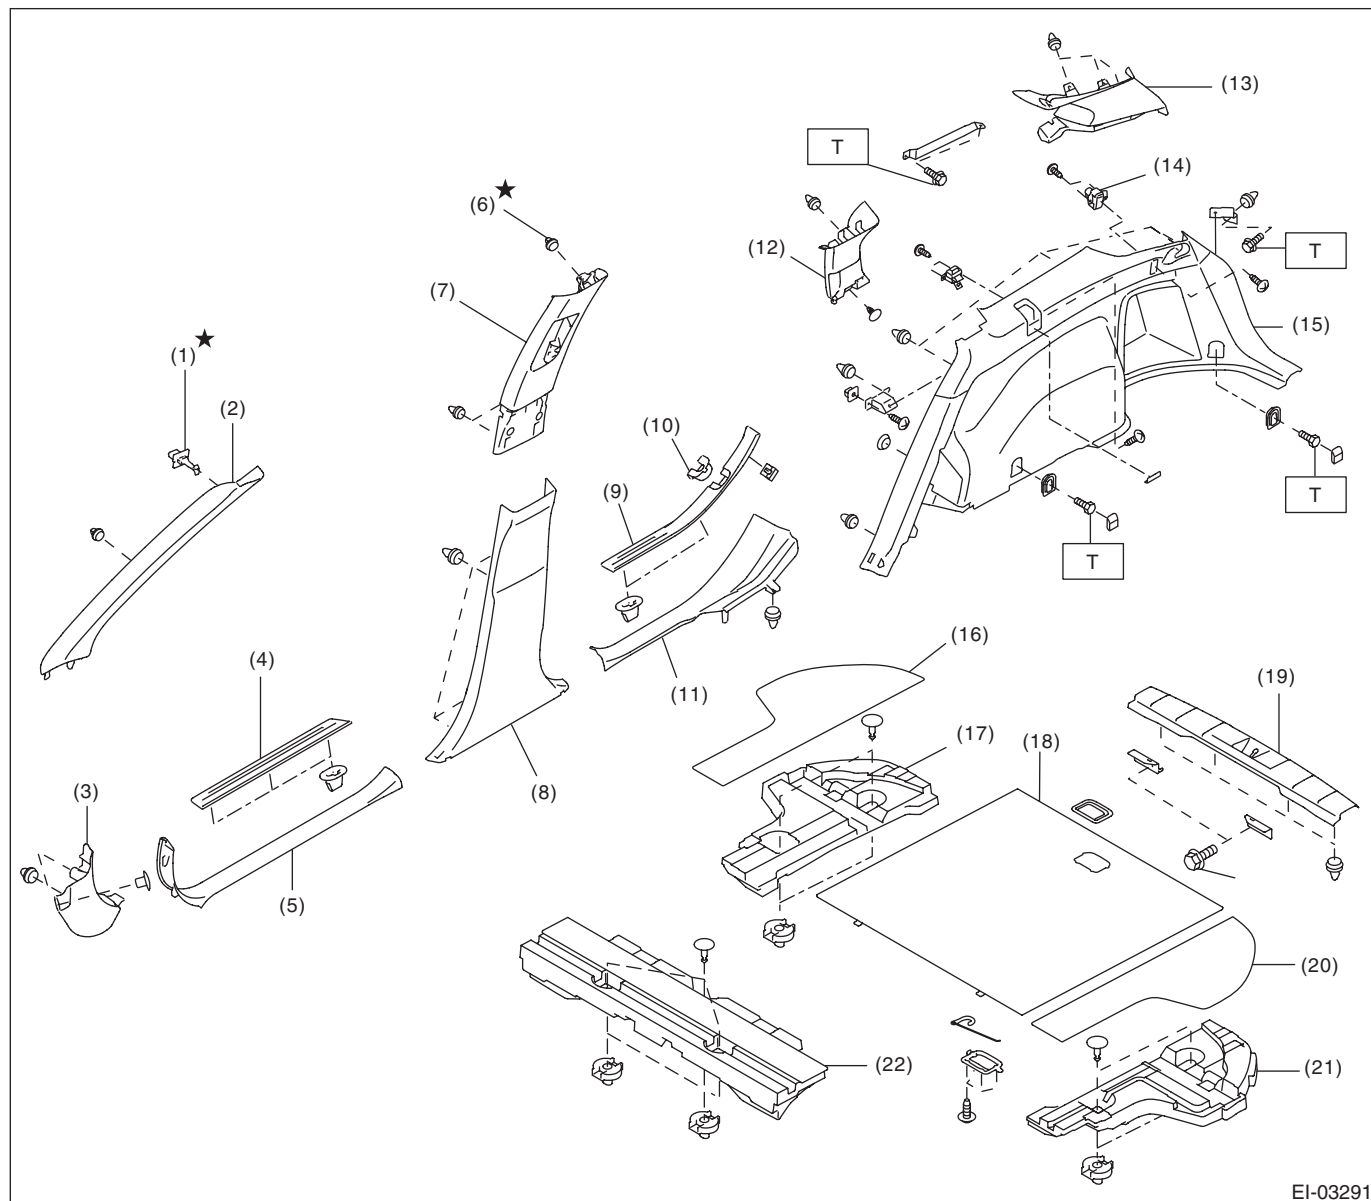

- (1) Tether clip
- (2) Front pillar trim
- (3) Side sill cover front
- (4) Side sill cover - front OUT
- (5) Side sill cover - front INN
- (6) Clip
- (7) Center pillar trim UPR
- (8) Center pillar trim LWR
- (9) Side sill cover - rear OUT


- (10) Catcher cover
- (11) Side sill cover - rear INN
- (12) Rear quarter trim UPR - front
- (13) Rear quarter trim UPR - rear
- (14) Hook
- (15) Rear quarter trim LWR
- (16) Rear floor mat RH
- (17) Rear floor spacer RH
- (18) Rear floor mat CTR

- (19) Rear floor edge cover
- (20) Rear floor mat LH
- (21) Rear floor spacer LH
- (22) Rear floor spacer CTR - front

Tightening torque: N·m (kgf·m, ft·lb)

T: 7.5 (0.76, 5.5)

17.REAR GATE TRIM

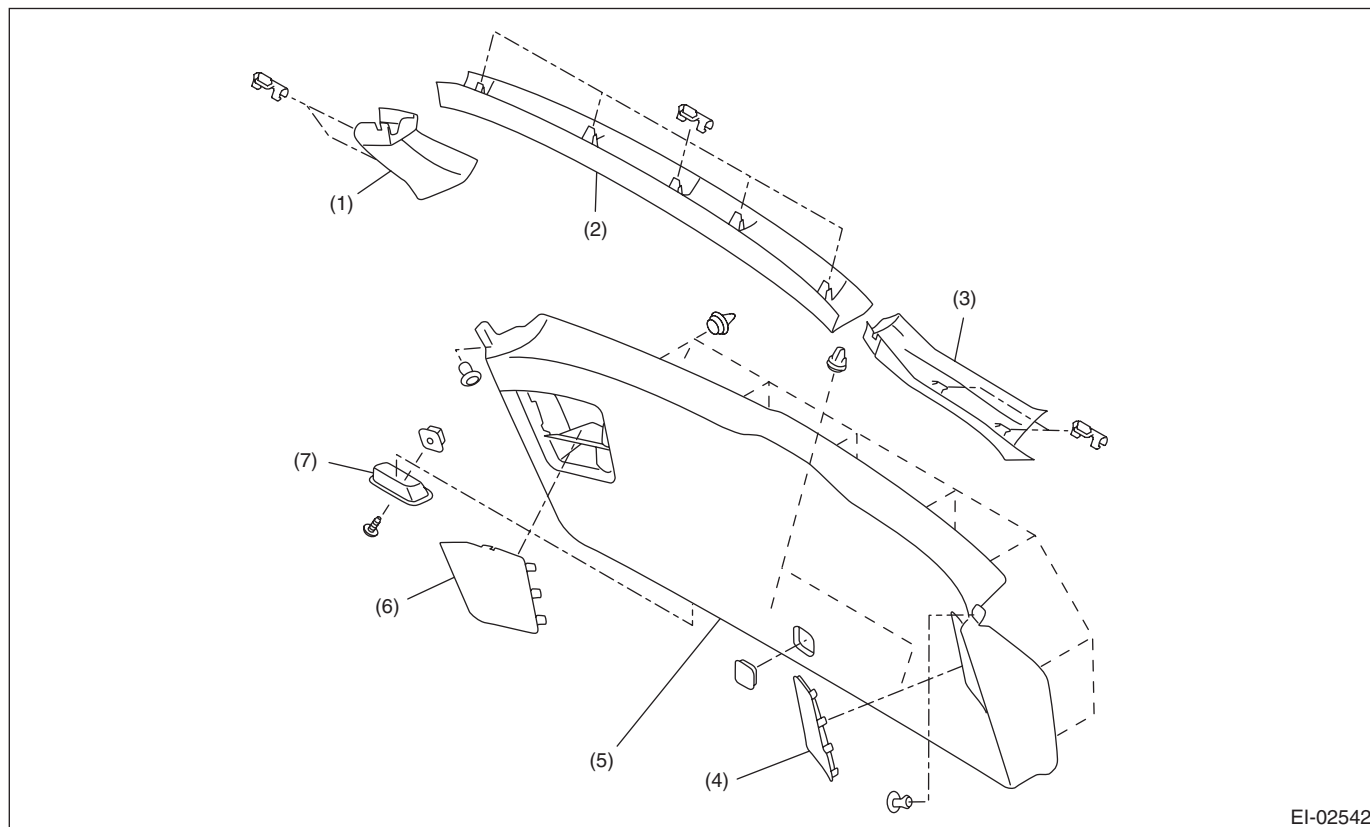


EI-02542

- | | | |
|------------------------------|----------------------------|----------------------|
| (1) Rear gate pillar trim RH | (4) Rear gate lower cap LH | (7) Rear gate handle |
| (2) Rear gate upper trim | (5) Rear gate lower trim | |
| (3) Rear gate pillar trim LH | (6) Rear gate lower cap RH | |


General Description

EXTERIOR/INTERIOR TRIM

18.ROOF TRIM

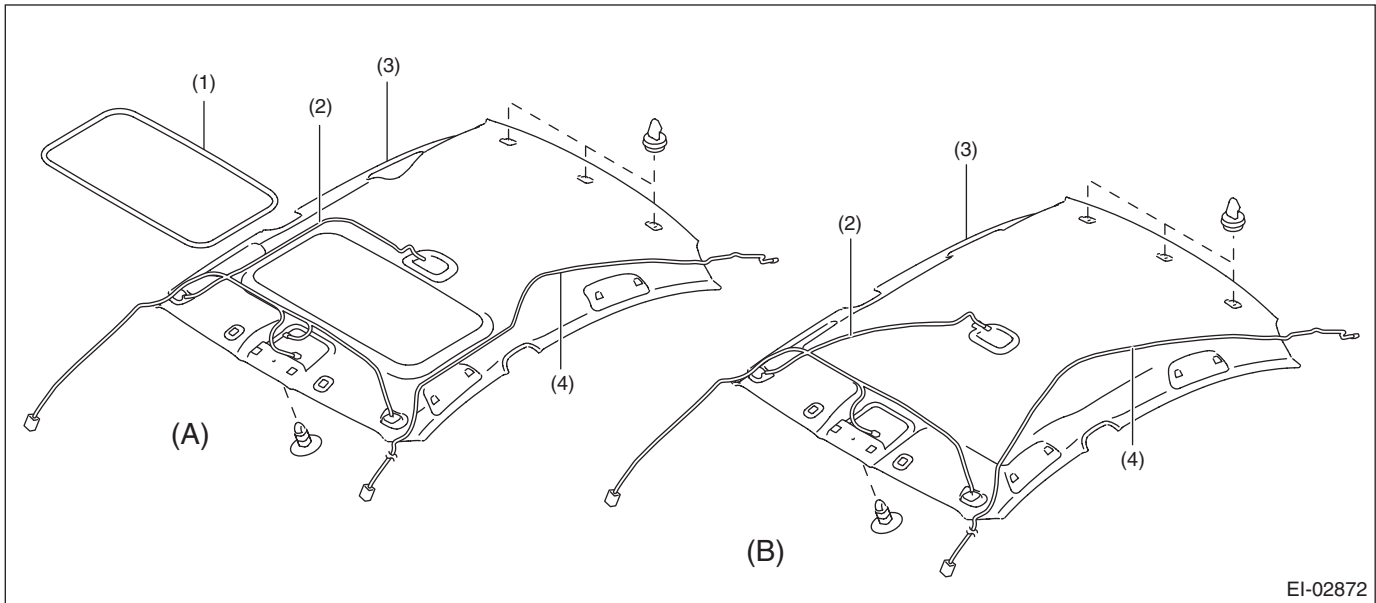

EI-02872

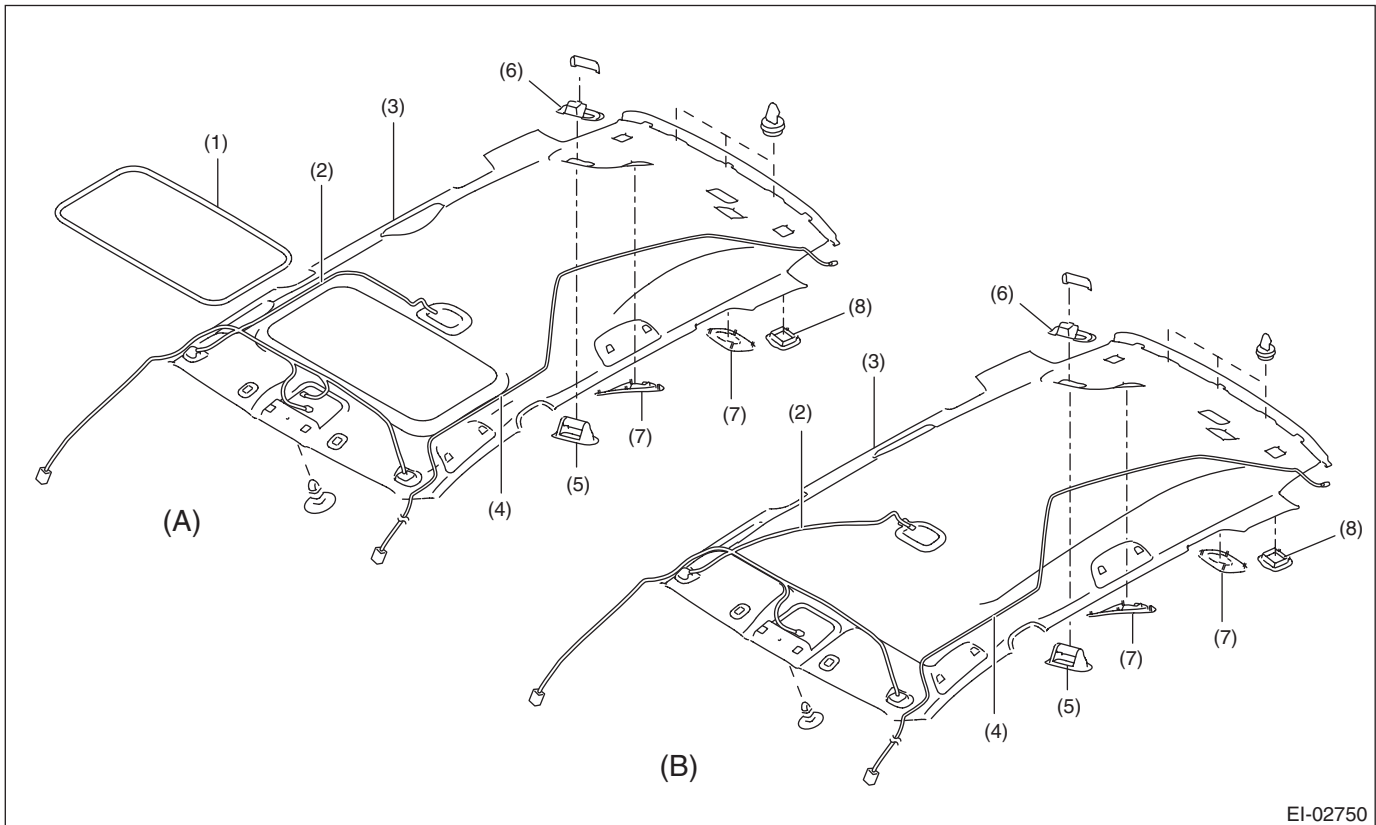

EI-02750

(A) Model with sunroof

(B) Normal roof model

(1) Sun roof garnish

(2) Roof cord ASSY

(3) Roof trim

(4) Feeder cord ASSY


(5) Seat belt holder cover

(6) Seat belt holder base

(7) Speaker cover

(8) Child anchor cover

19.ROOM INNER PARTS

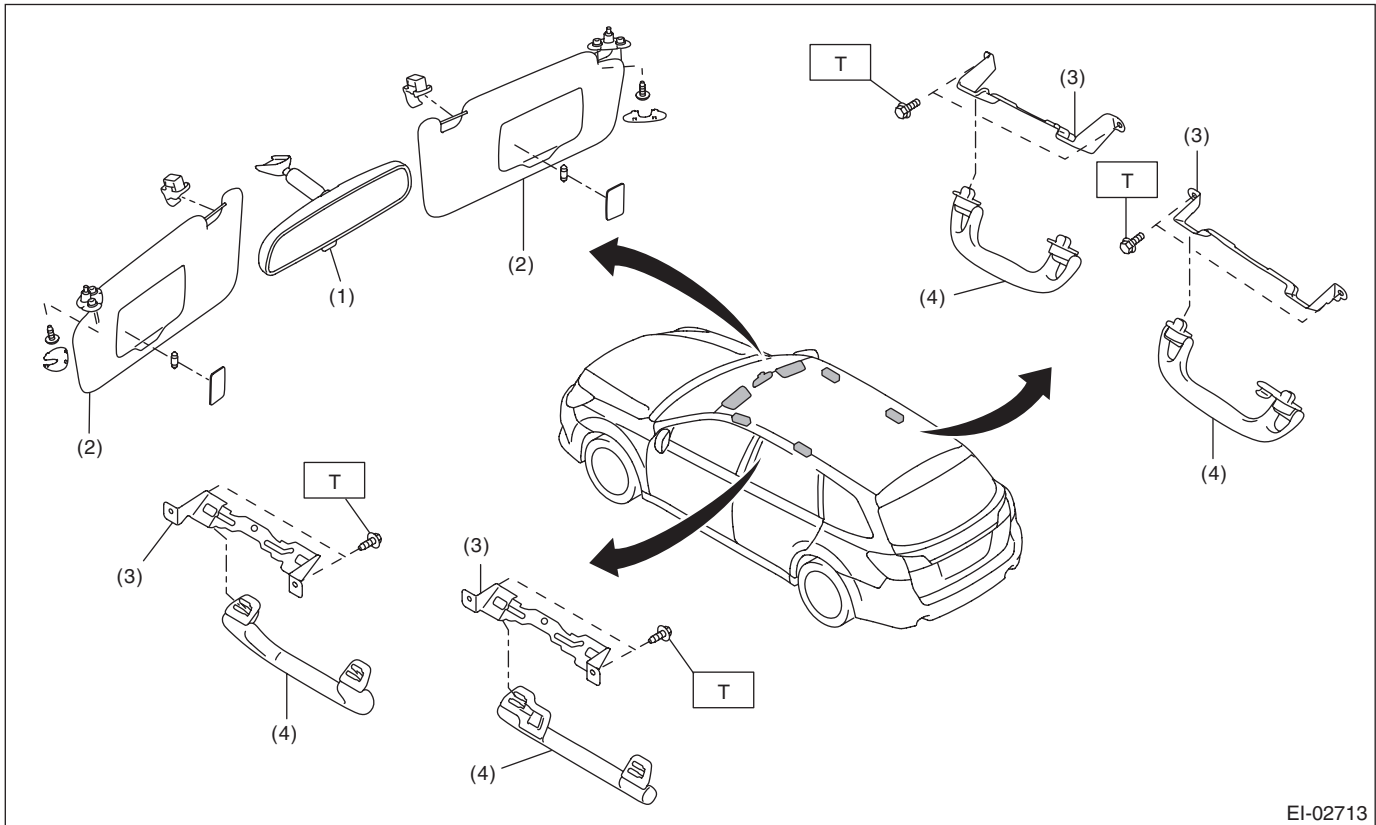


EI-02713

- | | |
|-----------------|-------------------------|
| (1) Room mirror | (3) Assist grip bracket |
| (2) Sun visor | (4) Assist grip |

Tightening torque: N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.5)

20.HEAT SHIELD COVER

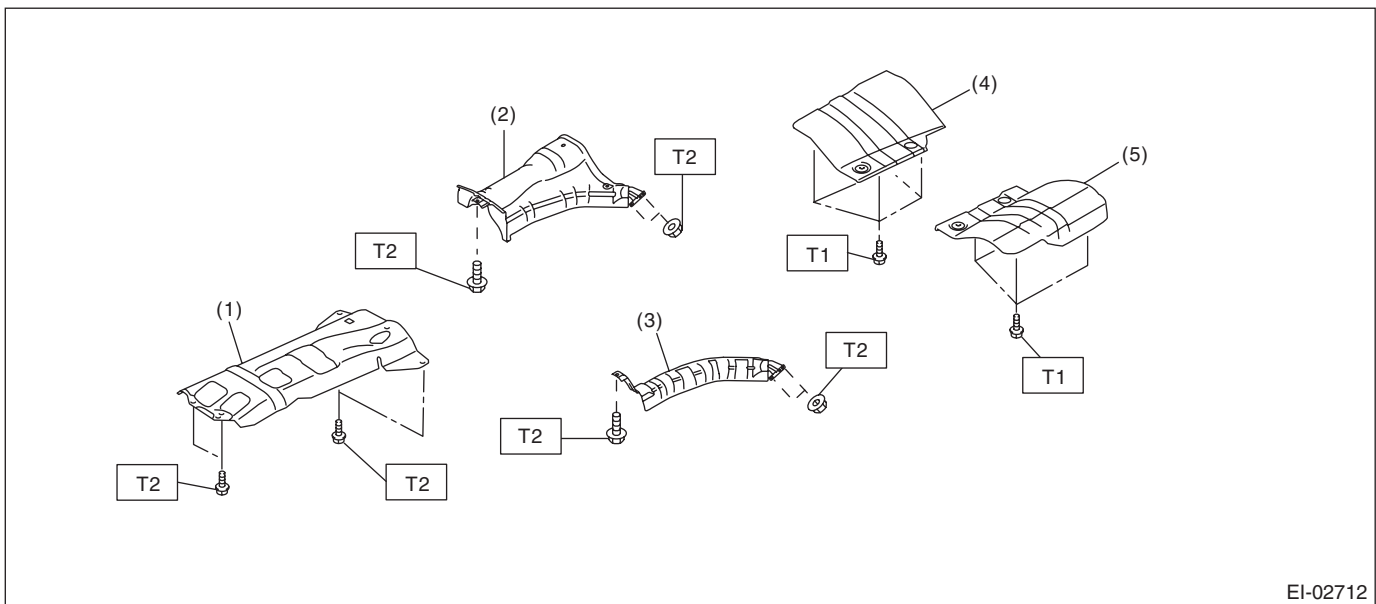


EI-02712

- | | |
|---|---|
| (1) Front heat shield cover | (4) Rear heat shield cover RH |
| (2) Center heat shield cover (H6 model) | (5) Rear heat shield cover LH (only H6 model) |
| (3) Center heat shield cover (H4 non-turbo model) | |

Tightening torque: N·m (kgf·m, ft·lb)
T1: 10 (1.02, 7.4)
T2: 18 (1.84, 13.3)

General Description

EXTERIOR/INTERIOR TRIM

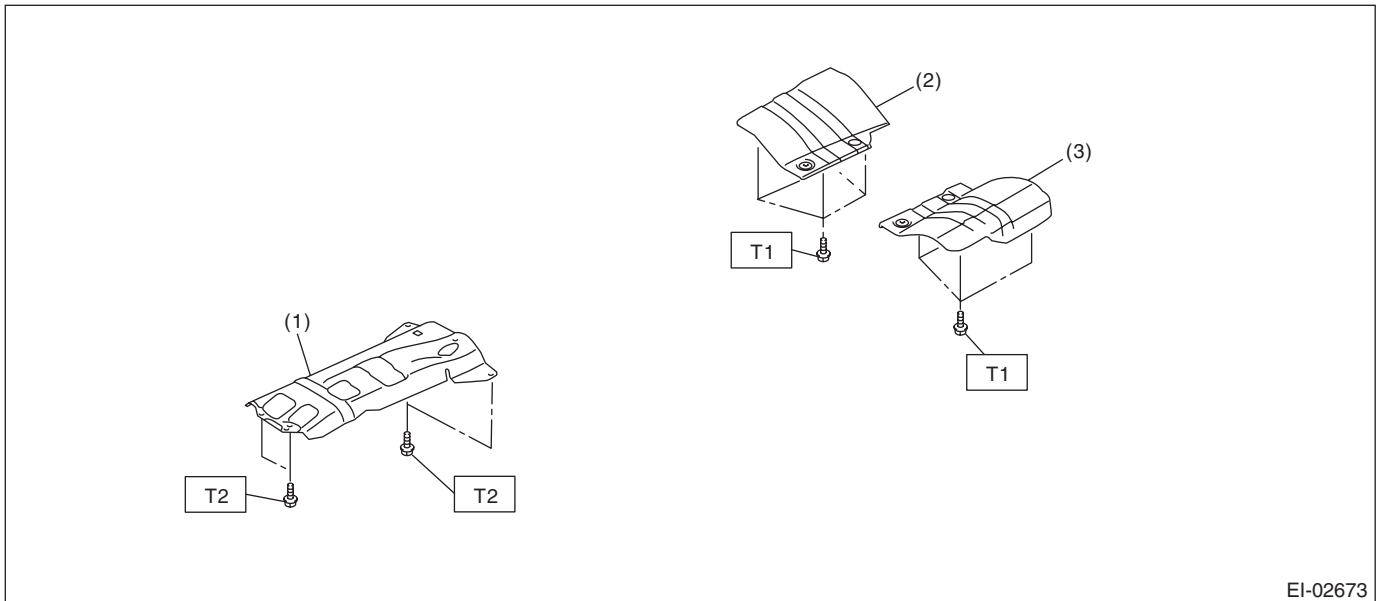

EI-02673

(1) Front heat shield cover

(3) Rear heat shield cover LH (only H6 model)

(2) Rear heat shield cover RH

Tightening torque: N·m (kgf-m, ft-lb)

T1: 10 (1.02, 7.4)

T2: 18 (1.84, 13.3)

NOTE:

For 2.5 L non-turbo model, refer to “EXHAUST SYSTEM” section.

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim. • KTC AP201-10A • KTC AP201-N • KTC AP203-10A • KTC AP20L-10B or equivalent
Clip clamp pliers	Used for removal of various clips and clamps. • KTC CCP-190 or equivalent