


11. Roof Molding

A: REMOVAL

CAUTION:

Be careful not to damage the body.

- 1) Remove the roof rail assembly. (OUTBACK model) <Ref. to EI-56, REMOVAL, Roof Rail.>
- 2) Turn over the front end of roof molding.
- 3) Using a flat tip screwdriver, slide the internal clip in the direction of arrow.

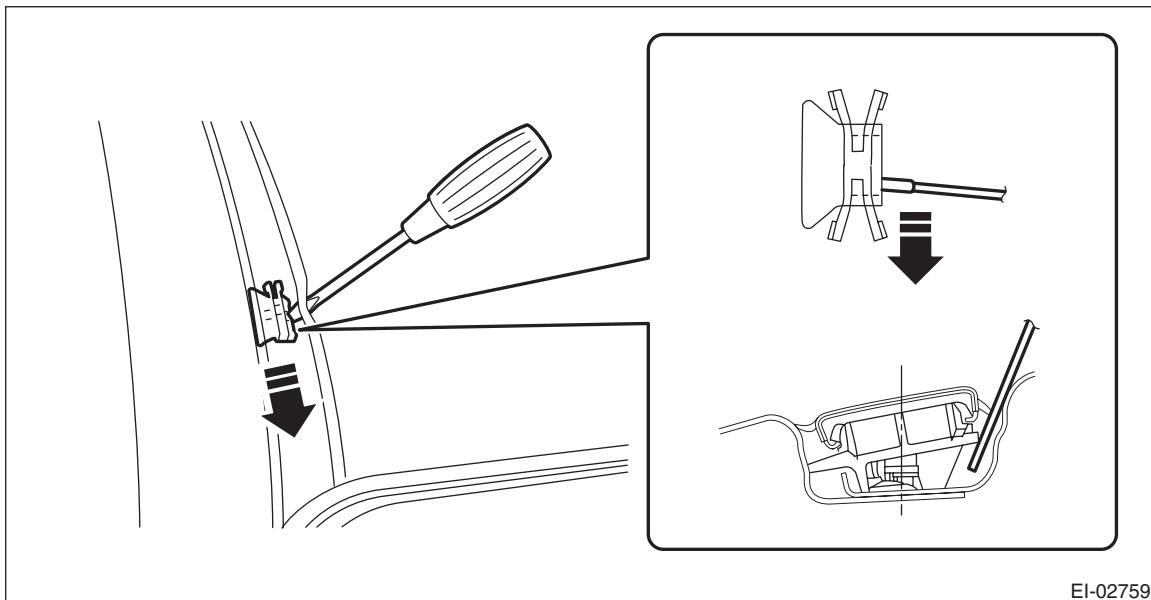

Right: Slide toward vehicle front.


Left: Slide toward vehicle rear.

Roof Molding

EXTERIOR/INTERIOR TRIM


4) Remove the clip from the stud on the body by sliding it.

- Sedan model: 6 clips per side

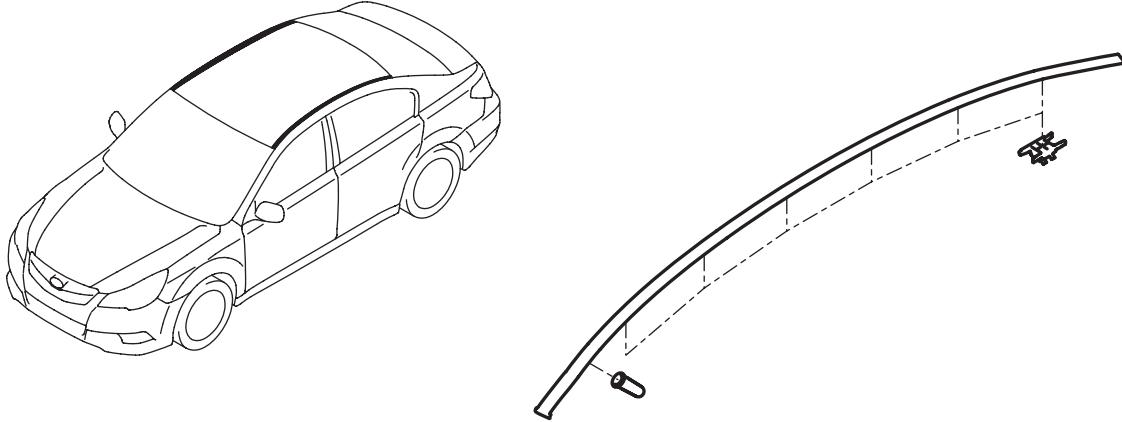

EI-02769

- OUTBACK model: 1 clip per side

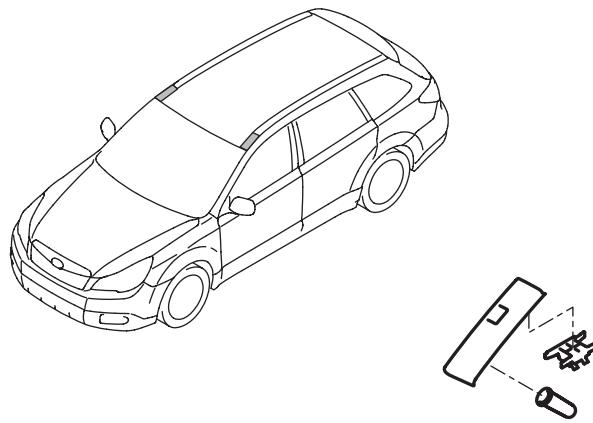

EI-02760


5) Remove the roof molding from the vehicle body by pulling it upward.

B: INSTALLATION


1) Remove the clips from the roof molding and attach them on the stud on body.

CAUTION:

- Any clips damaged during roof molding removal must be replaced with new parts.
- While installing the roof molding, be careful not to catch the glass molding with the tip of the front side and rear side.

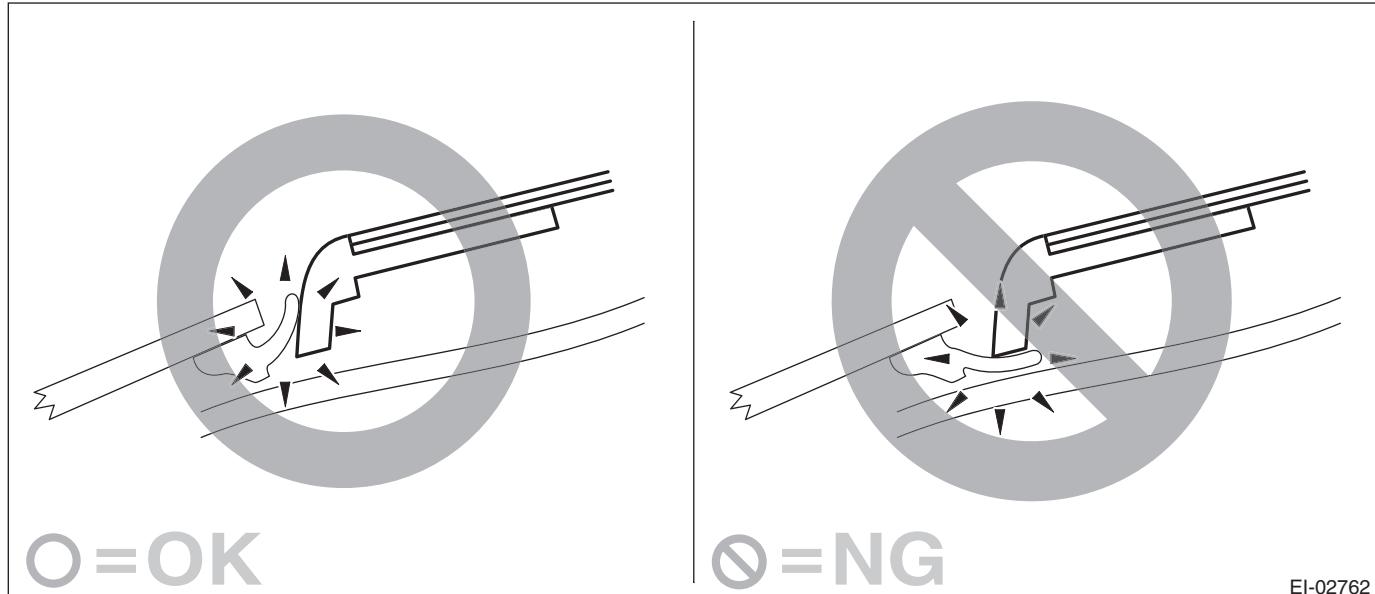

2) Apply the front end of roof molding to the front window, and attach the front positioning clip to the rivet on body.

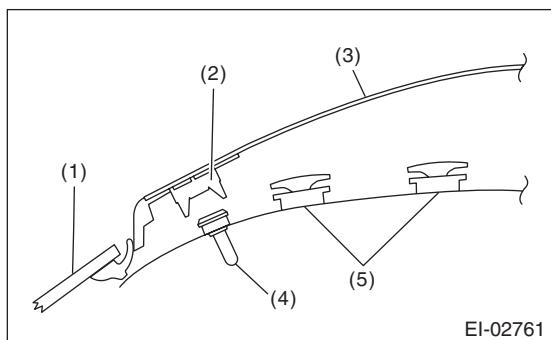

- (1) Windshield
- (2) Positioning clip
- (3) Roof molding
- (4) Rivet
- (5) Clip

3) While pressing the roof molding from above, connect the roof molding with clips.