


2. Front Grille


A: REMOVAL

1) Remove the front bumper face assembly.

(1) Remove the clips and turn over the front end of front mud guard. (Model with fog light)

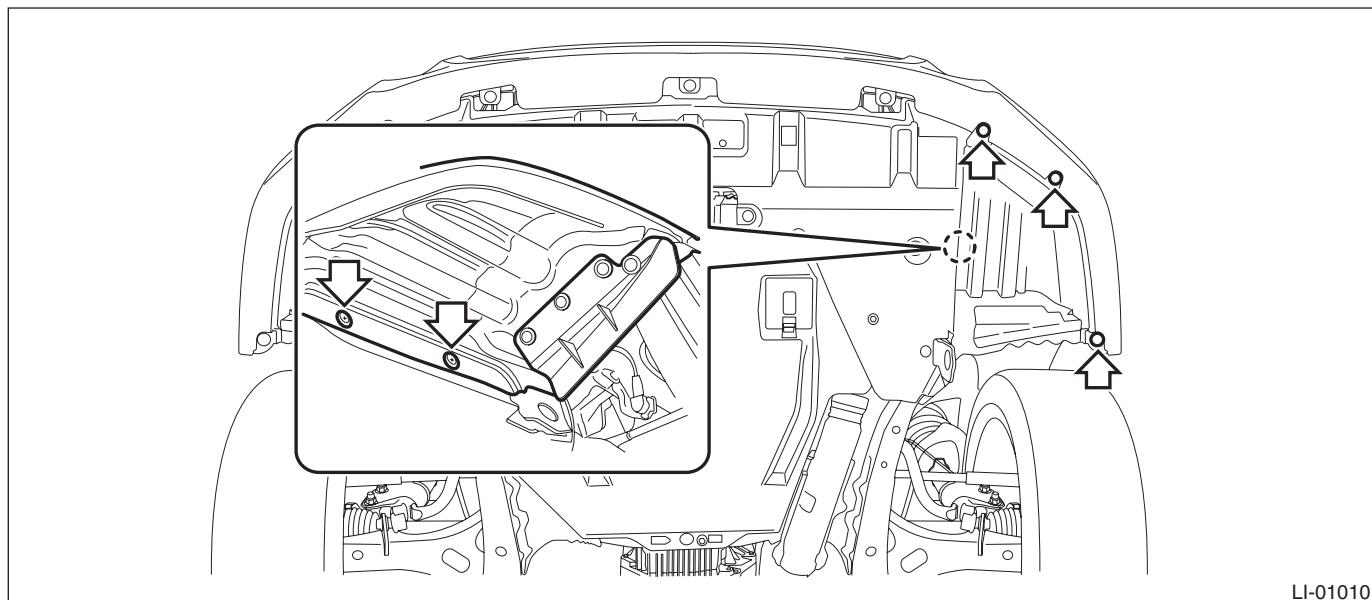

(2) Disconnect the front fog light connector. (Model with fog light)

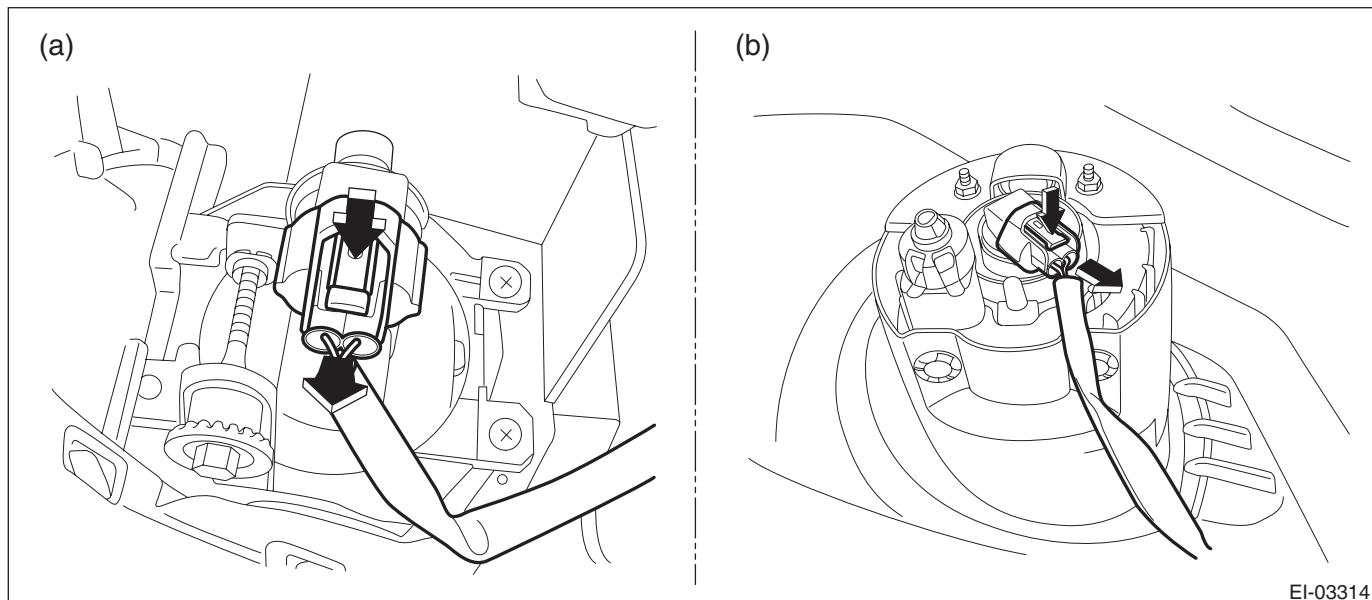

(a) Sedan model

(b) OUTBACK model


(3) Remove the clips at the upper side of the bumper.

(4) Remove the clips from the fender.

Front Grille

EXTERIOR/INTERIOR TRIM

(5) Remove the clips at the lower side of bumper.

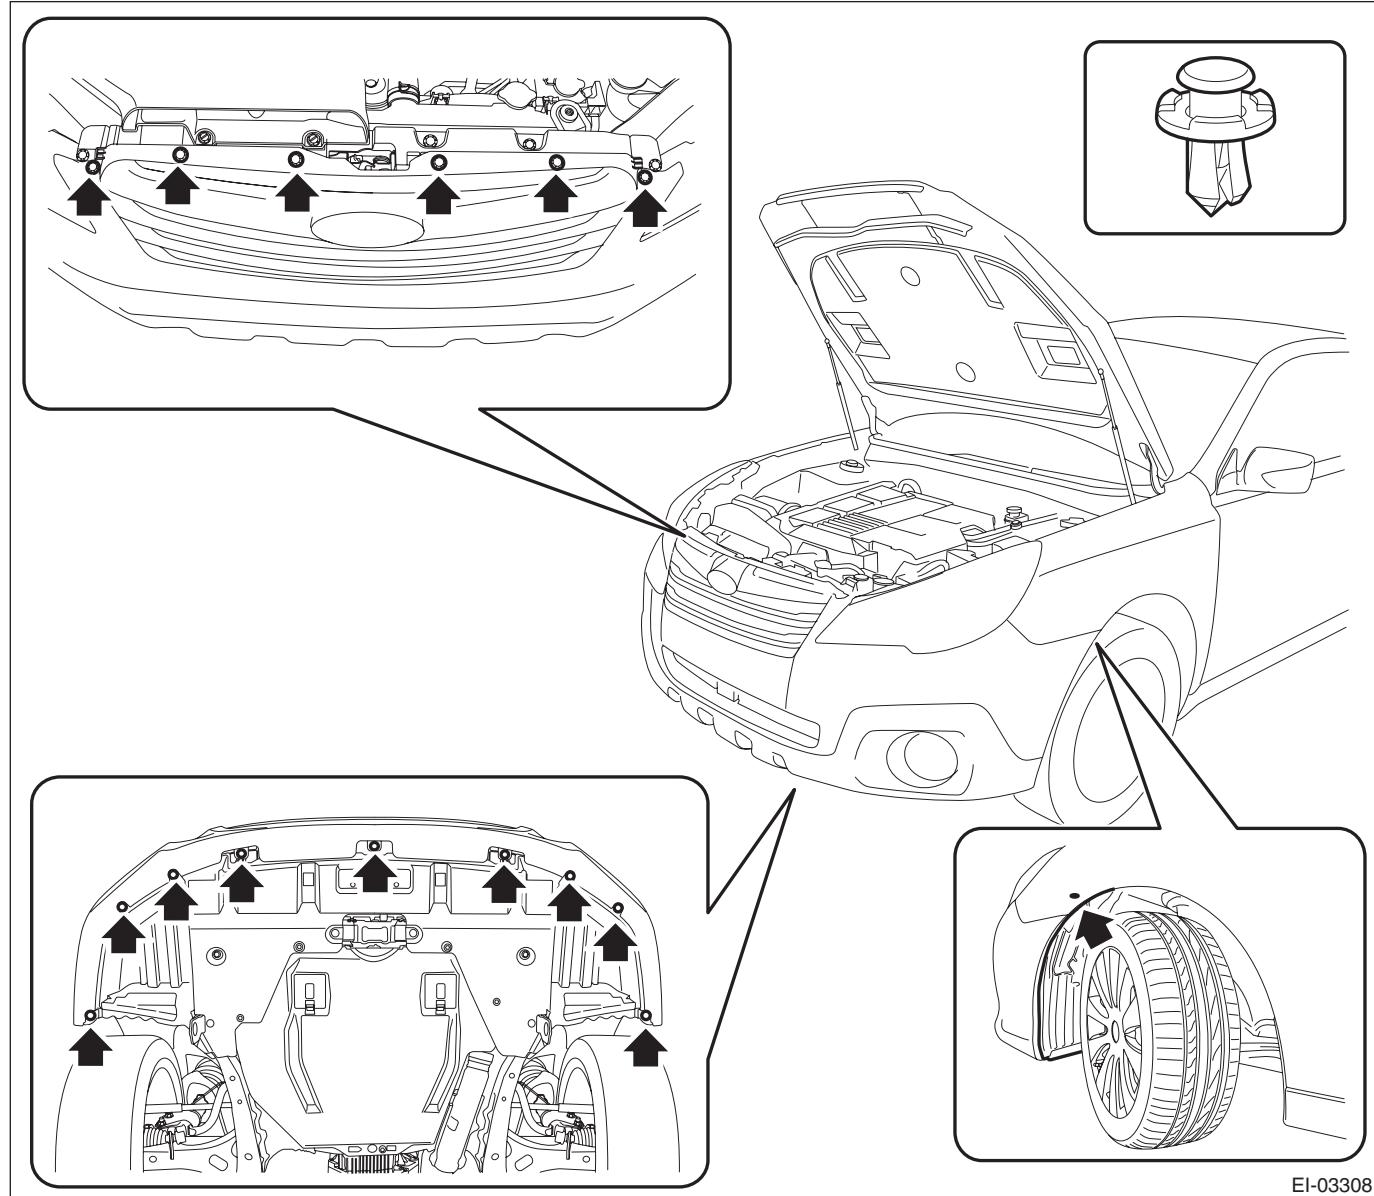


EI-03308

(6) Detach the flange section on the bumper face side from the bracket side front UPR.

CAUTION:

Do not pull forcibly. It may damage the flange sections of the bumper face.

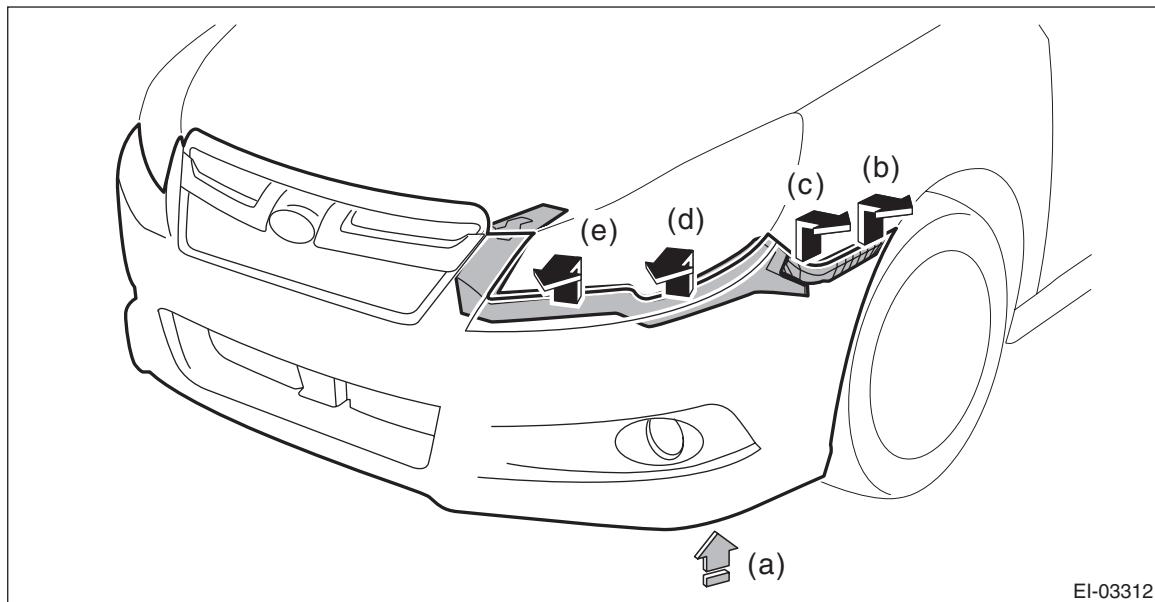

NOTE:


Pushing up the lower side (a) of the fog light, remove from (b) to (e).

Detach the opposite side in the same manner.

2) Remove the front grille assembly.

(1) Remove the screws from the back side of bumper face.

(2) Release the claws, and remove the front grille assembly.

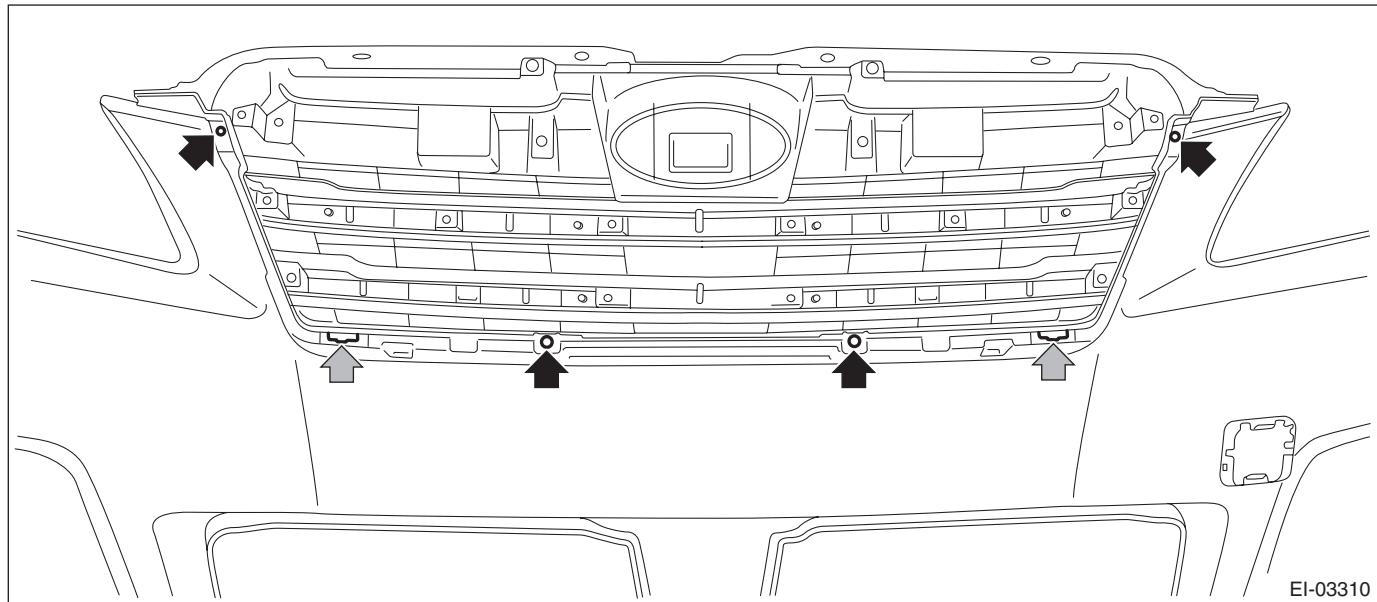


Front Grille

EXTERIOR/INTERIOR TRIM

B: INSTALLATION

CAUTION:

Install the bumper face so that the under cover front end (b) comes inside the front bumper face (a).

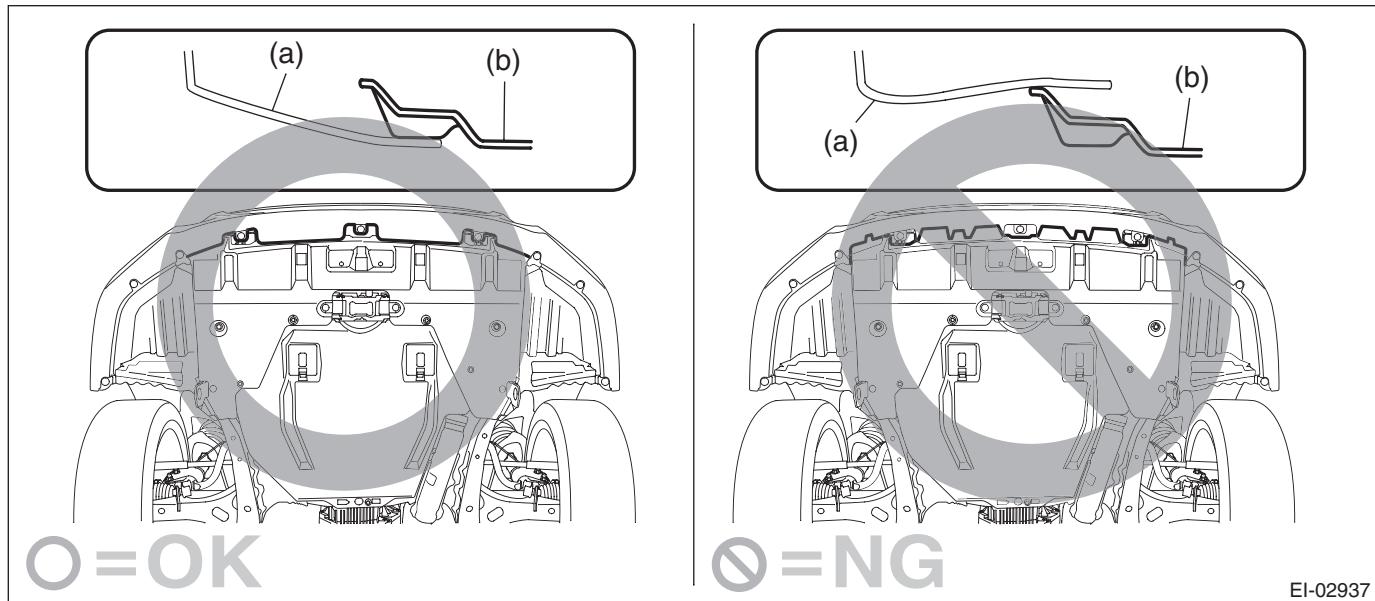

EI-02937

- 1) Install each part in the reverse order of removal.
- 2) Adjust the fog light beam. (Model with fog light) <Ref. to LI-42, FOG LIGHT AIMING, ADJUSTMENT, Front Fog Light Assembly.>