

## 31. Heat Shield Cover

### A: REMOVAL

#### 1. FRONT HEAT SHIELD COVER

NOTE:


For 2.5 L non-turbo model, refer to "EXHAUST SYSTEM" section.

1) Remove the rear exhaust pipe and muffler. (H6 model)

• **Rear exhaust pipe <Ref. to EX(H6DO)-9, REMOVAL, Muffler.>**

• **Muffler <Ref. to EX(H6DO)-9, REMOVAL, Muffler.>**

2) Remove the four bolts to remove the front heat shield cover.

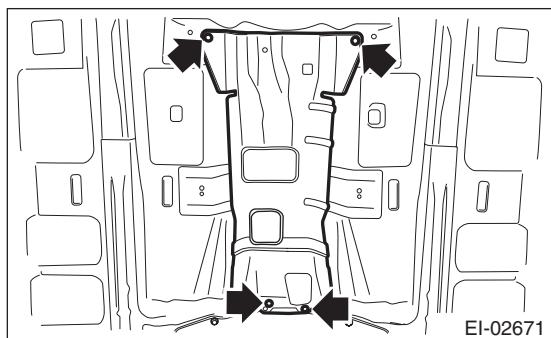


#### 2. REAR HEAT SHIELD COVER

NOTE:

For 2.5 L non-turbo model, refer to "EXHAUST SYSTEM" section.

1) Remove the muffler. (H6 model) <Ref. to EX(H6DO)-9, REMOVAL, Muffler.>

2) Remove the bolts, and remove the rear heat shield cover. (H6 model)

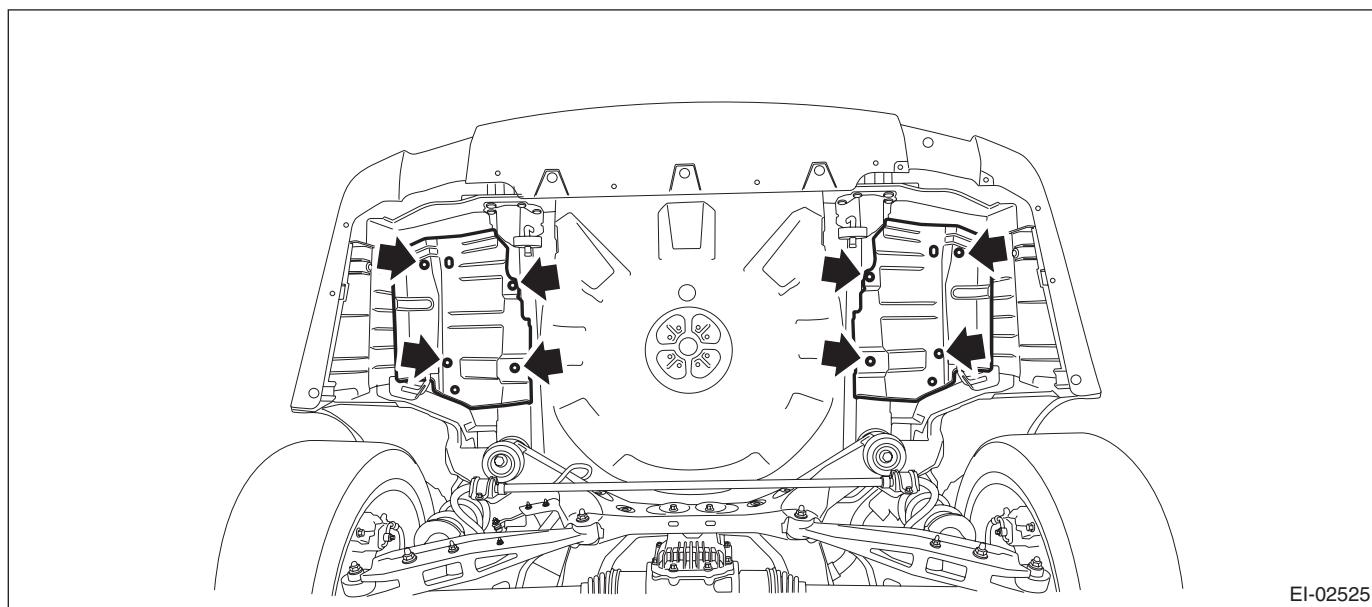

### B: INSTALLATION

Install each part in the reverse order of removal.

#### *Tightening torque:*

*Refer to "COMPONENT" of "General Description". <Ref. to EI-23, HEAT SHIELD COVER, COMPONENT, General Description.>*