


4. Front Under Cover

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts and clips, and remove the front under cover.

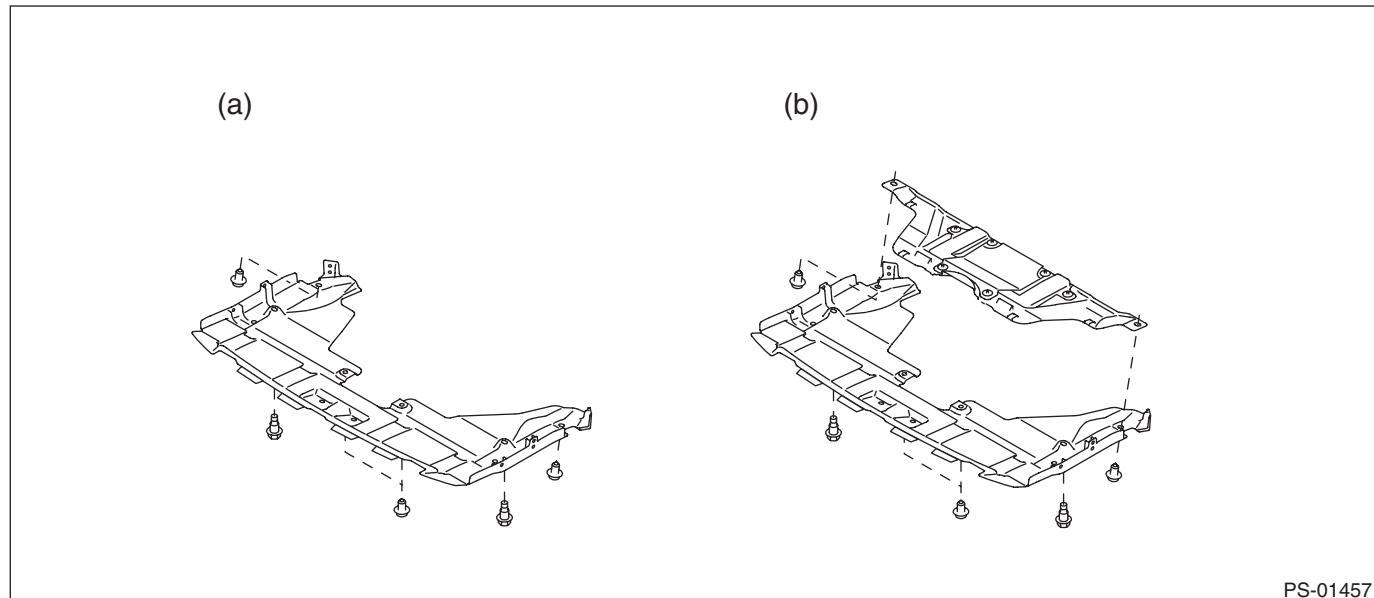


(a) Small type

(b) Medium type

B: INSTALLATION

CAUTION:

Install the under cover so that the under cover front end (b) comes inside of the front bumper face (a).

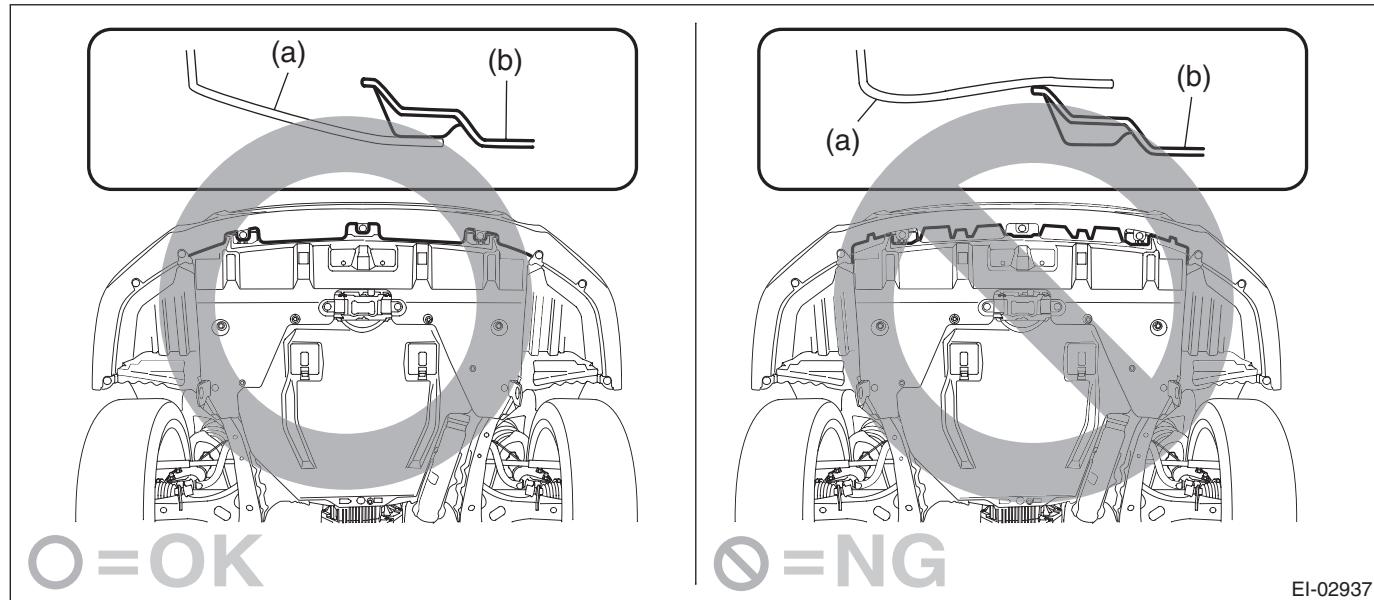

Install each part in the reverse order of removal.

Tightening torque:

17.5 N·m (1.78 kgf·m, 12.9 ft-lb)