


Electrical Component Location

HVAC SYSTEM (DIAGNOSTICS)

3. Electrical Component Location

A: LOCATION

1. ENGINE COMPARTMENT

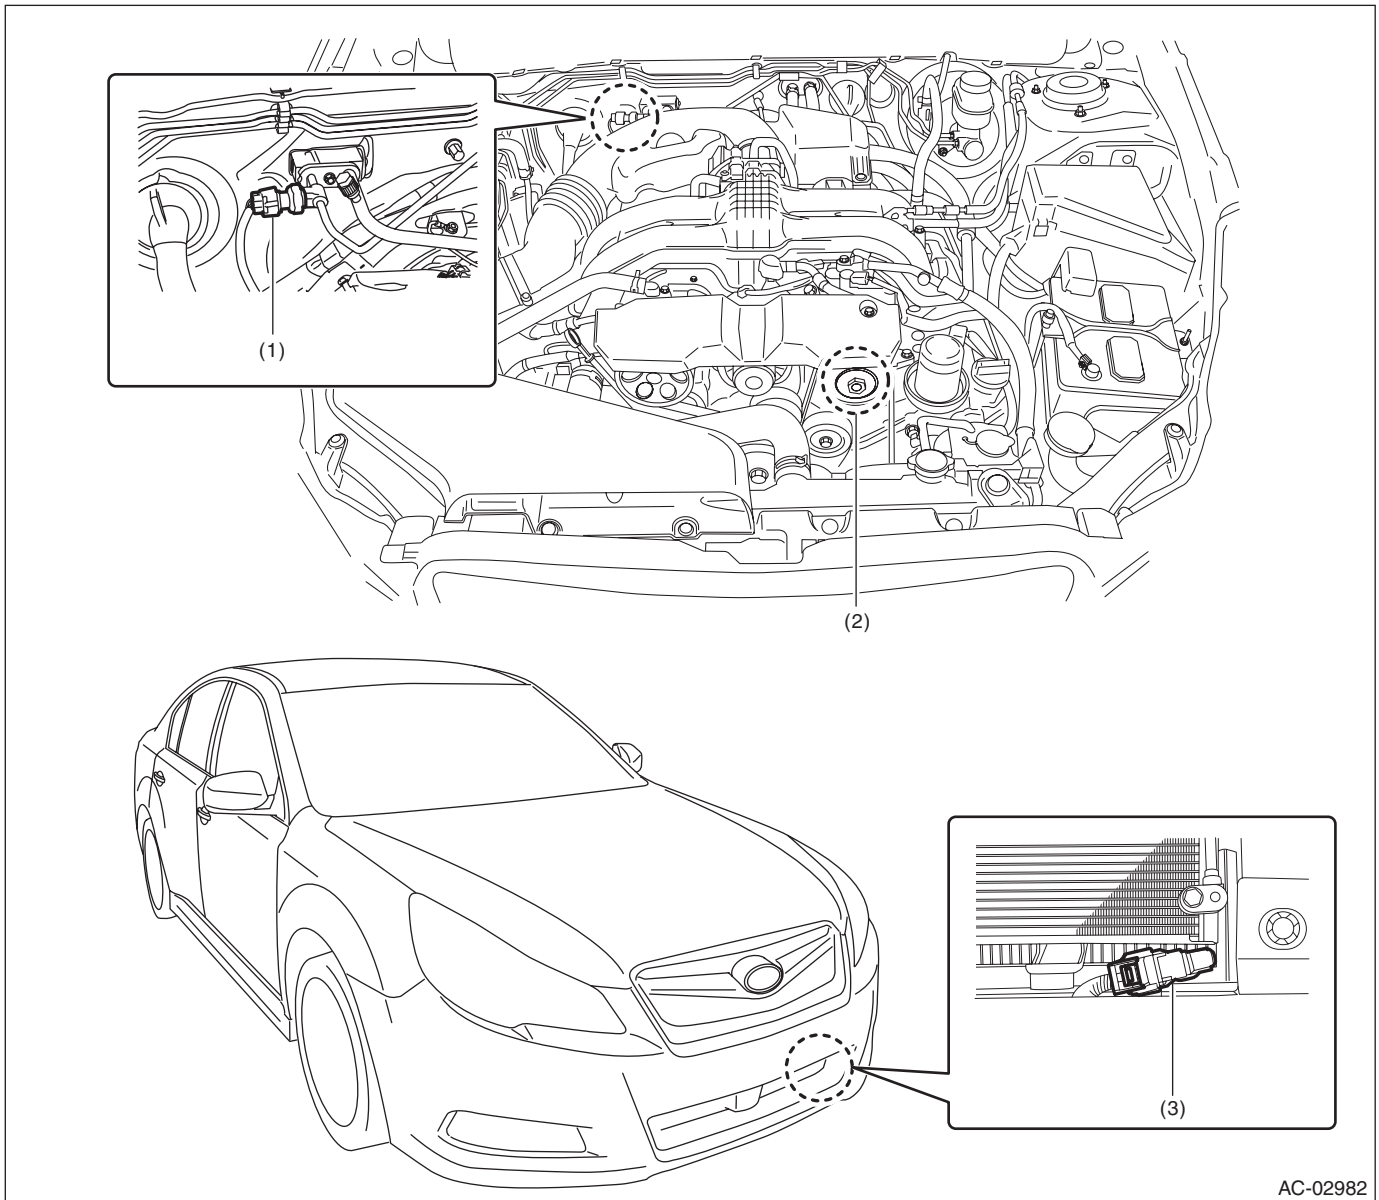

AC-02982

(1) A/C compressor


(2) Pressure sensor

(3) Ambient sensor

Electrical Component Location

HVAC SYSTEM (DIAGNOSTICS)

2. COMPARTMENT

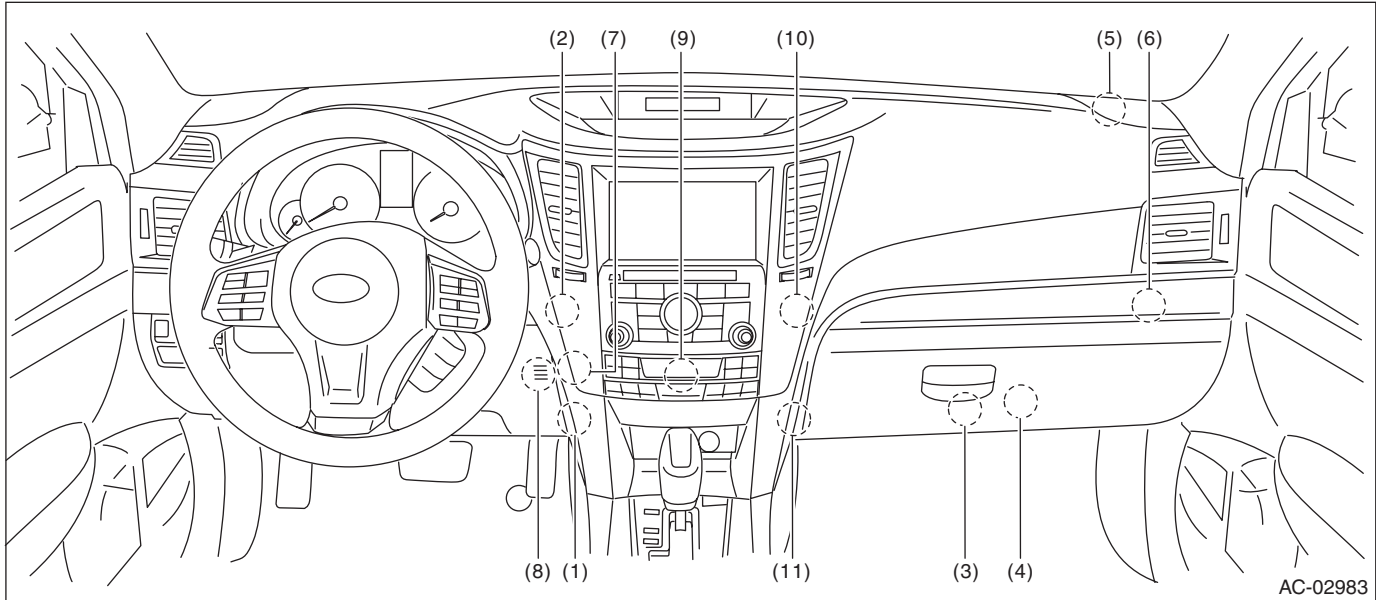

- | | | |
|--|--------------------------|---|
| (1) Evaporator sensor | (5) Sunload sensor | (9) A/C control panel |
| (2) Air mix door actuator*1 or air mix door actuator (driver's seat)*2 | (6) Intake door actuator | (10) Air mix door actuator (passenger's seat)*2 |
| (3) A/C CM | (7) Mode door actuator | (11) Rear vent actuator*3 |
| (4) Blower motor | (8) In-vehicle sensor | |

*1: Manual A/C

*2: Auto A/C

*3: With rear seat A/C