

## Read Diagnostic Trouble Code (DTC)

HVAC SYSTEM (DIAGNOSTICS)

---

### 8. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

For details concerning the operation procedure, refer to "PC application help for Subaru Select Monitor".