

## 10. Brake Lamp Relay

### A: REMOVAL

Remove the brake light relay from the main fuse box (A/C relay holder).

NOTE:

Refer to "LOCATION" of "Relay and Fuse". <Ref. to ES-5, LOCATION, Relay and Fuse.>

### B: INSTALLATION

Install each part in the reverse order of removal.

### C: INSPECTION

Refer to "INSPECTION" of "Relay and Fuse". <Ref. to ES-5, CHECK RELAY, INSPECTION, Relay and Fuse.>