

## 4. Control Unit

### A: NOTE

System control of the EyeSight is performed by the following modules.

- Engine control module (ECM)
- Transmission control module (TCM)
- VDC control module (VDC CM)
- Parking brake actuator (EPB CM)
- Stereo camera

### B: REMOVAL

For removal, refer to the removal procedure of each module.

- Engine control module (ECM)

H4 model: <Ref. to FU(H4DO)-99, REMOVAL, Engine Control Module (ECM).>

H6 model: <Ref. to FU(H6DO)-54, REMOVAL, Engine Control Module (ECM).>

- Transmission control module (TCM)

CVT model: <Ref. to CVT-138, REMOVAL, Transmission Control Module (TCM).>

5AT model: <Ref. to 5AT-56, REMOVAL, Transmission Control Module (TCM).>

- VDC control module (VDC CM): <Ref. to VDC-12, MODELS WITH EyeSight, REMOVAL, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>

• Parking brake actuator (EPB CM): <Ref. to PB-7, REMOVAL, Parking Brake Actuator.>

- Stereo camera: <Ref. to ES-8, REMOVAL, Stereo Camera.>

### C: INSTALLATION

For installation, refer to the installation procedure of each module.

- Engine control module (ECM)

H4 model: <Ref. to FU(H4DO)-100, INSTALLATION, Engine Control Module (ECM).>

H6 model: <Ref. to FU(H6DO)-54, INSTALLATION, Engine Control Module (ECM).>

- Transmission control module (TCM)

CVT model: <Ref. to CVT-139, INSTALLATION, Transmission Control Module (TCM).>

5AT model: <Ref. to 5AT-56, INSTALLATION, Transmission Control Module (TCM).>

- VDC control module (VDC CM): <Ref. to VDC-14, MODELS WITH EyeSight, INSTALLATION, VDC Control Module and Hydraulic Control Unit (VDCCM&H/U).>

• Parking brake actuator (EPB CM): <Ref. to PB-9, INSTALLATION, Parking Brake Actuator.>

- Stereo camera: <Ref. to ES-12, INSTALLATION, Stereo Camera.>