

12. System Operation Check Mode

A: OPERATION

NOTE:

Compulsory drive inspection of the brake light can be performed.

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {ADA adaptive cruise control system}.
- 3) On «ADA adaptive cruise control system» display, select {EyeSight (from 2009MY)}.
- 4) On «EyeSight (from 2009MY)» display, select {Work Support}.
- 5) On «Work Support» display, select {System Operation Check Mode}.
- 6) On «System Operation Check Mode» display, select {Brake Lamp Lighting Operation}.
- 7) Perform operation according to the Subaru Select Monitor display.

NOTE:

For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.

13. Camera Adjustment, Inspection

A: PROCEDURE

CAUTION:

- Perform the camera adjustment and inspection at curb weight without passengers.
- Handle RANDOM CHART (ST: 87599YC001) carefully so as not to break it with the adhesive force of the tape.

Perform inspection or adjustment according to the following procedures.

- Readjustment of stereo camera

Perform the adjustment in the following order: [1. Preparations] → [6. Camera all adjustment mode (replacement/removal)] → [4. Automatic adjustment and function check by driving].

- Replacement of stereo camera

Perform the replacement in the following order: [1. Preparations] → [7. Clear adjustment value] → [6. Camera all adjustment mode (replacement/removal)] → [4. Automatic adjustment and function check by driving].

