

# User Customizing

## BODY CONTROL SYSTEM (DIAGNOSTICS)

### 9. User Customizing

#### A: OPERATION

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Integ. unit mode}.
- 3) On «Integ. unit mode failure diag.» display, select {Unit customizing}.
- 4) Change the setting with UP/DOWN key and set with the [OK] key.

List of User Customizing item

| Data                              | Initial setting value | Customize setting | Remarks  |
|-----------------------------------|-----------------------|-------------------|--|
| Off delay time                    | Long                  |                   | Delay time below can be selected by setting.   |
|                                   |                       | OFF               | 0 seconds  |
|                                   |                       | Short             | 10 seconds   |
|                                   |                       | Normal            | 20 seconds   |
|                                   |                       | Long              | 30 seconds   |
| Auto Light Sensitivity Adjustment | Normal                | Dull              | Slow response  |
|                                   |                       | Normal            | Standard   |
|                                   |                       | Sensitive         | Quick response   |
|                                   |                       | Very sensitive    | Fairly quick response  |
| Rr defogger op. mode              | Normal                | Normal            | Automatically stops in 15 minutes after switch is turned to ON.  |
|                                   |                       | Continuous        | Repeats active condition for 15 minutes and inactive condition for 2 minutes until switch is turned to OFF.  |
| Security Alarm Setup              | ON                    | ON                | Security alarm (hazard, horn or siren) in active condition   |
|                                   |                       | OFF               | Security alarm in inactive condition   |
| Impact Sensor Setup               | OFF                   | ON                | Workable when Impact Sensor Setup is set to "ON". Impact sensor function becomes activated.  |
|                                   |                       | OFF               | Impact sensor in inactive condition (Set to "OFF" in models without sensors.)  |
| Alarm delay setup                 | ON                    |                   | After the keyless lock operation, the alarm monitor starts after the following delay time has passed.  |
|                                   |                       | ON                | Delay time is 30 seconds.  |
|                                   |                       | OFF               | Delay time is 0 seconds.   |
| Lockout prevention                | ON                    | ON                | key lockout prevention function is activated. (The function does not operate if safety knob is locked by hand.)  |
|                                   |                       | OFF               | Key lockout prevention function is deactivated.  |
| Impact sensor (OP)                | OFF                   | ON                | Vehicle is controlled in impact sensor equipped mode. (Make sure to set to "OFF" for models without the impact sensor. When "ON", hazard, horn or siren become activated by keyless lock (alarm monitor start).) |
|                                   |                       | OFF               | Vehicle is controlled in no impact sensor mode.  |
| Answer-back buzzer setup          | ON                    | ON                | When lock/unlock is selected by keyless entry system operation, buzzer operates.   |
|                                   |                       | OFF               | When lock/unlock is selected by keyless entry system operation, buzzer does not operate.   |
| Hazard answer-back setup          | ON                    | ON                | When lock/unlock is selected by keyless entry system operation, hazard blinks.   |
|                                   |                       | OFF               | When lock/unlock is selected by keyless entry system operation, hazard does not interlock.   |
| Initial keyless setting           | —                     | —                 |  |
|                                   |                       | Execution         |  |
| Initial button setting            | —                     | —                 |  |
|                                   |                       | Execution         |  |

# User Customizing

## BODY CONTROL SYSTEM (DIAGNOSTICS)

| Data                     | Initial setting value | Customize setting | Remarks   |
|--------------------------|-----------------------|-------------------|---|
| Select unlock switch     | ALL                   | ALL               | All doors are unlocked by one unlock signal.            |
|                          |                       | Selection         | All doors are unlocked by two unlock signals.           |
| Passive Alarm            | OFF                   | ON                |   |
|                          |                       | OFF               |   |
| Door open warning        | ON                    | ON                |   |
|                          |                       | OFF               |   |
| Dome Light Alarm Setting | OFF                   | ON                | Room light illuminates interlocking with alarm.         |
|                          |                       | OFF               | Room light does not illuminate interlocking with alarm. |
| Belt Warning Switch      | ON                    | ON                | Belt warning buzzer beeps.                              |
|                          |                       | OFF               | Belt warning buzzer stops.                              |

5) After setting, make sure that the setting changed in the {Current Data Display & Save} is same as vehicle equipment.

### CAUTION:

- the above settings must match the actual vehicle equipment.
- Do not change settings except for setting above while setting the functions.
- Be sure not to change Factory initial setting except when installing a new body integrated unit.

### NOTE:

For detailed operation procedures, refer to "PC application help for Subaru Select Monitor".