


6. Airbag Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

- OUTBACK model

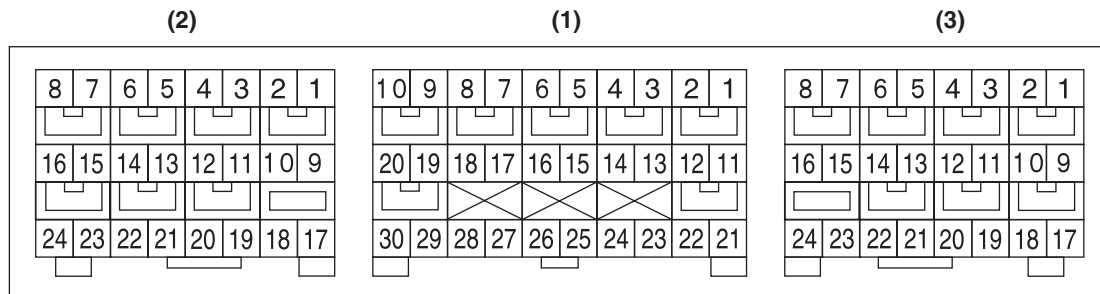

AB-01873

- Terminal numbers in airbag control module connector are shown in the figure.
- The airbag warning light illuminates when the connector is removed from the airbag control module.


Item		Control module terminal No.
Data link connector		(1) — 16
Ignition power supply	Dedicated fuse	(1) — 21
Passenger's airbag module level one	+	(1) — 4
	—	(1) — 3
Passenger's airbag module level two	+	(1) — 1
	—	(1) — 2
Driver's airbag module level one	+	(1) — 5
	—	(1) — 6
Driver's airbag module level two	+	(1) — 8
	—	(1) — 7
CAN-H		(1) — 13
CAN-L		(1) — 22
Front sub sensor LH	+	(1) — 30
	—	(1) — 28
Front sub sensor RH	+	(1) — 29
	—	(1) — 27
Ground line (GND)		(1) — 25
		(1) — 26
Passenger's airbag ON indicator		(1) — 23
Passenger's airbag OFF indicator		(1) — 17
Passenger's seat belt warning		(1) — 15
Side airbag sensor RH	+	(2) — 24
Curtain airbag sensor RH	—	(2) — 23
Front door impact sensor RH	—	(2) — 23
Seat belt pretensioner RH	+	(2) — 5
	—	(2) — 6

Airbag Control Module I/O Signal

AIRBAG SYSTEM (DIAGNOSTICS)

Item		Control module terminal No.
Lap seat belt pretensioner RH	+	(2) — 8
	—	(2) — 7
Side airbag module RH	+	(2) — 1
	—	(2) — 2
Curtain airbag module RH	+	(2) — 4
	—	(2) — 3
Occupant detection control module	+	(2) — 9
	—	(2) — 17
Side airbag sensor LH	+	(3) — 17
Curtain airbag sensor LH	—	(3) — 18
Front door impact sensor LH	—	(3) — 18
Side airbag module LH	+	(3) — 8
	—	(3) — 7
Curtain airbag module LH	+	(3) — 5
	—	(3) — 6
Seat belt pretensioner LH	+	(3) — 4
	—	(3) — 3
Lap seat belt pretensioner LH	+	(3) — 1
	—	(3) — 2

- Sedan model

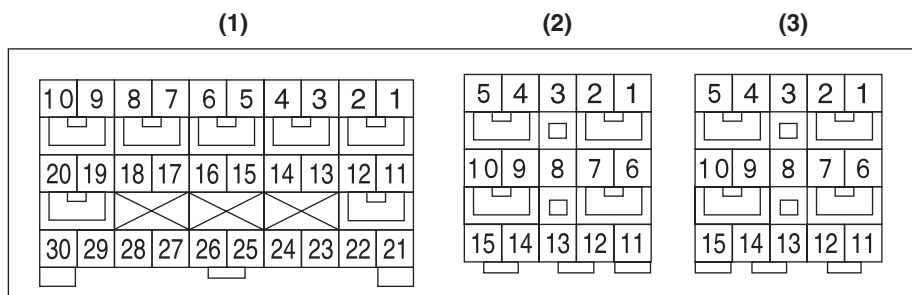

AB-01874

- Terminal numbers in airbag control module connector are shown in the figure.
- The airbag warning light illuminates when the connector is removed from the airbag control module.

Item		Control module terminal No.
Data link connector		(1) — 16
Ignition power supply	Dedicated fuse	(1) — 21
Passenger's airbag module level one	+	(1) — 4
	—	(1) — 3
Passenger's airbag module level two	+	(1) — 1
	—	(1) — 2
Driver's airbag module level one	+	(1) — 5
	—	(1) — 6
Driver's airbag module level two	+	(1) — 8
	—	(1) — 7

Airbag Control Module I/O Signal

AIRBAG SYSTEM (DIAGNOSTICS)

Item		Control module terminal No.
CAN-H		(1) — 13
CAN-L		(1) — 22
Front sub sensor LH	+	(1) — 30
	—	(1) — 28
Front sub sensor RH	+	(1) — 29
	—	(1) — 27
Ground line (GND)		(1) — 25
		(1) — 26
Passenger's airbag ON indicator		(1) — 23
Passenger's airbag OFF indicator		(1) — 17
Passenger's seat belt warning		(1) — 15
Seat belt pretensioner RH	+	(2) — 2
	—	(2) — 1
Lap seat belt pretensioner RH	+	(2) — 4
	—	(2) — 5
Ground line (GND)		(2) — 3
Side airbag sensor RH	+	(2) — 8
Curtain airbag sensor RH	—	(2) — 15
Front door impact sensor RH		
Side airbag module RH	+	(2) — 9
	—	(2) — 10
Curtain airbag module RH	+	(2) — 7
	—	(2) — 6
Occupant detection control module	+	(2) — 14
	—	(2) — 13
Seat belt pretensioner LH	+	(3) — 4
	—	(3) — 5
Lap seat belt pretensioner LH	+	(3) — 2
	—	(3) — 1
Ground line (GND)		(3) — 3
Side airbag sensor LH	+	(3) — 8
Curtain airbag sensor LH	—	(3) — 11
Front door impact sensor LH		
Side airbag module LH	+	(3) — 7
	—	(3) — 6
Curtain airbag module LH	+	(3) — 9
	—	(3) — 10

B: WIRING DIAGRAM

Refer to the WI section wiring diagram. <Ref. to WI-46, WIRING DIAGRAM, Airbag System.>