

List of Diagnostic Trouble Code (DTC)

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

15. List of Diagnostic Trouble Code (DTC)

A: LIST

DTC	Item	Content of diagnosis	Reference
B1650	Occupant Classification System Malfunction	<ul style="list-style-type: none">• Occupant detection sensor is faulty.• Occupant detection control module is faulty.• Occupant detection harness is faulty.• Fuse is blown.	<Ref. to OD(diag)-22, DTC B1650 OCCUPANT CLASSIFICATION SYSTEM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B1655	Front Buckle Switch RH Failure	<ul style="list-style-type: none">• Passenger's buckle switch circuit is open, shorted or shorted to ground.• Occupant detection system is faulty.• Occupant detection harness is faulty.	<Ref. to OD(diag)-24, DTC B1655 FRONT BUCKLE SWITCH RH FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B16EE	Occupant Detection System Calibration error	<ul style="list-style-type: none">• Occupant detection control module is faulty.• Calibration of occupant detection control module is initial setting or faulty.	<Ref. to OD(diag)-25, DTC B16EE ODS CALIBRATION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
B16EF	Occupant Detection System wrong parts	<ul style="list-style-type: none">• Specification of occupant detection control module is improper.• Occupant detection control module is faulty.	<Ref. to OD(diag)-25, DTC B16EF ODS SYSTEM WRONG PARTS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>