

Rear Combination Light Assembly

LIGHTING SYSTEM

21. Rear Combination Light Assembly


A: REMOVAL

1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the trunk room trim. <Ref. to EI-127, REMOVAL, Trunk Room Trim.>
- 3) Remove the rear combination light assembly.
 - (1) Disconnect the connector.
 - (2) Release the nuts and clips, then remove the rear combination light assembly.


CAUTION:

Be careful not to damage the clips.

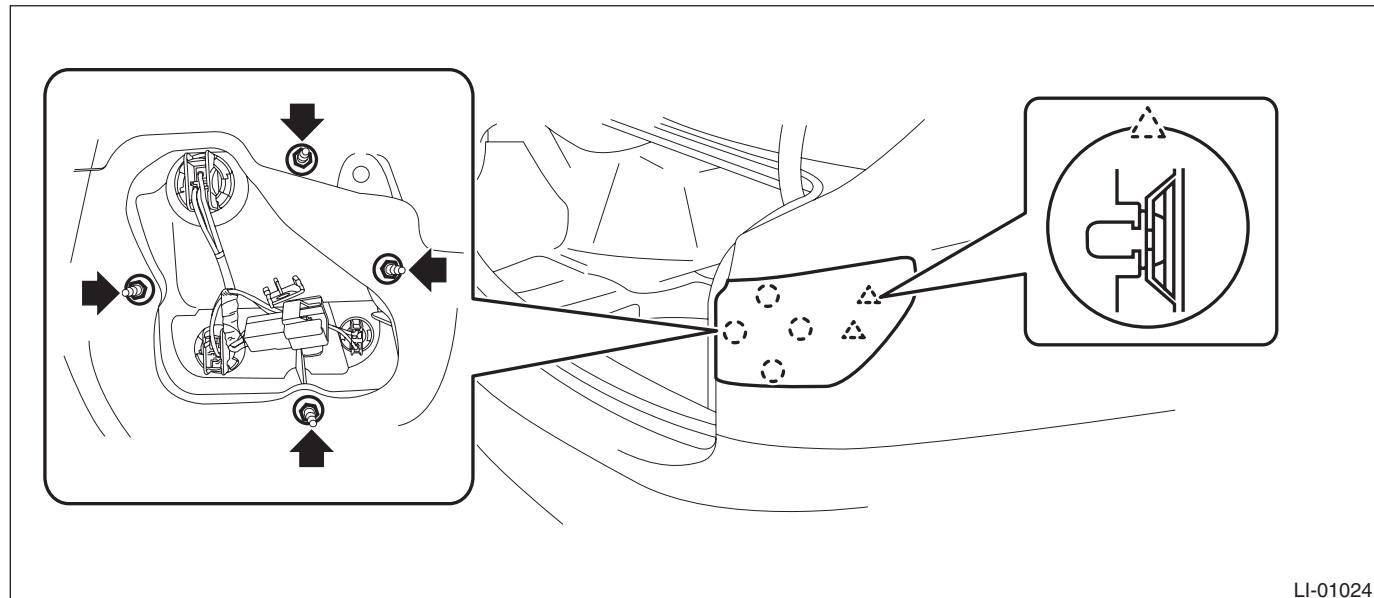

2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the clips and detach the rear combination light covers.

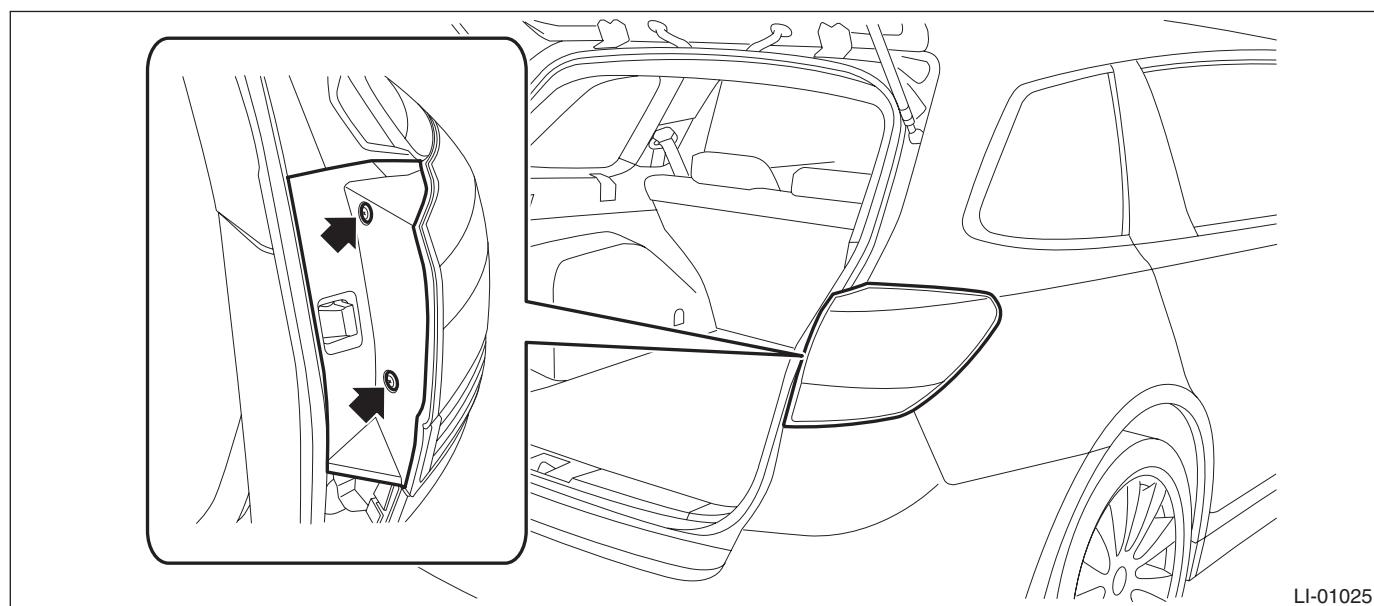


3) Remove the rear combination light assembly.

CAUTION:

Be careful not to damage the clips.

- (1) Release the bolts and clips, then pull out the rear combination light assembly to the vehicle rear.
- (2) Disconnect the connector and remove the rear combination light assembly.

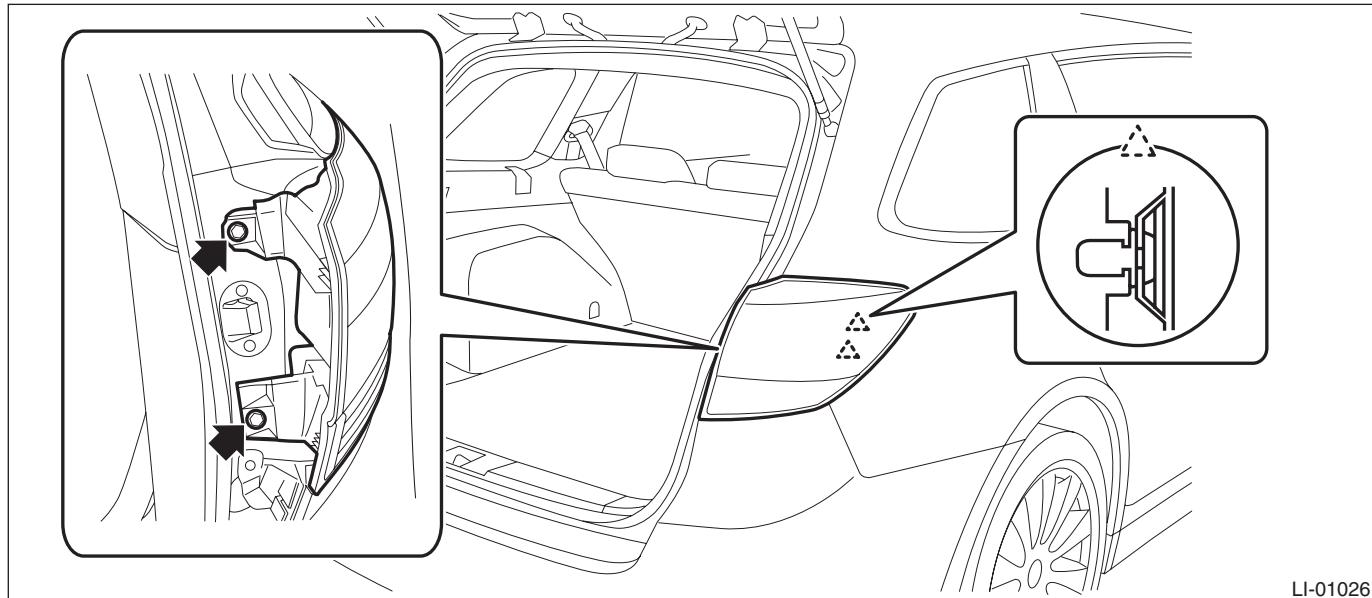

LI-01026

B: INSTALLATION

CAUTION:

For sedan models, replace the seal gasket of the rear combination light assembly with a new part. If the seal gasket is reused, water may come inside of the vehicle.

Install each part in the reverse order of removal.

Tightening torque:

Sedan model: 4.5 N·m (0.46 kgf-m, 3.3 ft-lb)

OUTBACK model: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) Replace the bulb if it is found defective.