


## 27. High-mounted Stop Light

### A: REMOVAL


#### 1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear shelf trim. <Ref. to EI-120, REMOVAL, Rear Shelf Trim.>
- 3) Remove the high-mounted stop light.
  - (1) Disconnect the connector.
  - (2) Remove the lock washers and remove the high-mounted stop light.

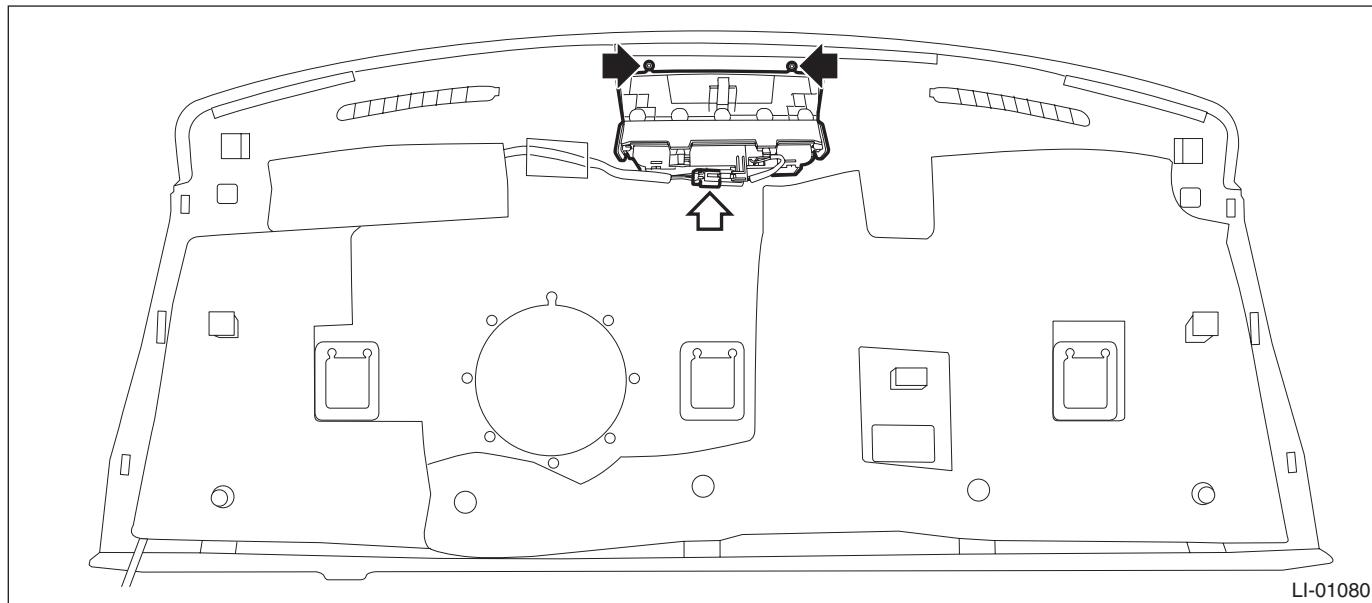

#### 2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate upper trim.
  - (1) Release the claws in the trim end.
  - (2) Disconnect the claws in the center of trim, and remove the rear gate upper trim.


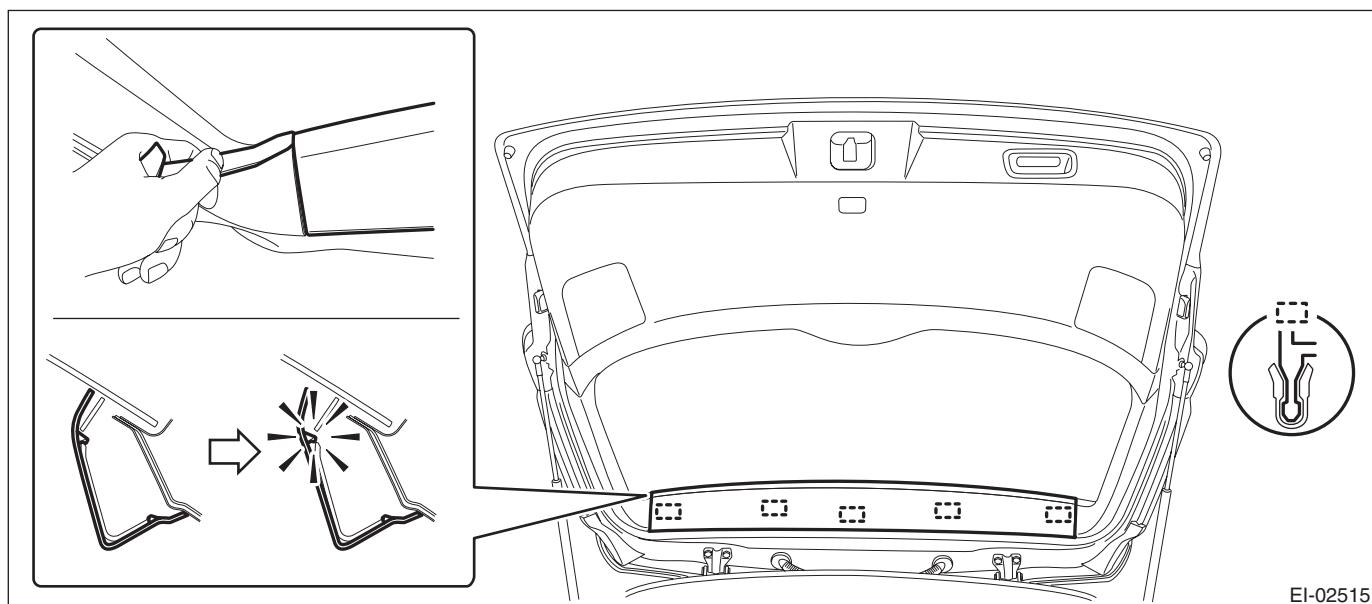


# High-mounted Stop Light

## LIGHTING SYSTEM



3) Remove the high-mounted stop light.

(1) Remove the nuts and take out the high-mounted stop light toward vehicle rear.

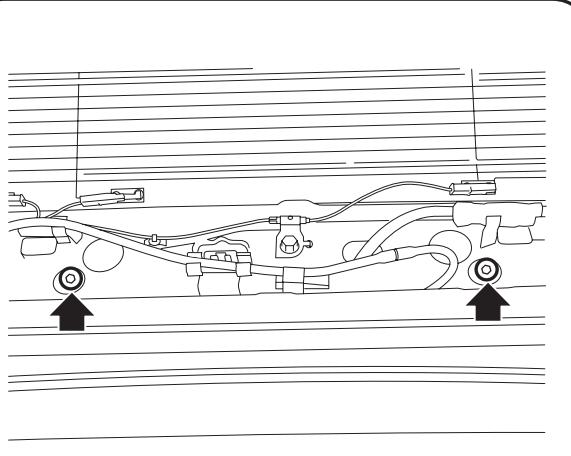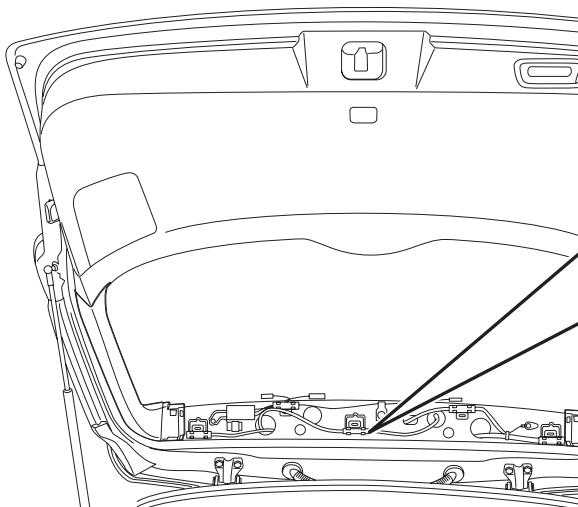

LI-01038

(2) Disconnect the connector and remove the high-mounted stop light.

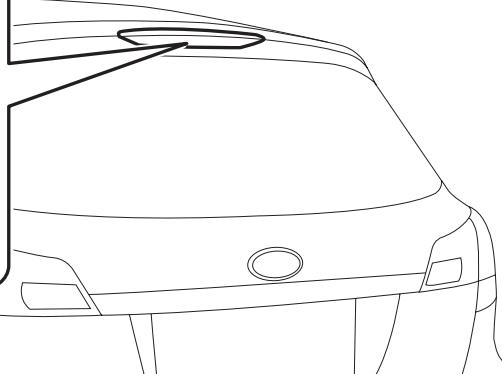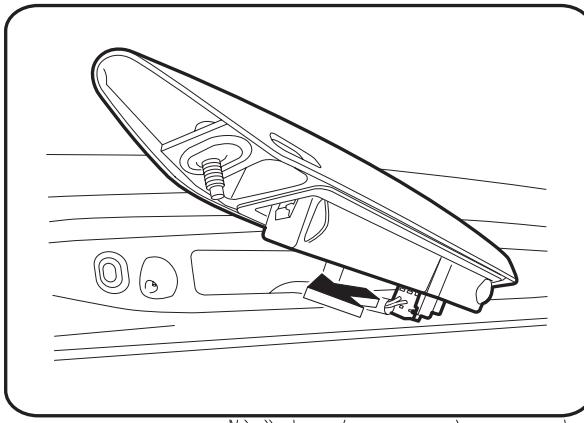

LI-01086

## B: INSTALLATION

Install each part in the reverse order of removal.

### *Tightening torque:*

*High-mounted stop light: 4.5 N·m (0.46 kgf·m, 3.3 ft-lb)*

## C: INSPECTION

1) Install the high-mounted stop light to test if it illuminates normally.

2) If it fails to illuminate normally, replace the high-mounted stop light with a new part.

### NOTE:

Since LED (Light Emitting Diode) is used for the high-mounted stop light, replace the high-mounted stop light assembly if the LED burns out.