


32. Glove Box Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-63, REMOVAL, Glove Box.>
- 3) Remove the glove box light from the glove box back panel.

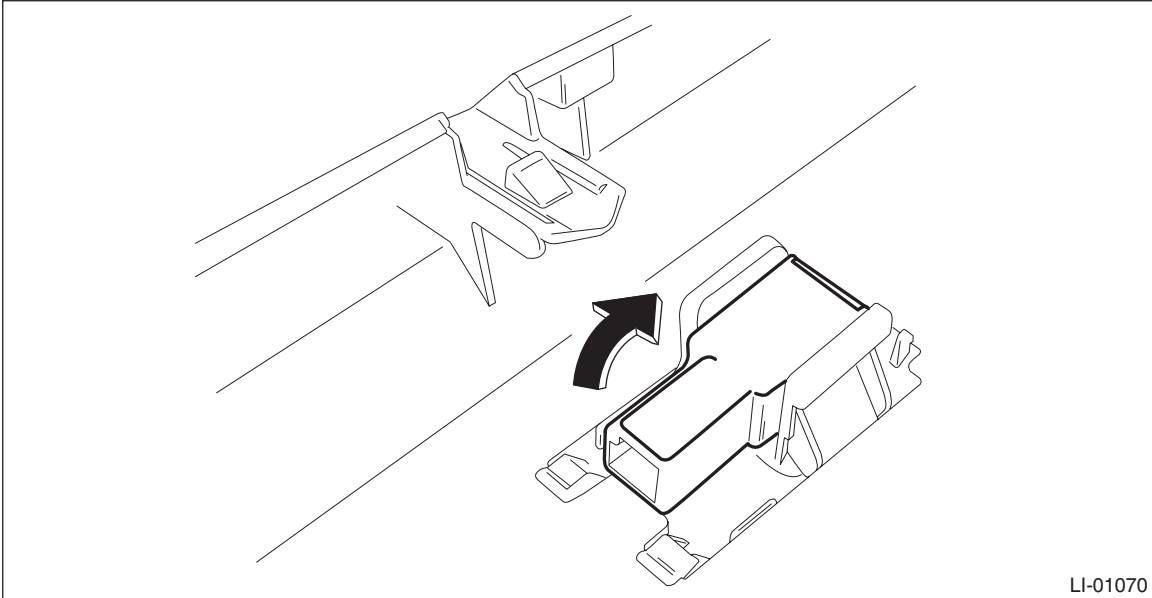

LI-01070

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Install the glove box light and test if it illuminates normally.
- 2) If it is found not to illuminate normally, replace the glove box light with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the glove box light, replace the glove box light assembly if the LED burns out.