


37.Door Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the door switch.
 - (1) Remove the screws, and pull out the door switch.
 - (2) Disconnect the connector and remove the door switch.

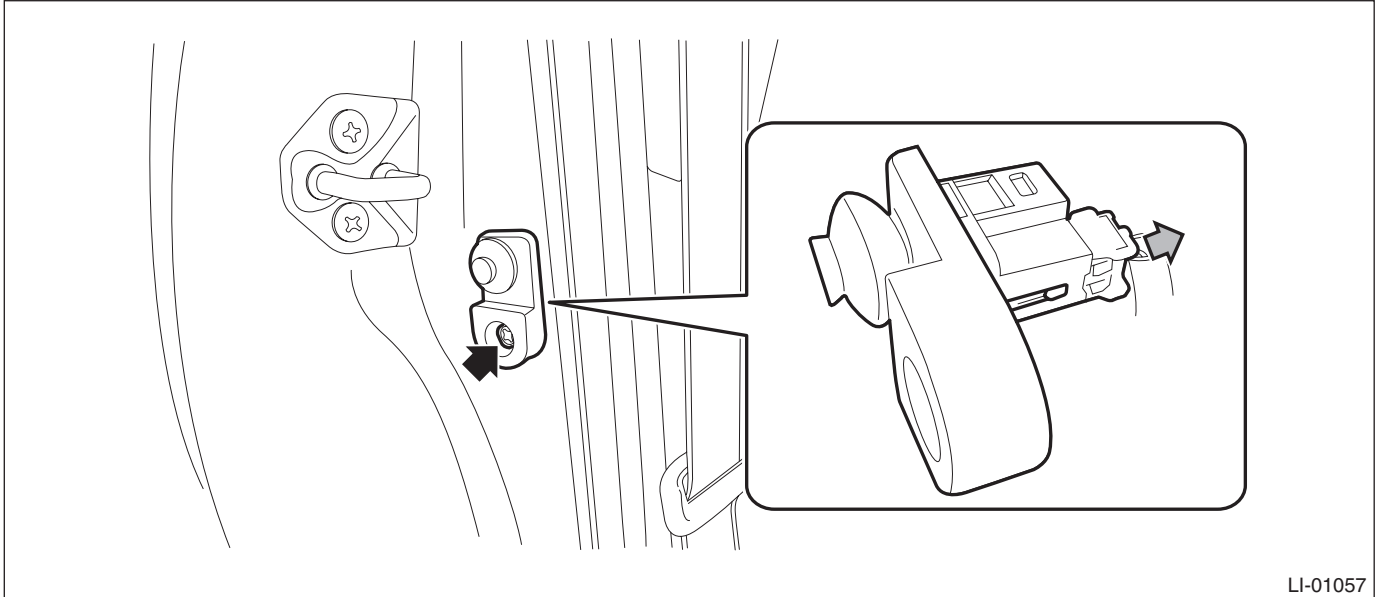

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

Refer to "CHECK DOOR SWITCH" of "Interior Light System". <Ref. to LI-16, CHECK DOOR SWITCH, INSPECTION, Interior Light System.>

WIPER AND WASHER SYSTEMS



	Page
1. General Description	2
2. Wiper and Washer System	8
3. Combination Switch (Wiper)	9
4. Wiper Blade	16
5. Washer Tank and Motor	19
6. Front Wiper Arm	25
7. Front Wiper Motor and Link	27
8. Front Washer Nozzle	33
9. Rear Wiper Arm	38
10. Rear Wiper Motor	40
11. Rear Washer	45