

Wiper and Washer System

WIPER AND WASHER SYSTEMS

2. Wiper and Washer System

A: WIRING DIAGRAM

1. WIPER AND WASHER (FRONT)

Refer to "Front Wiper and Washer System" in the wiring diagram. <Ref. to WI-193, WIRING DIAGRAM, Front Wiper and Washer System.>

2. WIPER AND WASHER (REAR)

Refer to "Rear Wiper and Washer System" in the wiring diagram. <Ref. to WI-258, WIRING DIAGRAM, Rear Wiper and Washer System.>

B: INSPECTION

Symptoms	Repair order
Wiper and washers do not operate.	1. Wiper fuse (F/B No. 14, 15) 2. Combination switch 3. Wiper motor assembly 4. Wiring harness
Wipers do not operate in LO or HI.	1. Combination switch 2. Wiper motor assembly 3. Wiring harness
Wipers do not operate in INT.	1. Combination switch 2. Wiper motor assembly 3. Wiring harness
Washer motor does not operate.	1. Washer switch 2. Washer motor 3. Wiring harness
Wipers do not operate when washer switch is ON.	1. Wiper motor assembly 2. Wiring harness
Washer fluid spray does not operate properly.	1. Washer motor 2. Washer hose and nozzle

C: NOTE

For procedure of each component of the wiper and washer system, refer to the respective sections.

- Combination switch (wiper): <Ref. to WW-9, Combination Switch (Wiper).>
- Wiper blade: <Ref. to WW-16, Wiper Blade.>
- Washer tank and motor: <Ref. to WW-19, Washer Tank and Motor.>
- Front wiper arm: <Ref. to WW-25, Front Wiper Arm.>
- Front wiper motor and link: <Ref. to WW-27, Front Wiper Motor and Link.>
- Front washer nozzle: <Ref. to WW-33, Front Washer Nozzle.>
- Rear wiper arm: <Ref. to WW-38, Rear Wiper Arm.>
- Rear wiper motor: <Ref. to WW-40, Rear Wiper Motor.>
- Rear washer nozzle: <Ref. to WW-45, Rear Washer.>