


## 9. Rear Wiper Arm


### A: REMOVAL

- 1) Pull up the wiper arm cover.
- 2) Remove the nut and remove the wiper arm.

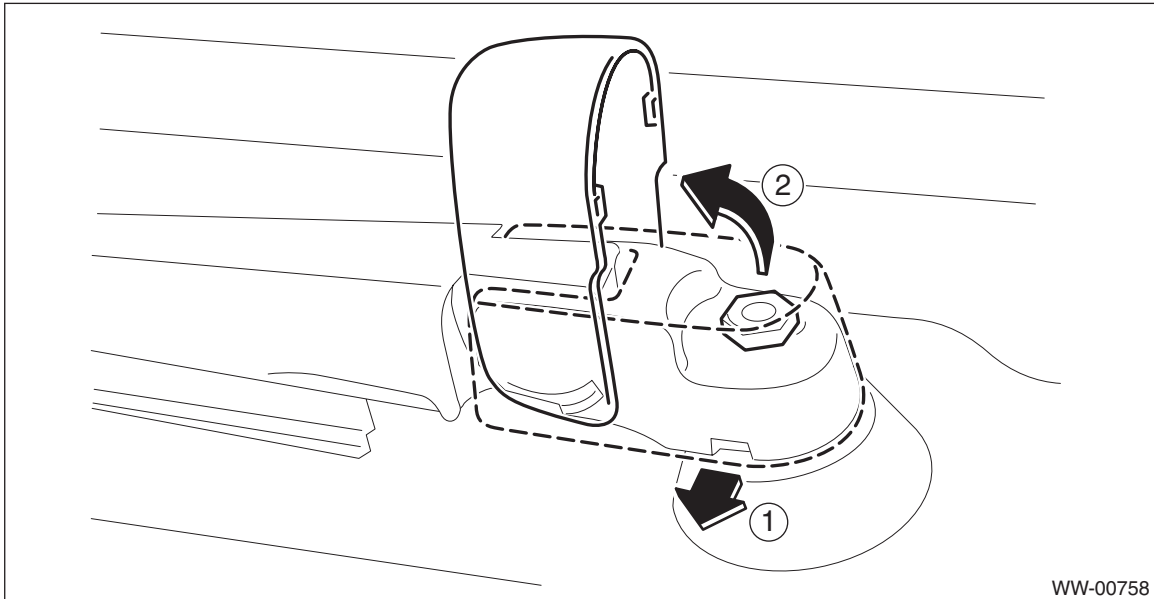

### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Operate the rear wiper once.
- 3) Align the blade with the marking on the glass.

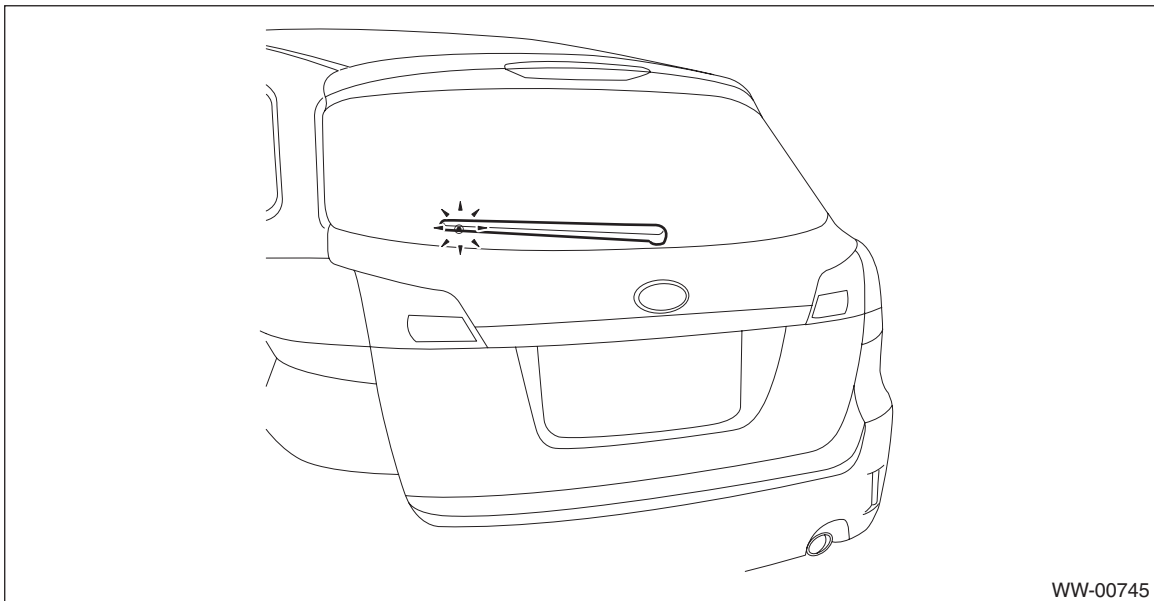


#### **Tightening torque:**

Refer to “COMPONENT” of “General Description”. <Ref. to WW-4, REAR WIPER, COMPONENT, General Description.>

### C: ADJUSTMENT

- 1) Operate the rear wiper once.
- 2) Align the blade with the marking on the glass.

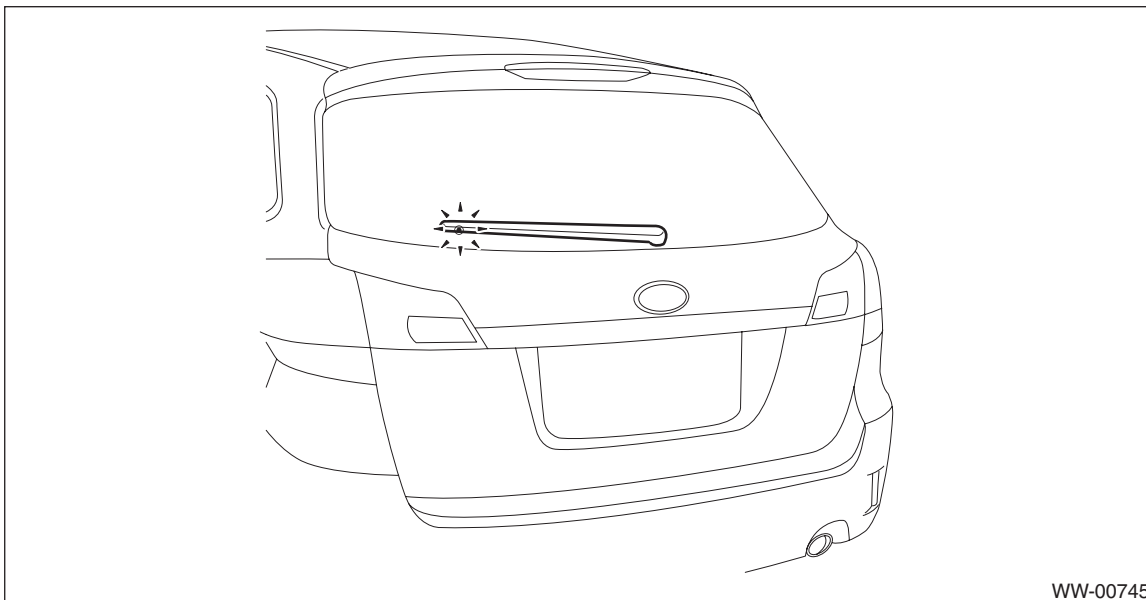

WW-00745