


## 10. Noise Suppressor

### A: REMOVAL


#### 1. SEDAN MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear shelf trim. <Ref. to EI-120, REMOVAL, Rear Shelf Trim.>
- 3) Remove the noise suppressor.
  - (1) Disconnect harness connector from noise suppressor.
  - (2) Remove the harness clamps and bolts and detach the noise suppressor.

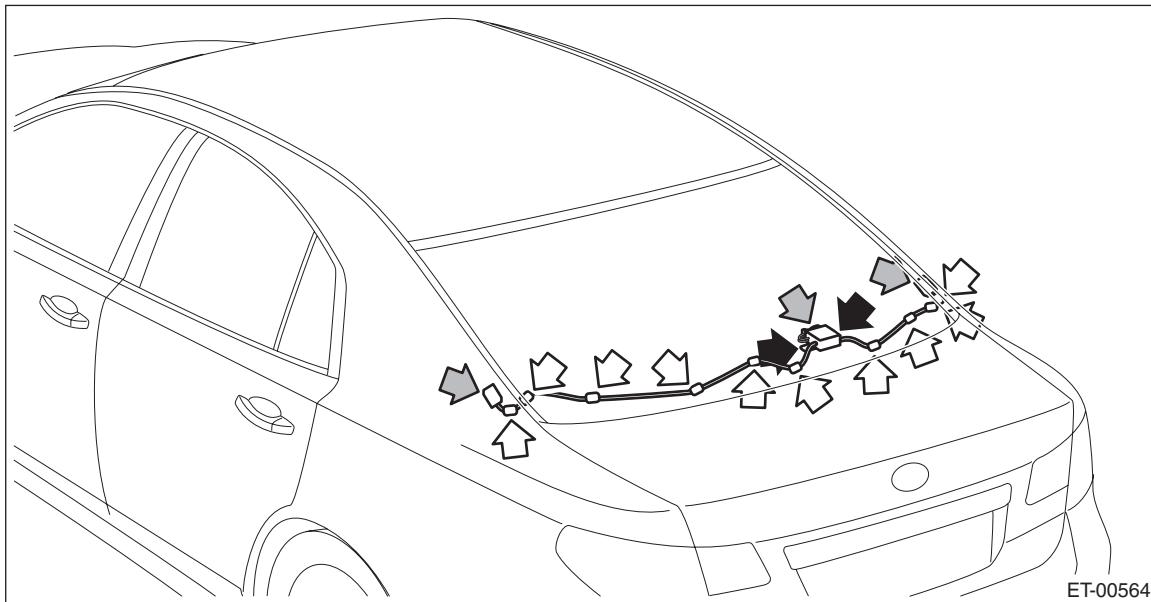

#### 2. OUTBACK MODEL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-164, REMOVAL, Rear Gate Trim.>
- 3) Remove the noise suppressor.
  - (1) Disconnect harness connector from noise suppressor.
  - (2) Remove the harness clamps and bolts and detach the noise suppressor.

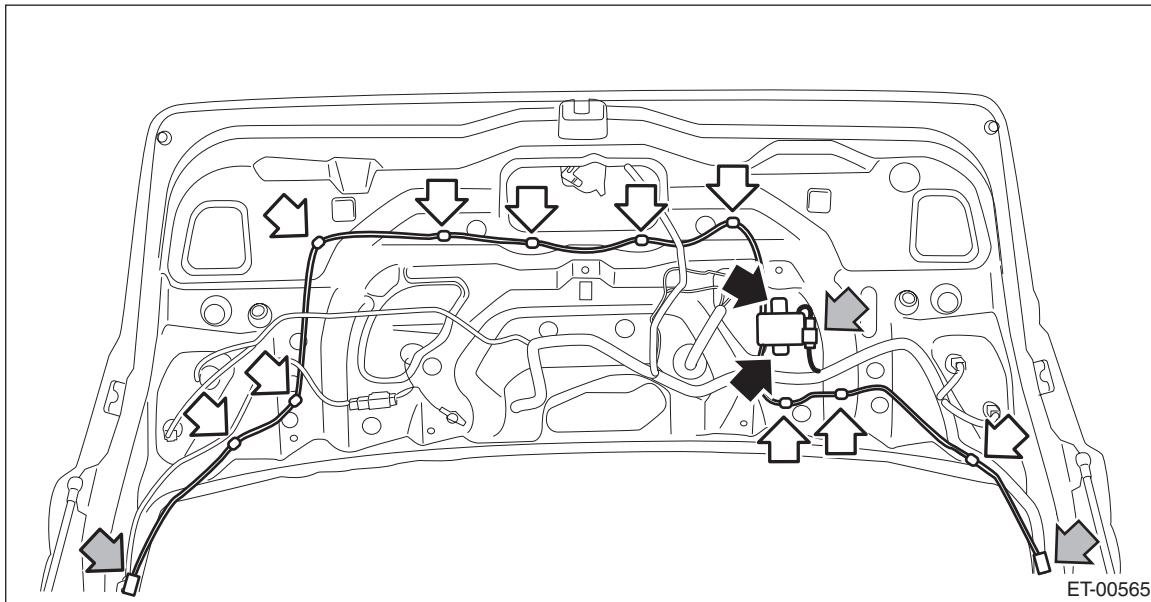

## B: INSTALLATION

Install each part in the reverse order of removal.

***Tightening torque:***

***Noise suppressor: 12 N·m (1.22 kgf·m, 8.9 ft-lb)***