

Differential Side Retainer Oil Seal

AUTOMATIC TRANSMISSION

12. Differential Side Retainer Oil Seal

A: INSPECTION


Check for leakage of gear oil from differential side retainer oil seal part. If there is an oil leak, replace the oil seal.

B: REPLACEMENT

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the under cover. <Ref. to EI-33, REMOVAL, Front Under Cover.>
- 4) Remove the front exhaust pipe. <Ref. to EX(H6DO)-5, REMOVAL, Front Exhaust Pipe.>
- 5) Drain the differential gear oil by removing drain plug using TORX® bit T70.

CAUTION:

- Immediately after the vehicle has been running or after idling for a long time, the differential gear oil will be hot. Be careful not to burn yourself.
- Be careful not to spill the differential gear oil on exhaust pipe to prevent it from emitting smoke or fire. If differential gear oil is spilled on the exhaust pipe, wipe it off completely.

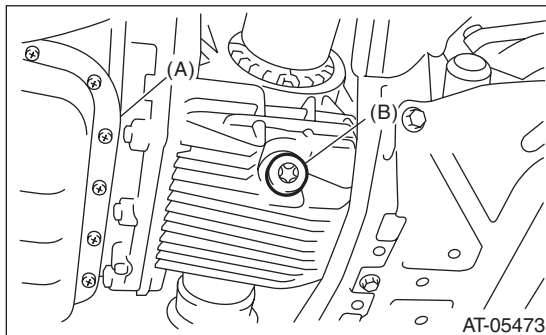

- (A) Oil pan
(B) Drain plug

- 6) Tighten the drain plug.

NOTE:

Use a new gasket.

Tightening torque:

70 N·m (7.1 kgf-m, 51.6 ft-lb)


- 7) Separate the front drive shaft from the transmission. <Ref. to DS-48, REMOVAL, Front Drive Shaft.>

- 8) Remove the differential side retainer oil seal using driver wrapped with vinyl tape etc.
- 9) Using the ST, install the differential side retainer oil seal by lightly tapping with a plastic hammer.

NOTE:

- Use a new oil seal.
- Apply differential gear oil to the oil seal lip.
- Check the identification marks (L, R) during installation not to mix up the oil seal RH and LH.

ST 18675AA000 DIFFERENTIAL SIDE OIL SEAL INSTALLER

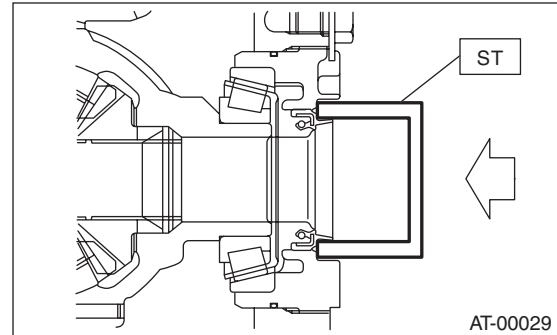

- 10) Install the front drive shaft. <Ref. to DS-49, INSTALLATION, Front Drive Shaft.>
- 11) Install the front exhaust pipe. <Ref. to EX(H6DO)-6, INSTALLATION, Front Exhaust Pipe.>
- 12) Install the under cover. <Ref. to EI-33, INSTALLATION, Front Under Cover.>
- 13) Lower the vehicle.
- 14) Connect the battery ground terminal.
- 15) Pour differential gear oil into the level gauge hole. <Ref. to 5AT-30, Differential Gear Oil.>
- 16) Check the level of differential gear oil. <Ref. to 5AT-30, INSPECTION, Differential Gear Oil.>