


## 21.Oil Charge Pipe

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the under cover. <Ref. to EI-33, REMOVAL, Front Under Cover.>
- 4) Remove the front exhaust pipe. <Ref. to EX(H6DO)-5, REMOVAL, Front Exhaust Pipe.>
- 5) Disconnect the connector from turbine speed sensor 1.
- 6) Remove the oil charge pipe, and then remove the O-ring from flange side.

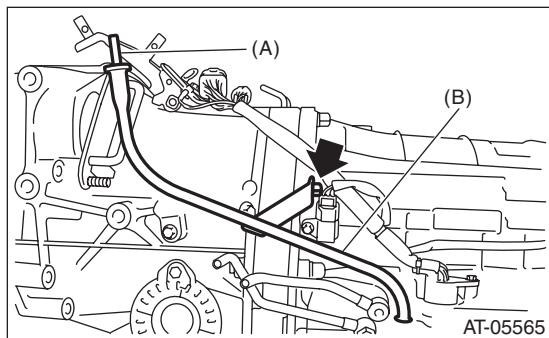

(A) ATF level gauge

(B) Oil charge pipe

### B: INSTALLATION


- 1) Install the oil charge pipe.

NOTE:

Use new gaskets and O-rings.

**Tightening torque:**

**38 N·m (3.9 kgf·m, 28.0 ft-lb)**

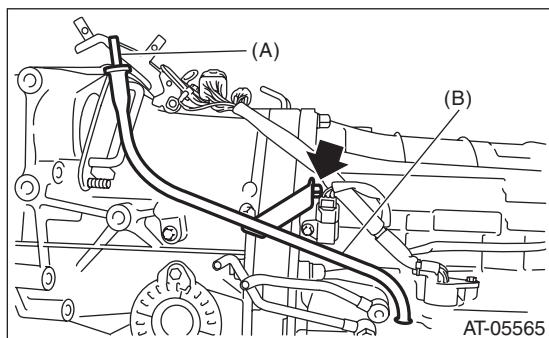

(A) ATF level gauge

(B) Oil charge pipe

- 2) Connect the connector to the turbine speed sensor 1.
- 3) Install the front exhaust pipe. <Ref. to EX(H6DO)-6, INSTALLATION, Front Exhaust Pipe.>
- 4) Install the under cover. <Ref. to EI-33, INSTALLATION, Front Under Cover.>

5) Lower the vehicle.

6) Connect the ground cable to battery.

### C: INSPECTION

- Make sure the oil charge pipe is not deformed or damaged.
- Check that there are no ATF leaks from the O-ring.