


## 23. Drive Plate

### A: REMOVAL

1) Remove the transmission assembly from the vehicle. <Ref. to 5AT-36, REMOVAL, Automatic Transmission Assembly.>

2) Use the ST to lock the crankshaft, and remove the drive plate and reinforcement drive plate.

ST 498497100 CRANKSHAFT STOPPER

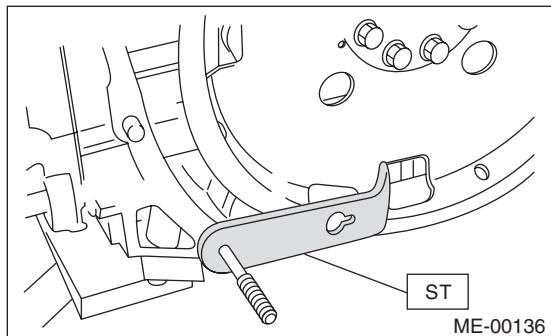


### B: INSTALLATION

1) Temporarily install the drive plate and reinforcement drive plate.

2) Using the ST, lock the crankshaft.

ST 498497100 CRANKSHAFT STOPPER

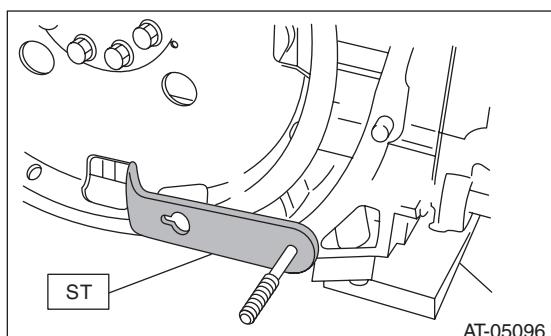

3) Tighten the drive plate mounting bolt.

**NOTE:**

Tighten the drive plate mounting bolts gradually.

Each bolt should be tightened in a crisscross order.

**Tightening torque:**

**90 N·m (9.2 kgf·m, 66.4 ft-lb)**

4) Install the transmission assembly to the vehicle.

<Ref. to 5AT-41, INSTALLATION, Automatic Transmission Assembly.>