


## 26. Rear Drive Shaft

### A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to 5AT-36, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the rear vehicle speed sensor, and then remove the extension case. <Ref. to 5AT-64, REMOVAL, Extension Case.>
- 3) Pull out the rear drive shaft from center differential assembly.

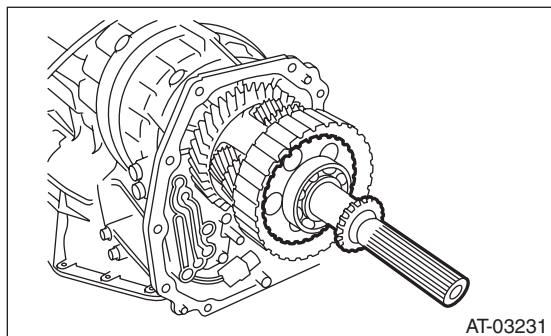


- 4) Remove the drive plate and driven plate.

### B: INSTALLATION

- 1) Select shims. <Ref. to 5AT-66, ADJUSTMENT, Transfer Clutch.>
- 2) Install the drive plate and driven plate.
- 3) Insert the rear drive shaft into the center differential assembly.
- 4) Combine the extension case, and then install the rear vehicle speed sensor. <Ref. to 5AT-64, INSTALLATION, Extension Case.>
- 5) Install the transmission assembly to the vehicle. <Ref. to 5AT-41, INSTALLATION, Automatic Transmission Assembly.>


### C: DISASSEMBLY

- 1) Using a press, remove the revolution gear.

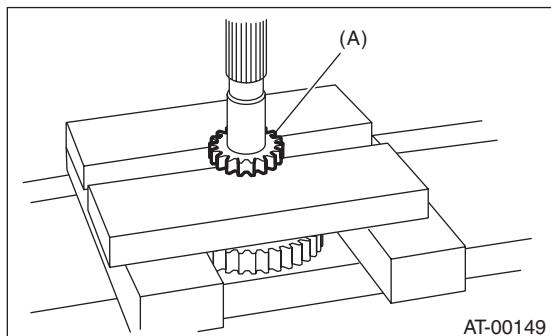

(A) Revolution gear

- 2) Using a press, remove the front and rear side ball bearings and clutch hub.

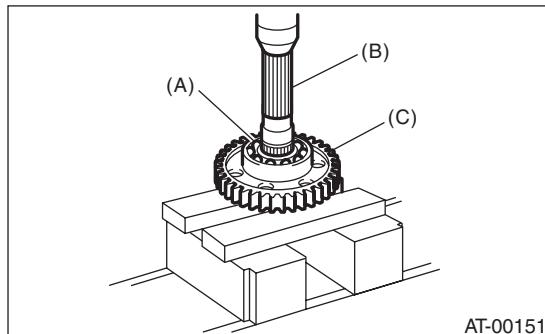


(A) Rear ball bearing  
(B) Rear drive shaft  
(C) Clutch hub

### D: ASSEMBLY

Assemble in the reverse order of disassembly.

#### NOTE:

- Use new ball bearings and revolution gear.
- Make sure the clutch hub is facing the correct direction.

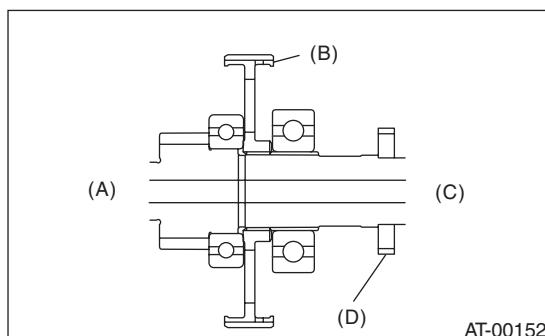

(A) Front side  
(B) Clutch hub  
(C) Rear side  
(D) Revolution gear

### E: INSPECTION

- Check each parts for holes, damages or other foreign matters.
- Inspect the extension end play, and adjust it to within the standard value. <Ref. to 5AT-66, ADJUSTMENT, Transfer Clutch.>