


11. Transmission Mounting System


A: REMOVAL

1. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the center exhaust pipe. <Ref. to EX(H4DO)-12, REMOVAL, Center Exhaust Pipe.>
- 4) Remove the center exhaust cover.

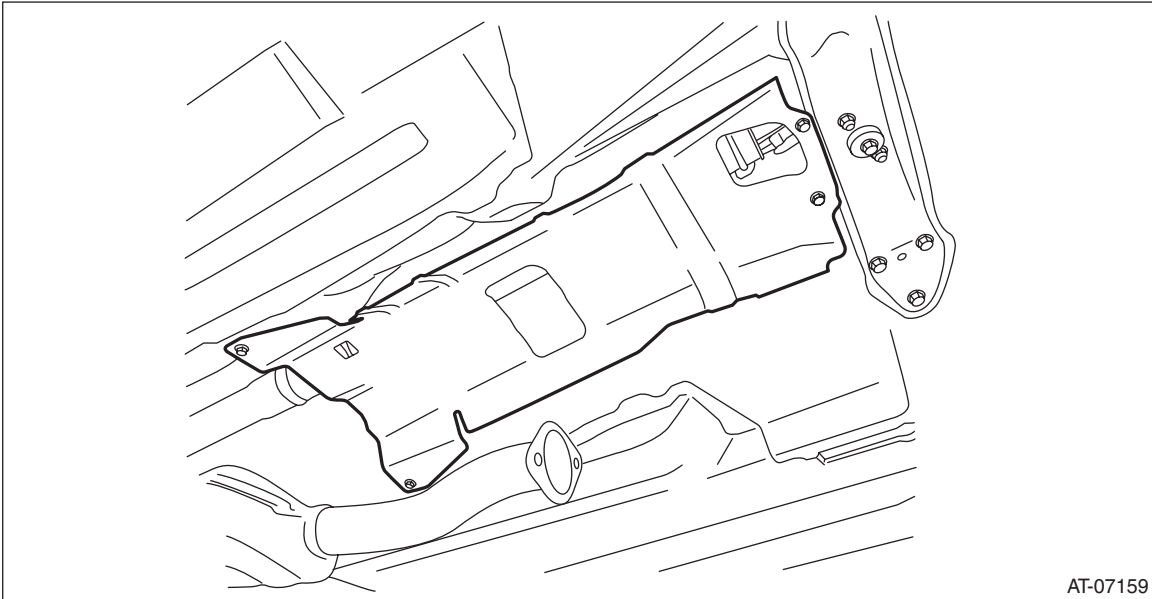


- 5) Set the transmission jack under the transmission. Make sure that the support plate of transmission jack does not touch the oil pan.
- 6) Remove the transmission rear crossmember.

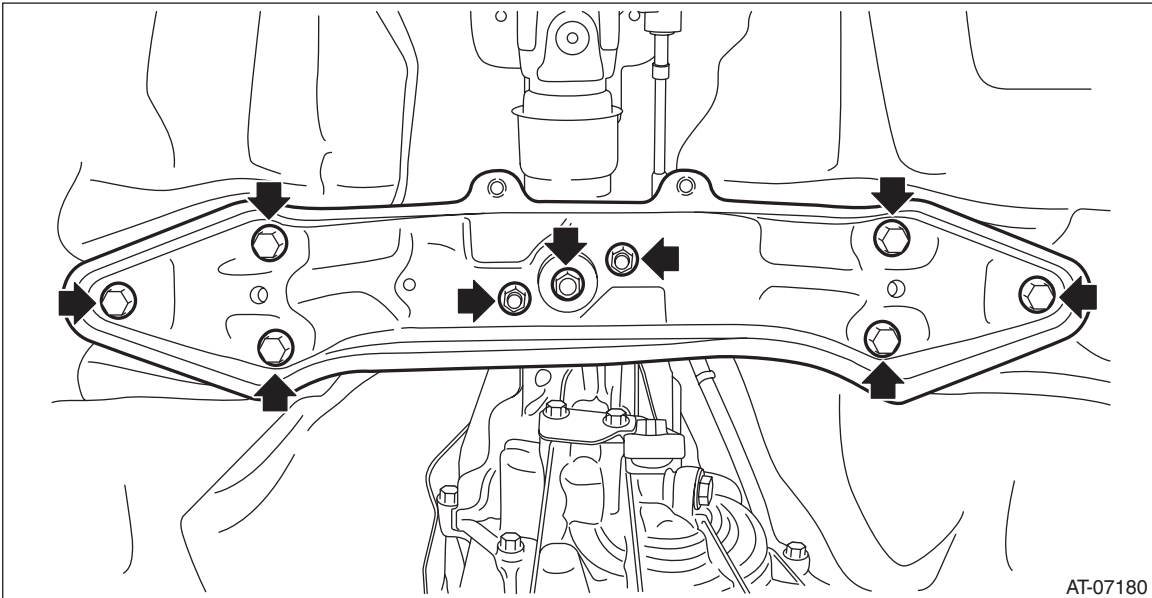

Transmission Mounting System

CONTINUOUSLY VARIABLE TRANSMISSION

7) Remove the rear cushion rubber.

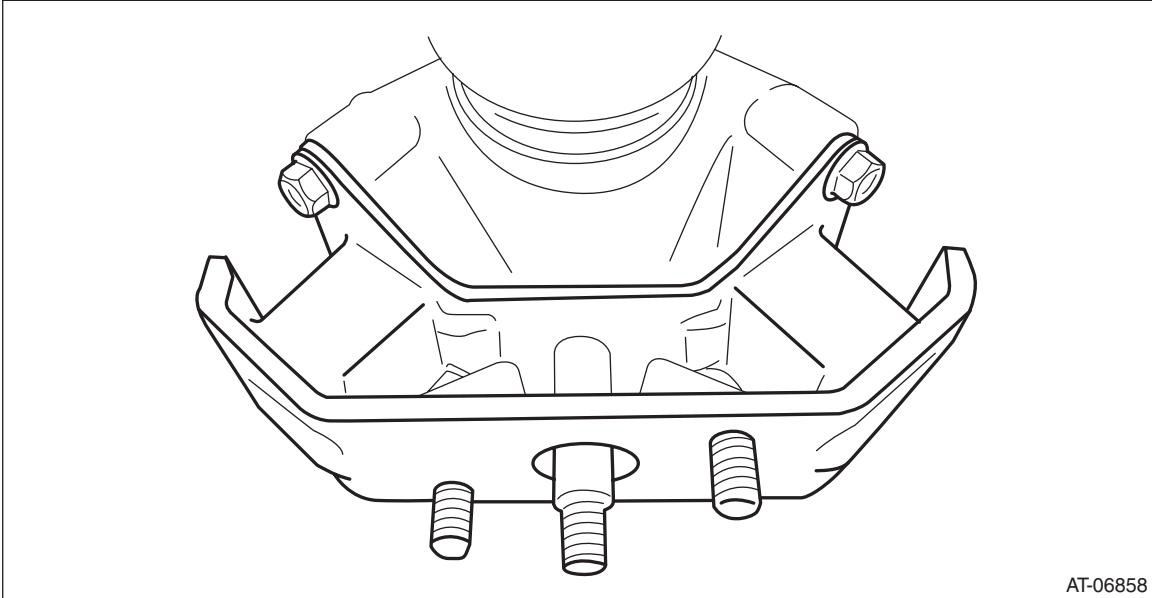


B: INSTALLATION

1. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

1) Attach the rear cushion rubber to the transmission.

Tightening torque:

40 N·m (4.1 kgf-m, 29.5 ft-lb)

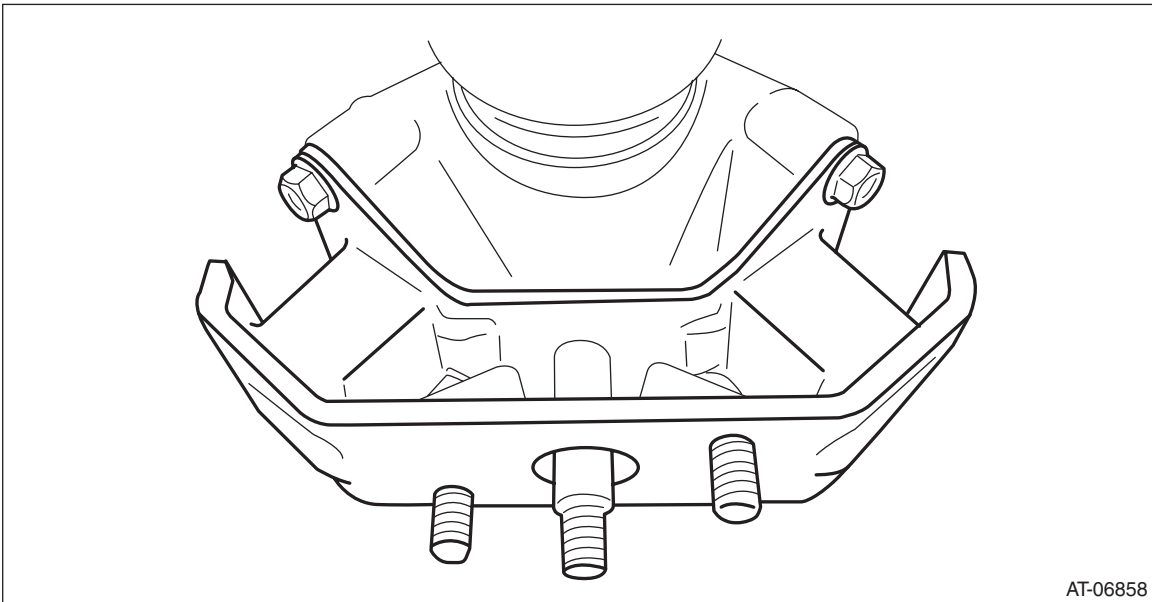

Transmission Mounting System


CONTINUOUSLY VARIABLE TRANSMISSION

2) Install the crossmember.

Tightening torque:

T1: 35 N·m (3.6 kgf-m, 25.8 ft-lb)

T2: 75 N·m (7.6 kgf-m, 55.3 ft-lb)

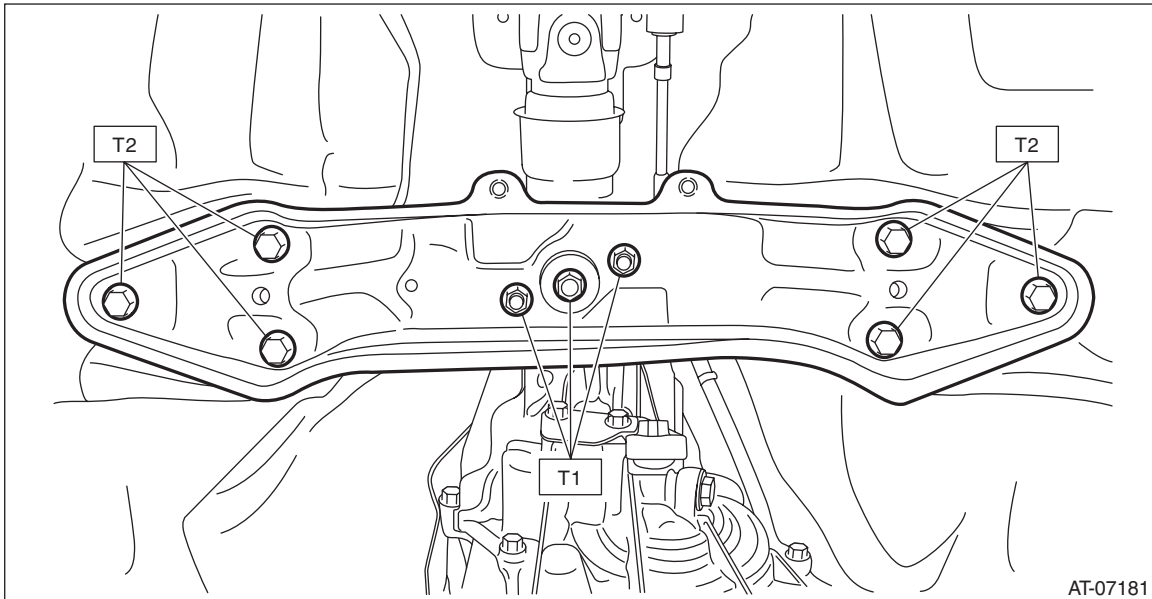


AT-07181

3) Remove the transmission jack.

4) Install the center exhaust cover.

Tightening torque:

18 N·m (1.8 kgf-m, 13.3 ft-lb)

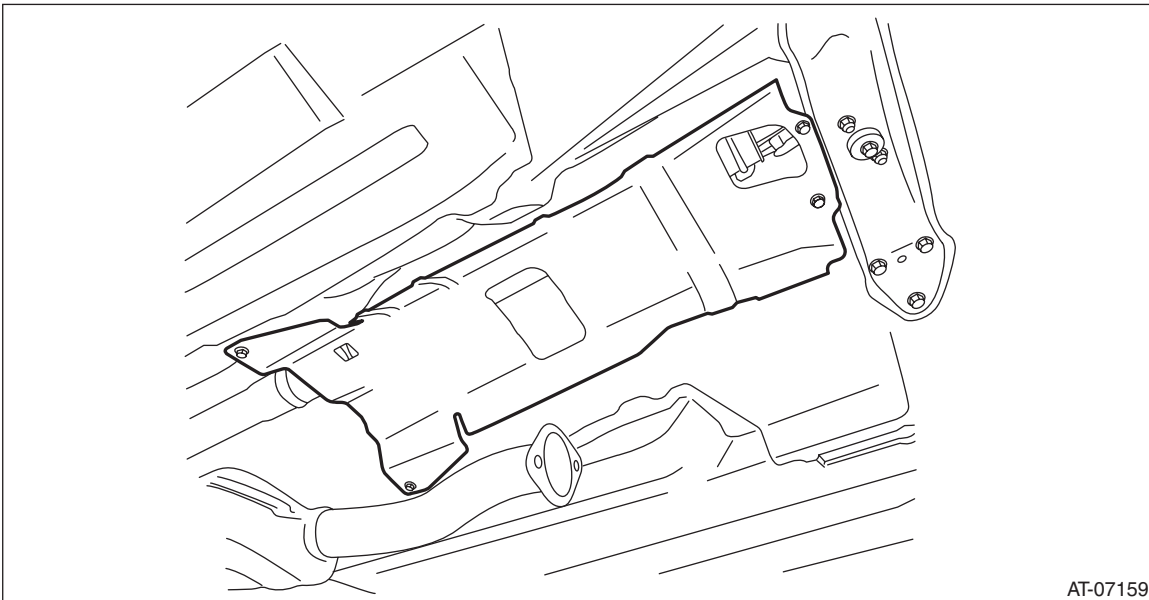

AT-07159

5) Install the center exhaust pipe. <Ref. to EX(H4DO)-12, INSTALLATION, Center Exhaust Pipe.>

6) Connect the battery ground terminal.

C: INSPECTION

- Check the crossmember for bends or damage.
- Check that the cushion rubber is not stiff, cracked or otherwise damaged.