


### 15.Turbine Speed Sensor

#### A: REMOVAL

**CAUTION:**

Be sure to prevent water or oil from contacting the connector terminal of turbine speed sensor. If adhesion occurs, replace with a new part.

- 1) Lift up the vehicle.
- 2) Remove the harness connector from turbine speed sensor.
- 3) Remove the turbine speed sensor.

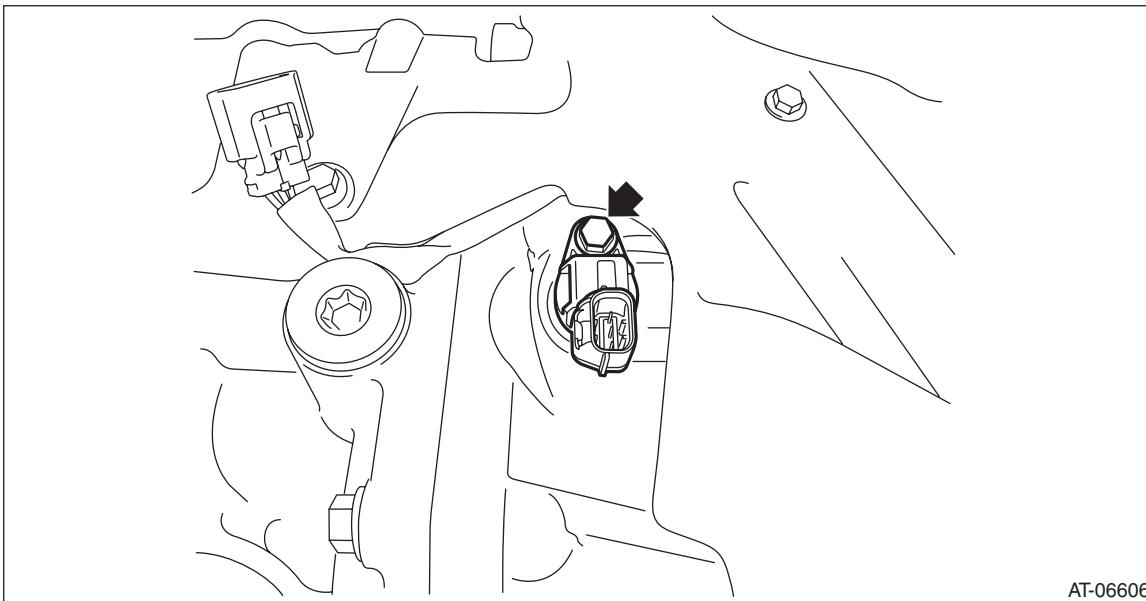

#### B: INSTALLATION

**CAUTION:**

Be sure to prevent water or oil from contacting the connector terminal of turbine speed sensor. If adhesion occurs, replace with a new part.

Install in the reverse order of removal.

**NOTE:**

- Use new O-rings.
- Apply CVTF to the O-ring.

**Tightening torque:**

7 N·m (0.7 kgf·m, 5.2 ft-lb)

# Turbine Speed Sensor


## CONTINUOUSLY VARIABLE TRANSMISSION

### C: INSPECTION

- 1) Remove the instrument panel lower cover. <Ref. to EI-63, REMOVAL, Instrument Panel Lower Cover.>
- 2) Set the probe of oscilloscope to TCM harness connector.

#### Connector & terminal

(B54) No. 20 (+) — No. 1 (-):

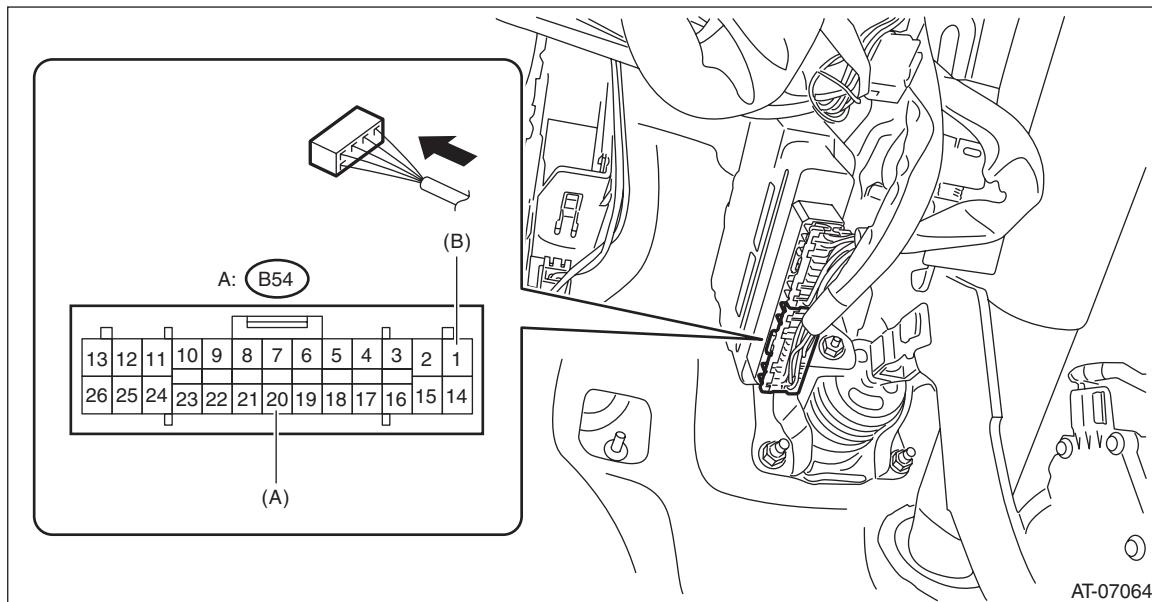

(A) + probe

(B) - probe

- 3) Start and warm up the engine.
- 4) Check the waveform and output voltage of the turbine speed sensor with engine idling.

#### NOTE:

The waveform cycle changes as the speed changes.

