


21. Transmission Harness

A: REMOVAL



1. INHIBITOR HARNESS

- 1) Remove the transmission from the vehicle. <Ref. to CVT-57, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the transmission case cover.

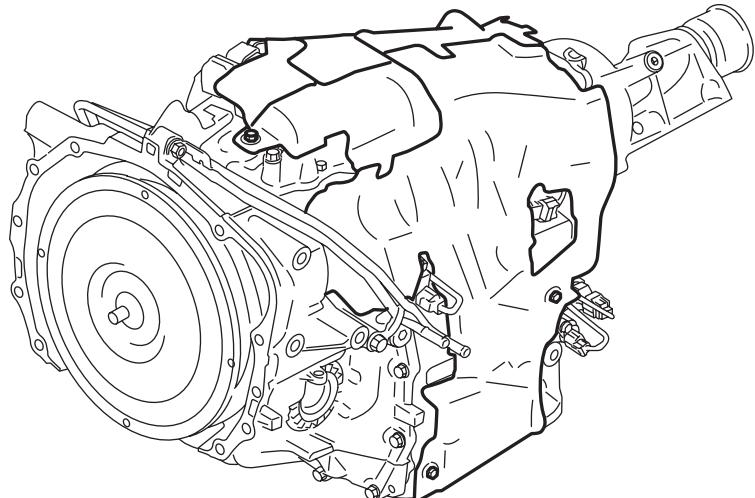

CVT00337

- 3) Remove the harness connector from the ground terminal, turbine speed sensor, primary speed sensor, secondary speed sensor and secondary pressure sensor.

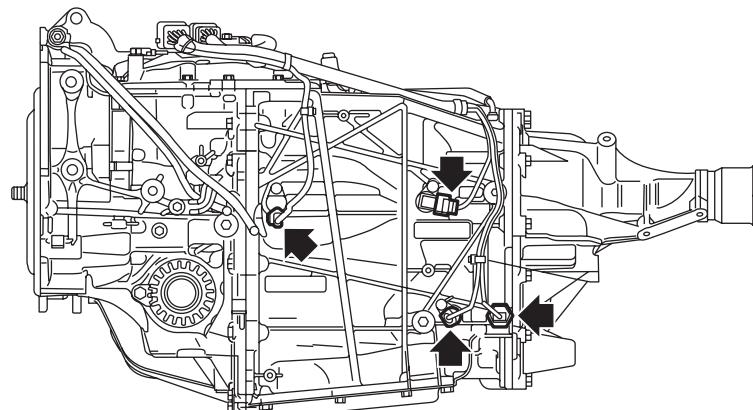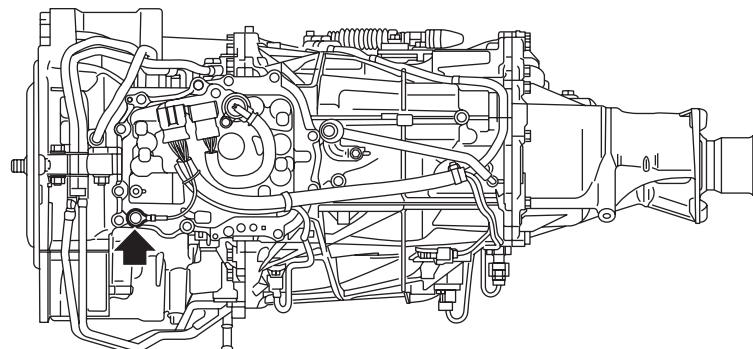


CVT00338


Transmission Harness

CONTINUOUSLY VARIABLE TRANSMISSION

- 4) Remove the harness connector from inhibitor switch.

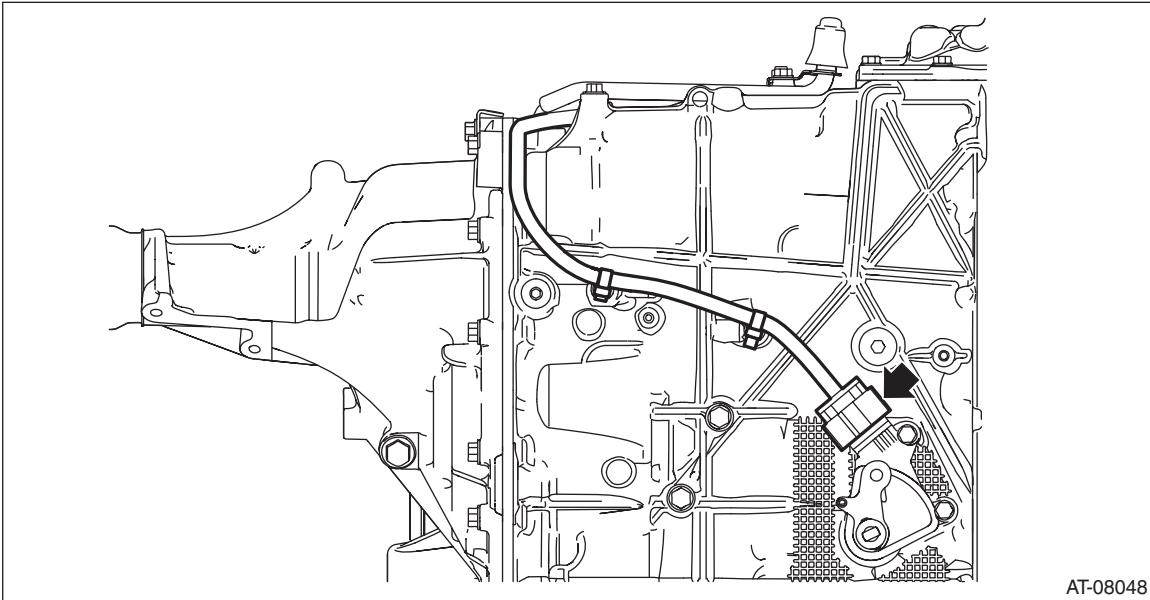

- 5) Remove the inhibitor harness connector from the transmission harness stay.

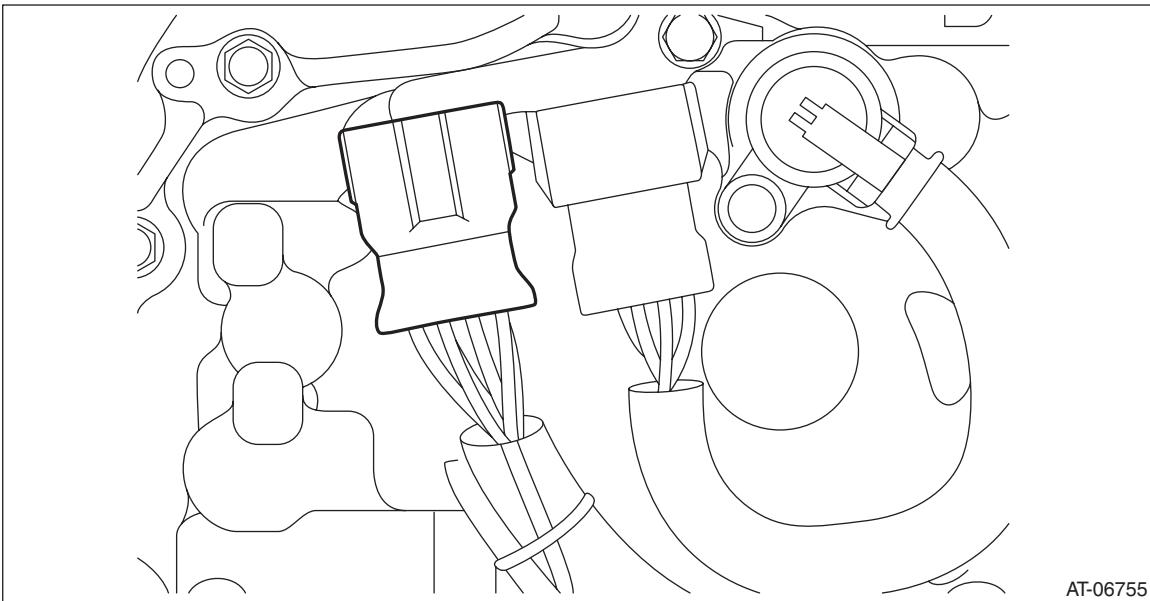


- 6) Remove the harness clip from the transmission, and remove the inhibitor harness.

Transmission Harness


CONTINUOUSLY VARIABLE TRANSMISSION

2. TRANSMISSION HARNESS

- 1) Disconnect the ground cable from battery.
- 2) Remove the clip (A) from the air intake boot.
- 3) Loosen the clamp (B) connecting the air intake boot and air cleaner case (rear).
- 4) Loosen the clamp (C) which connects the air intake boot and throttle body.

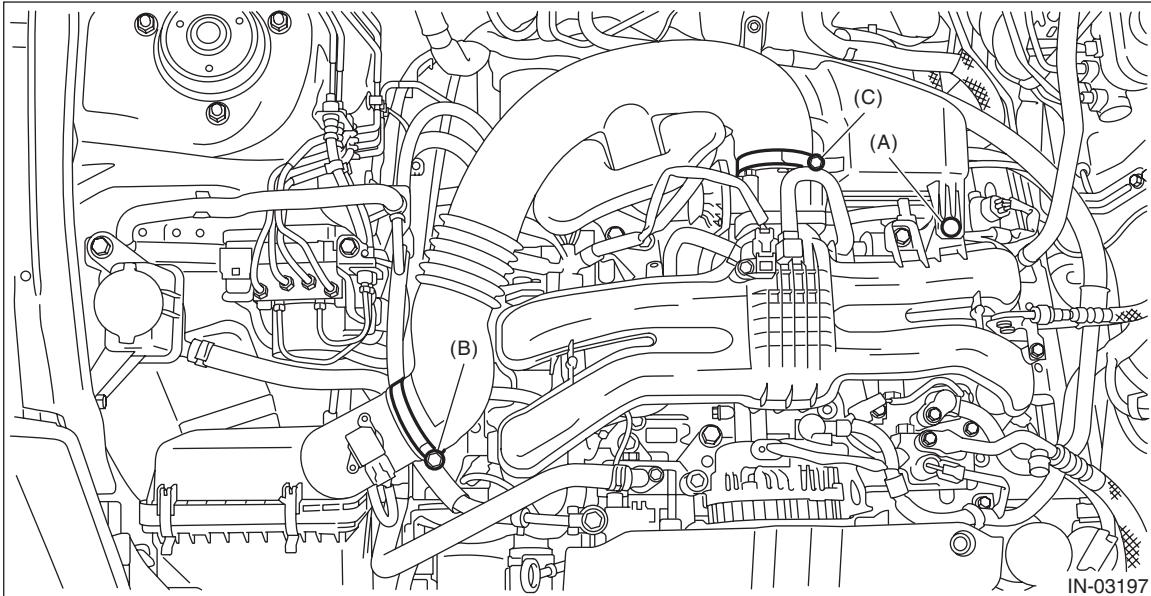

- 5) Remove the air intake boot from the throttle body, and move it to the left side wheel apron.

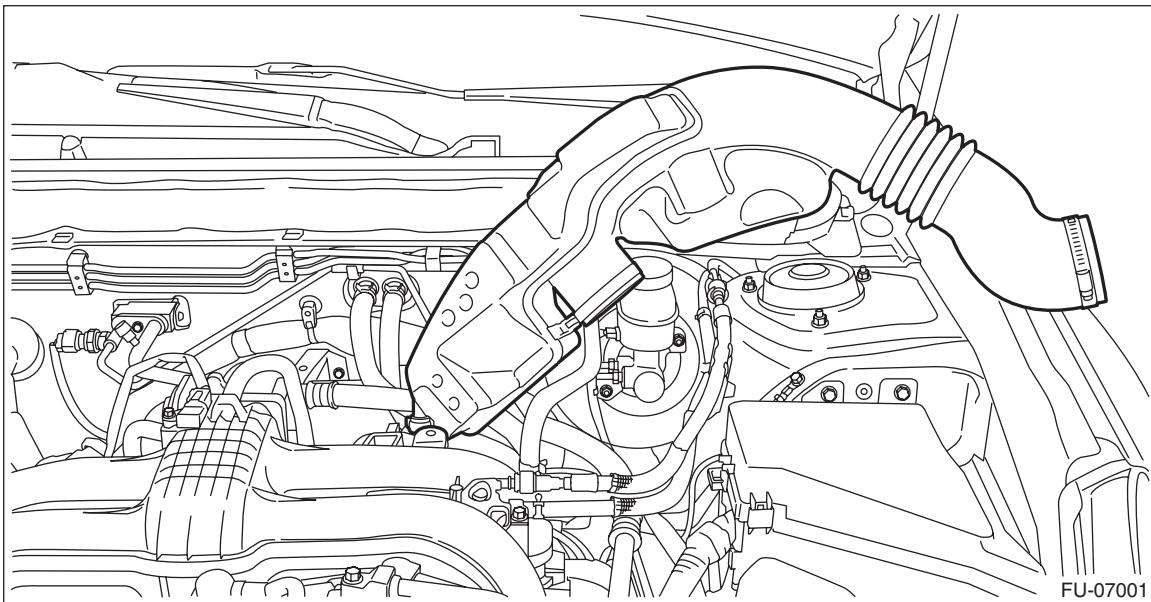


Transmission Harness

CONTINUOUSLY VARIABLE TRANSMISSION

6) Disconnect the following connectors.

- Transmission harness connectors
- Inhibitor harness connector
- Transmission radio ground terminal

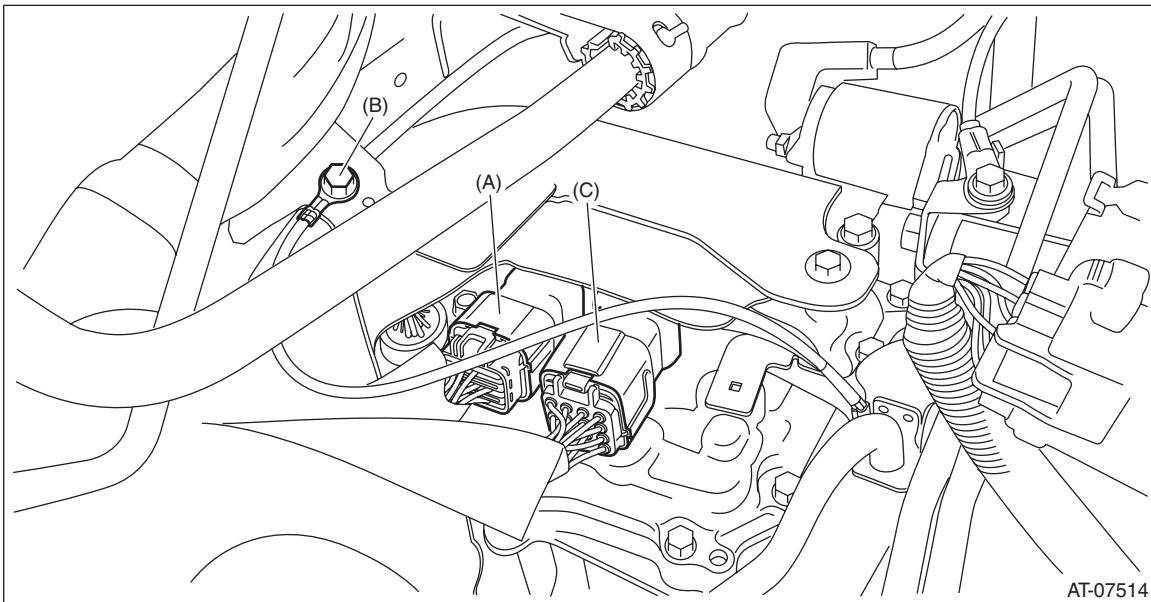


(A) Transmission harness connectors

(B) Transmission radio ground terminal

(C) Inhibitor harness connector


7) Remove the air breather hose from the transmission hanger, and remove the transmission hanger and the transmission radio ground cord.

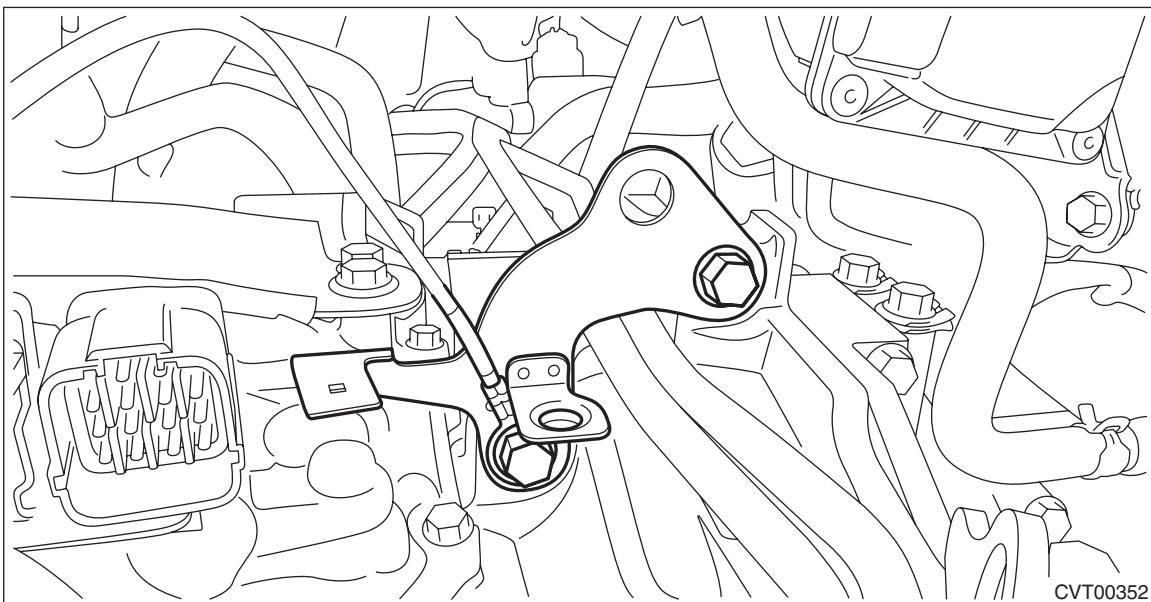


Transmission Harness

CONTINUOUSLY VARIABLE TRANSMISSION

8) Remove the transmission case cover.

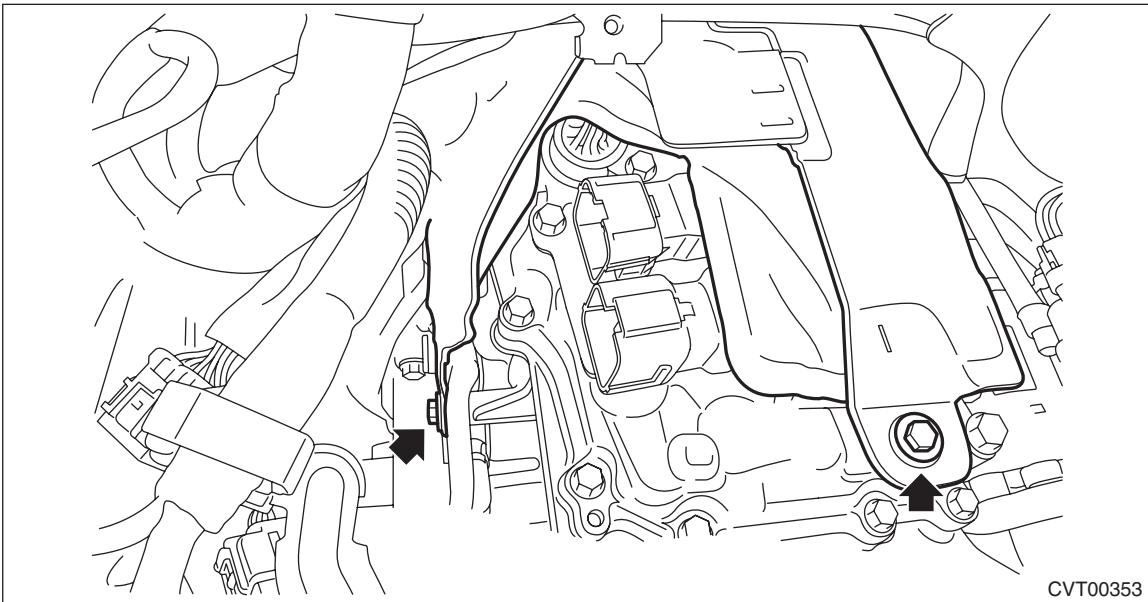

9) Remove the transmission harness stay and ground terminal.

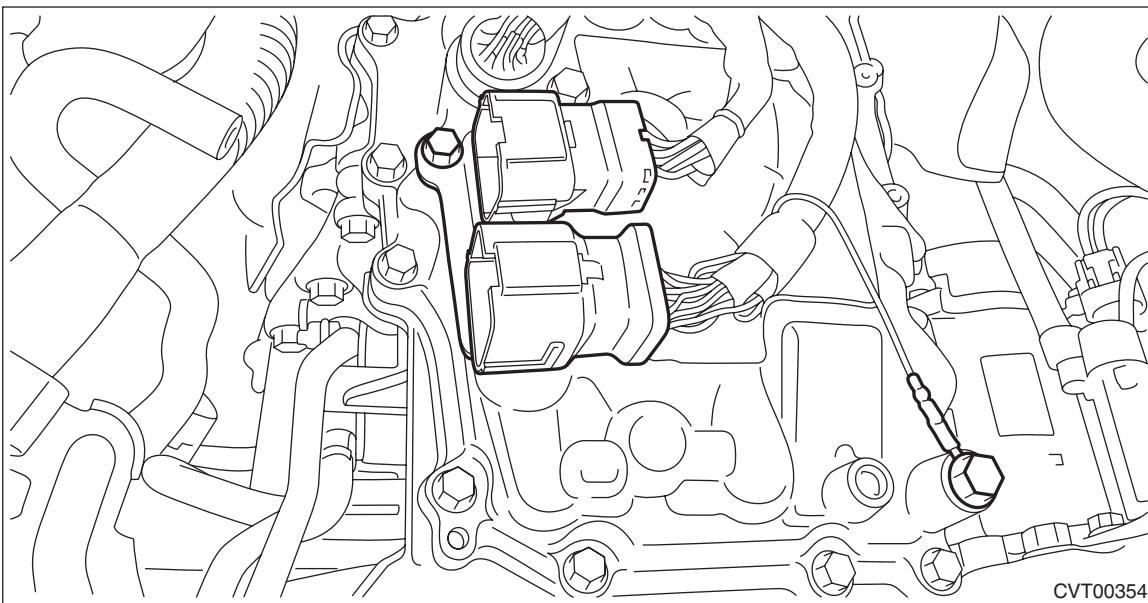

10) Remove the transmission harness connector from the harness stay.


11) Clean the transmission exterior.

Transmission Harness


CONTINUOUSLY VARIABLE TRANSMISSION

12) Set the ST on the vehicle.

ST 18761AA010 SHEET SPECIAL TOOL

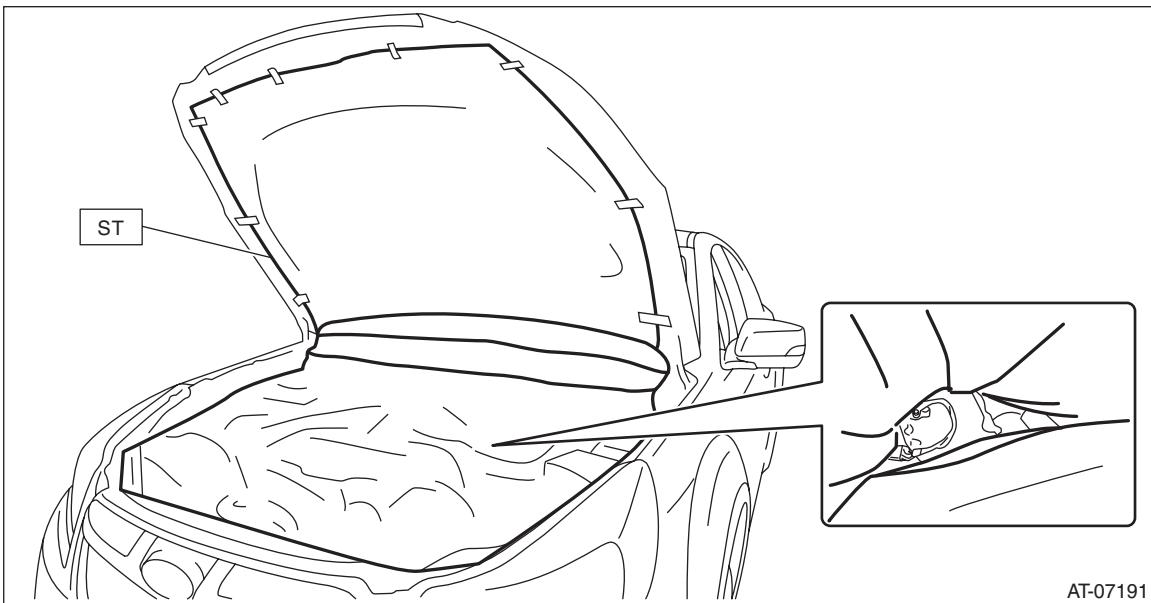

13) Remove the valve cover and gasket.

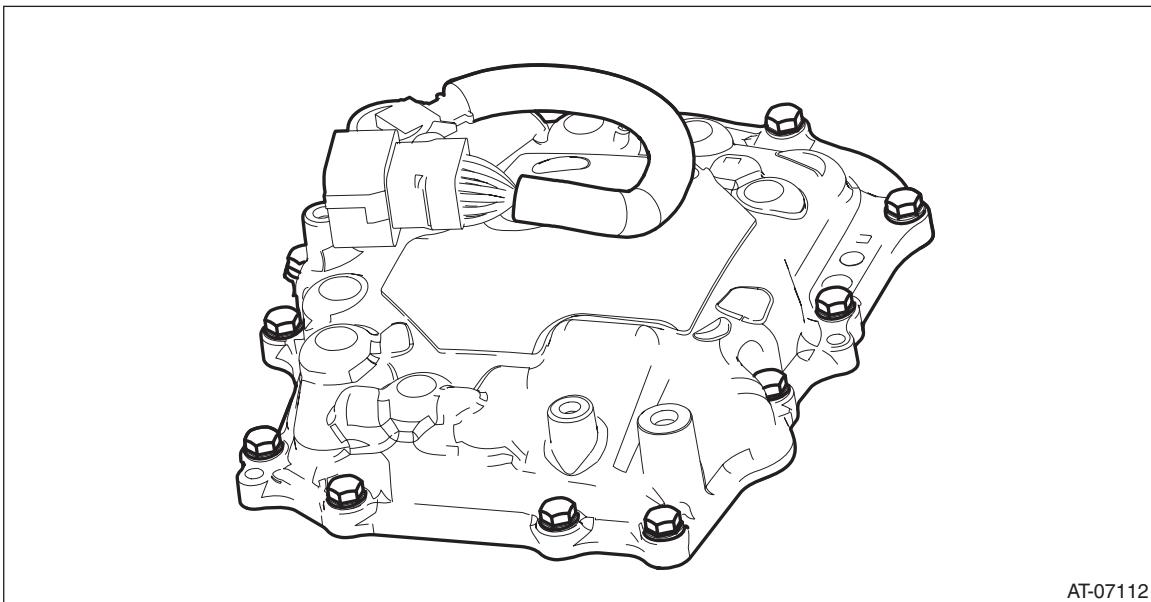


14) Remove the transmission harness connector from the control valve body.

Transmission Harness


CONTINUOUSLY VARIABLE TRANSMISSION

15) Remove the transmission harness from the valve cover.

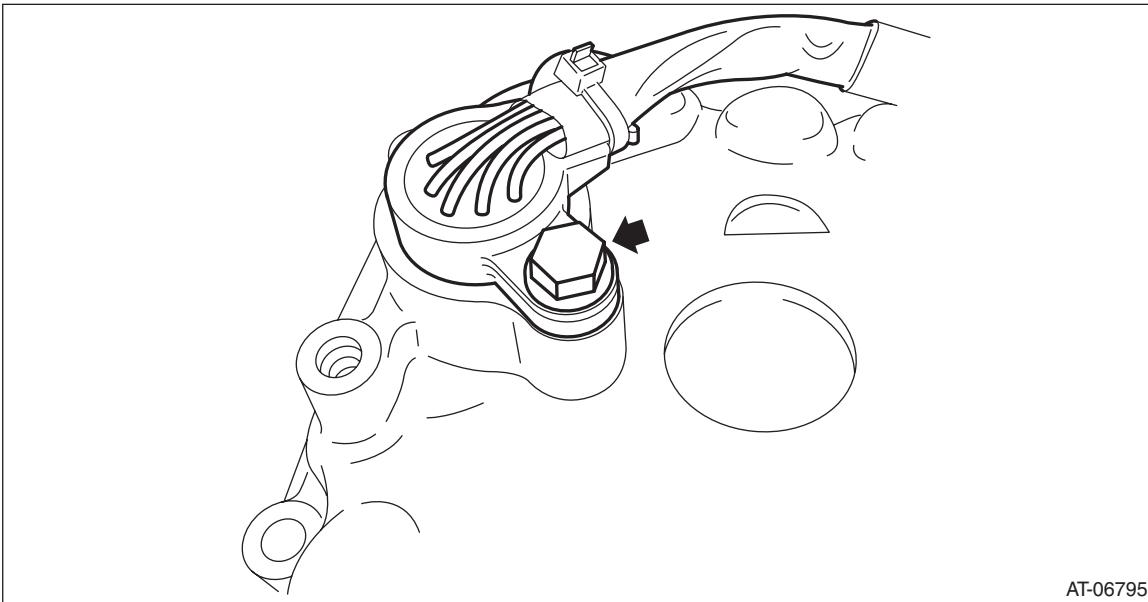

AT-06795

16) Remove the O-ring from the transmission harness.

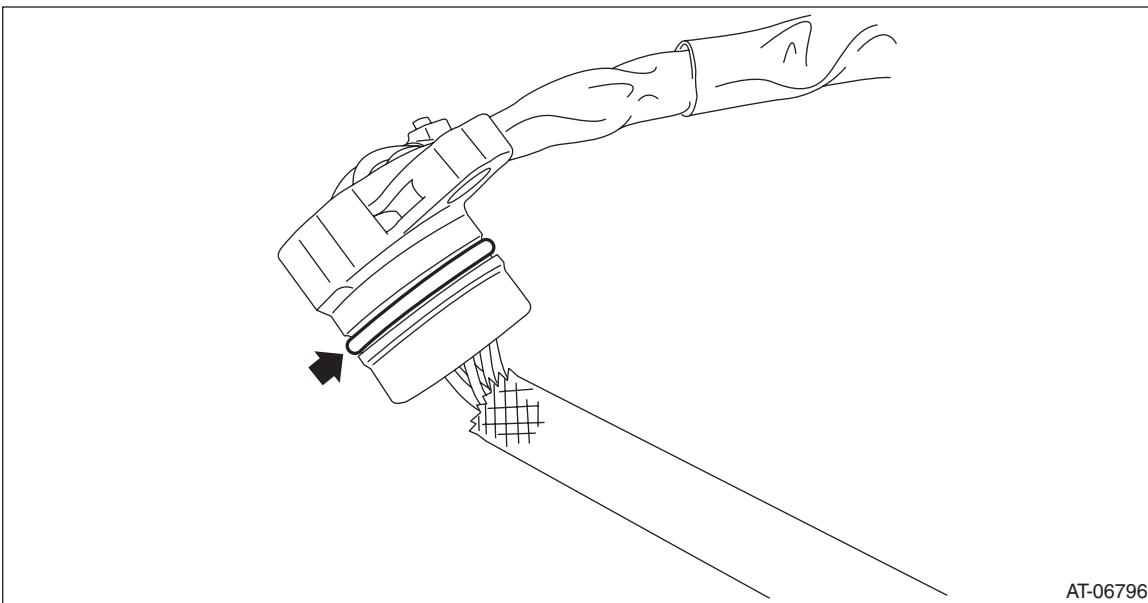

AT-06796

Transmission Harness

CONTINUOUSLY VARIABLE TRANSMISSION

B: INSTALLATION

1. INHIBITOR HARNESS

Install in the reverse order of removal.


NOTE:

Install the transmission ground terminal in the direction within the range of approx. 30° (A).

Tightening torque:

T1: 7 N·m (0.7 kgf-m, 3.7 ft-lb)

T2: 14 N·m (1.4 kgf-m, 10.3 ft-lb)

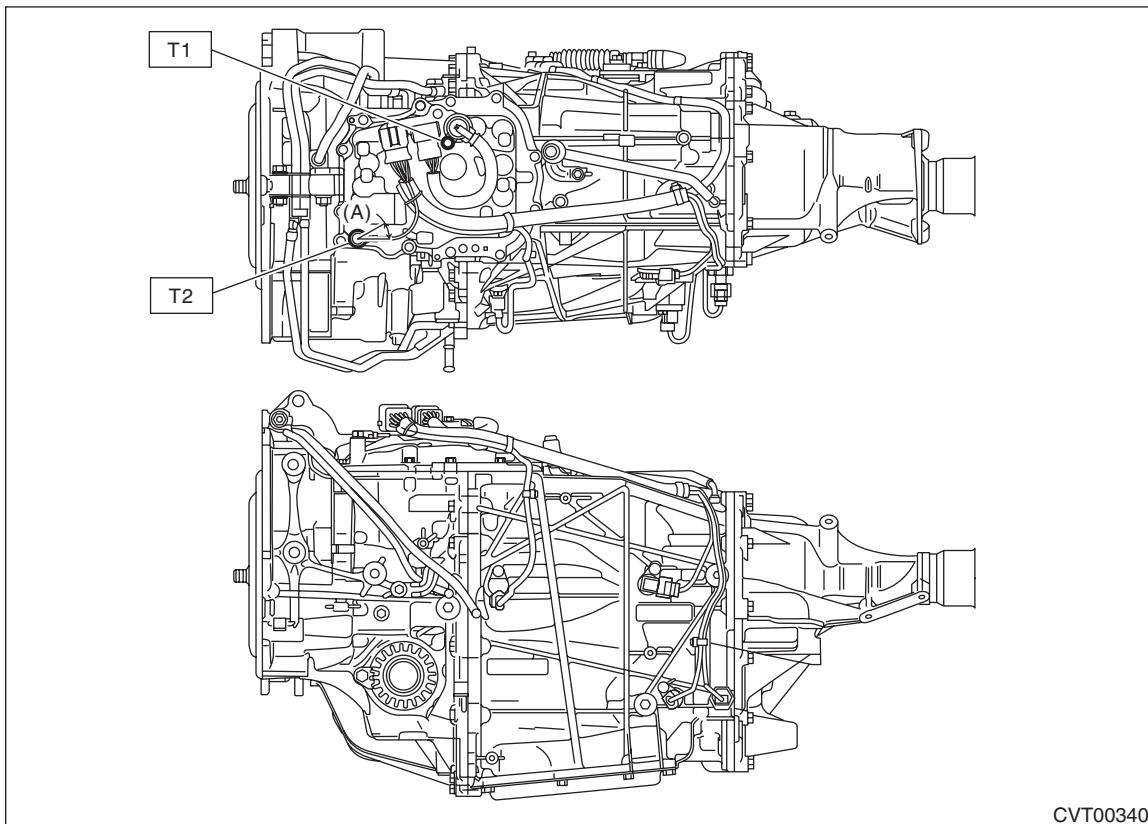


2. TRANSMISSION HARNESS

- 1) Clean the mating surface of valve cover and transmission side.
- 2) Check the control valve body for dust and other foreign matter.
- 3) Install the O-ring to the transmission harness.

NOTE:


- Use new O-rings.
- Apply CVTF to the O-ring.

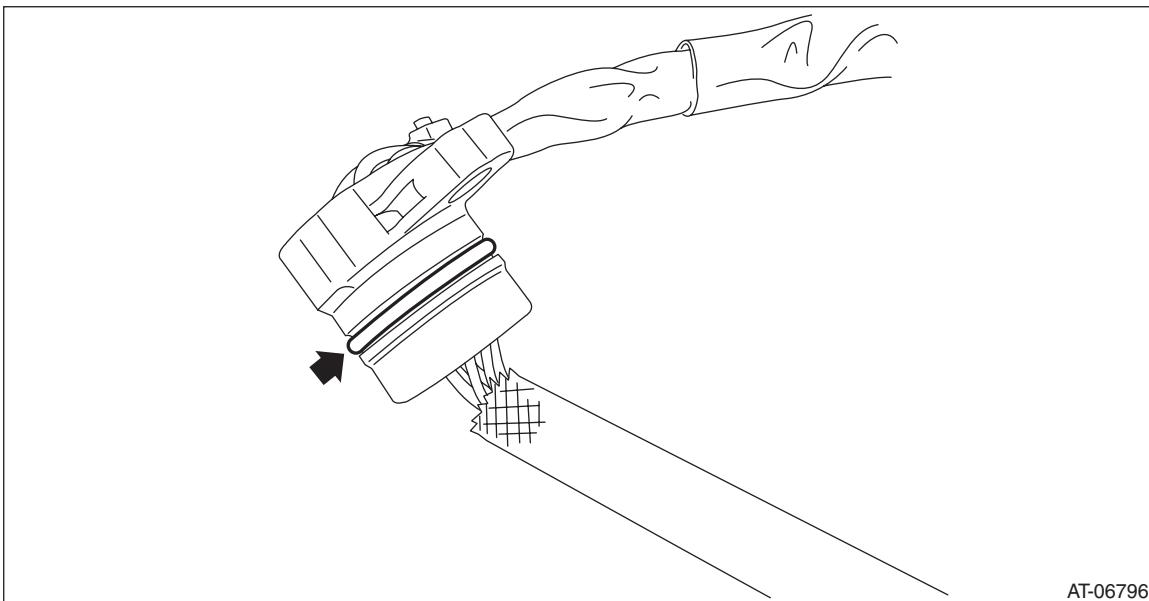

- 4) Install the transmission harness to the valve cover.

Tightening torque:

7 N·m (0.7 kgf·m, 5.2 ft-lb)

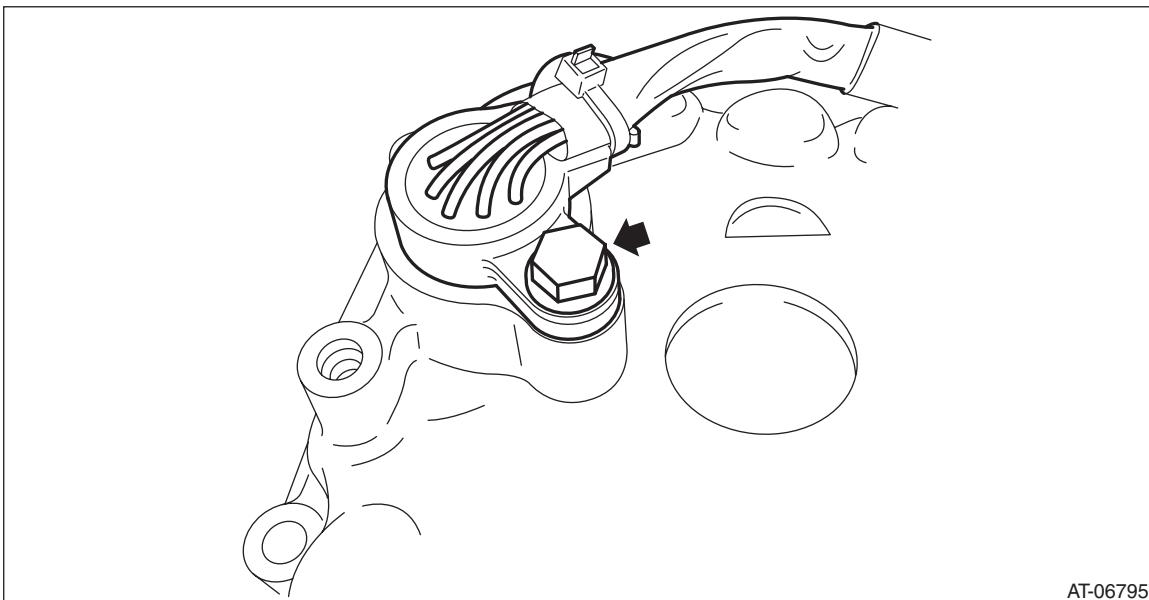

Transmission Harness

CONTINUOUSLY VARIABLE TRANSMISSION

5) Install the gasket to the transmission.


NOTE:

Use a new gasket.

6) Apply liquid gasket to the oval hole of gasket.

Liquid gasket:

THREE BOND 1215 (Part No. 004403007) or equivalent

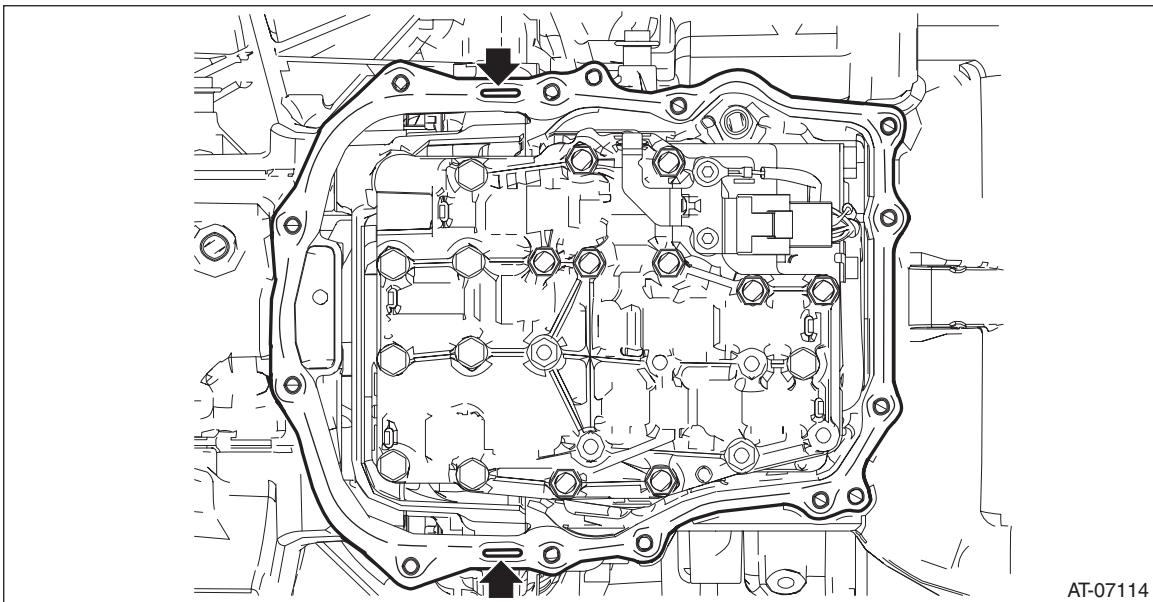


7) Connect the transmission harness connector to the control valve body, and install the valve cover.

CAUTION:

Be careful not to catch the sheet of the ST.

Tightening torque:

8 N·m (0.8 kgf·m, 5.9 ft-lb)

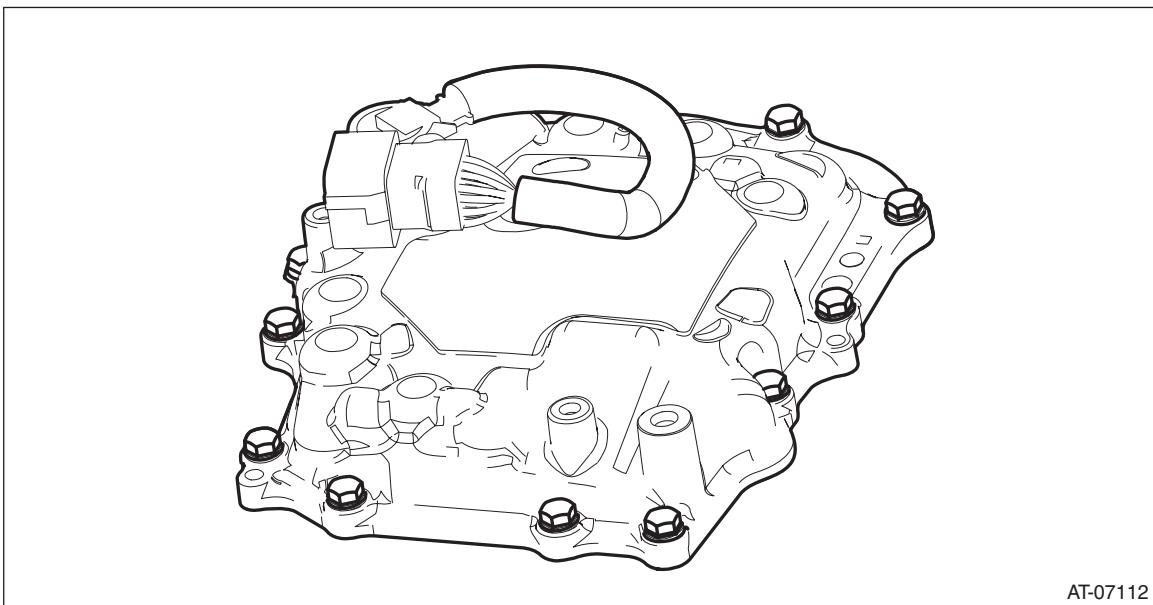

8) Remove the ST (SHEET SPECIAL TOOL).

9) Install the transmission harness connector to the harness stay.

Transmission Harness

CONTINUOUSLY VARIABLE TRANSMISSION

- 10) Install the transmission harness stay and transmission ground terminal.


NOTE:

Install the transmission ground terminal in the direction within the range of approx. 30° (A).

Tightening torque:

T1: 7 N·m (0.7 kgf-m, 5.2 ft-lb)


T2: 14 N·m (1.4 kgf-m, 10.3 ft-lb)

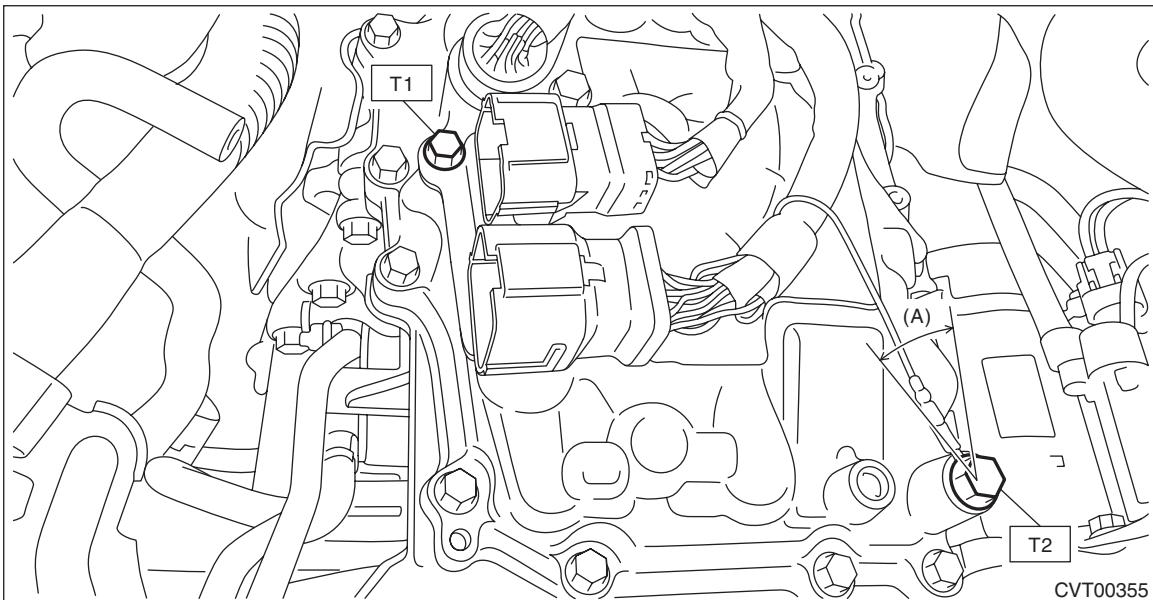

- 11) Install the transmission case cover.

Tightening torque:

8 N·m (0.8 kgf-m, 5.9 ft-lb)

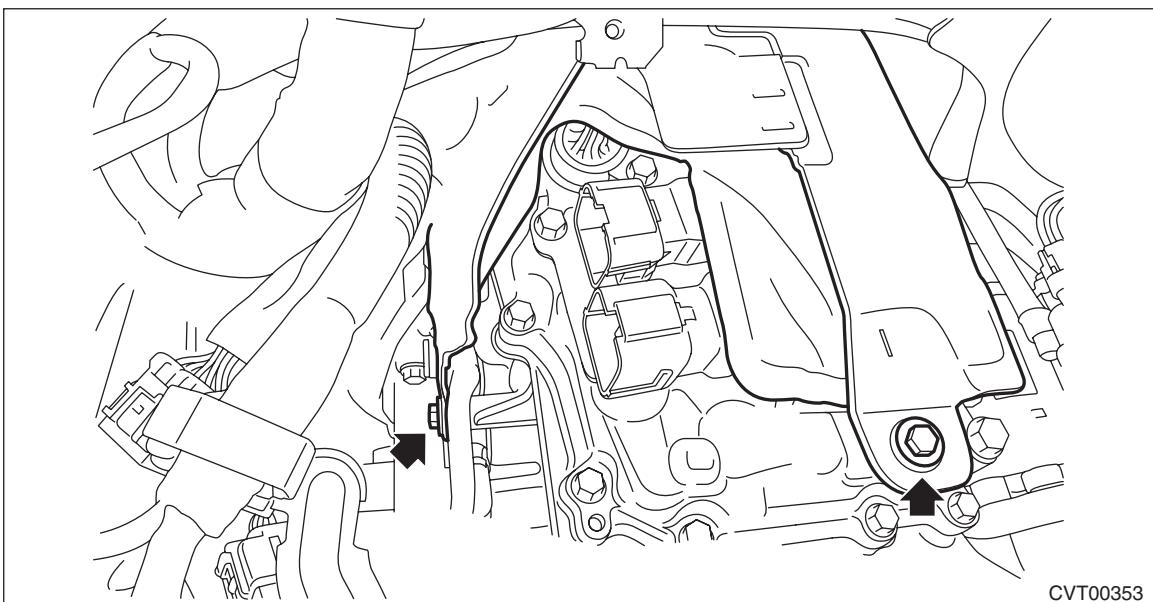


Transmission Harness

CONTINUOUSLY VARIABLE TRANSMISSION

12) Install the transmission hanger and transmission radio ground cord.

Tightening torque:

41 N·m (4.2 kgf·m, 30.2 ft-lb)

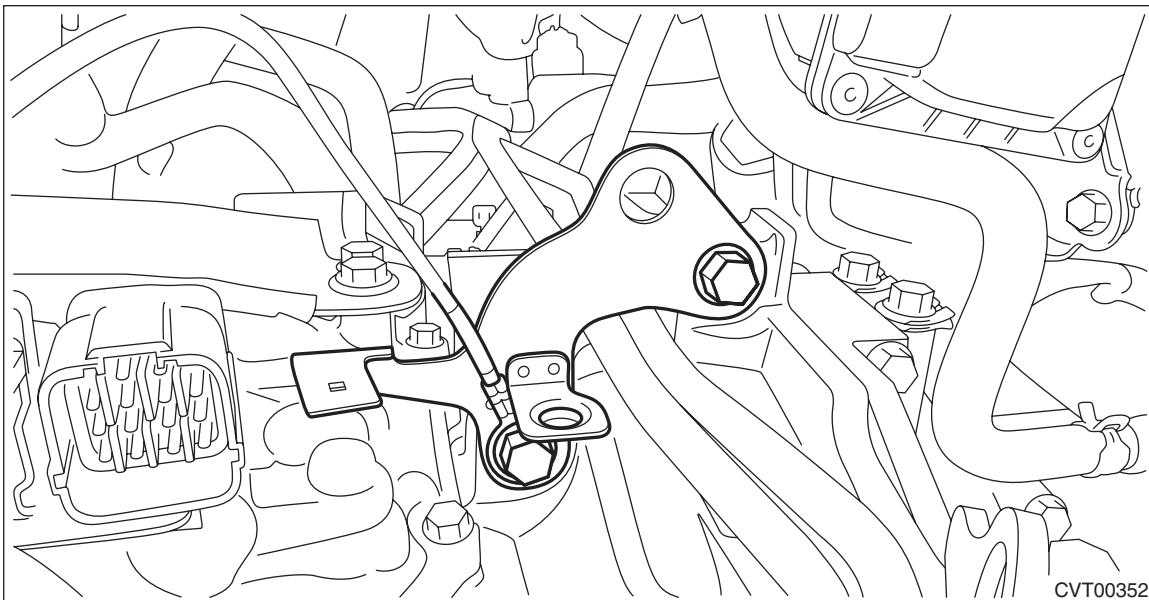


13) Attach the air breather hose to the transmission hanger.

14) Connect the following harness connectors.

- Transmission harness connectors
- Inhibitor harness connector
- Transmission radio ground terminal

Tightening torque:

13 N·m (1.3 kgf·m, 9.6 ft-lb)

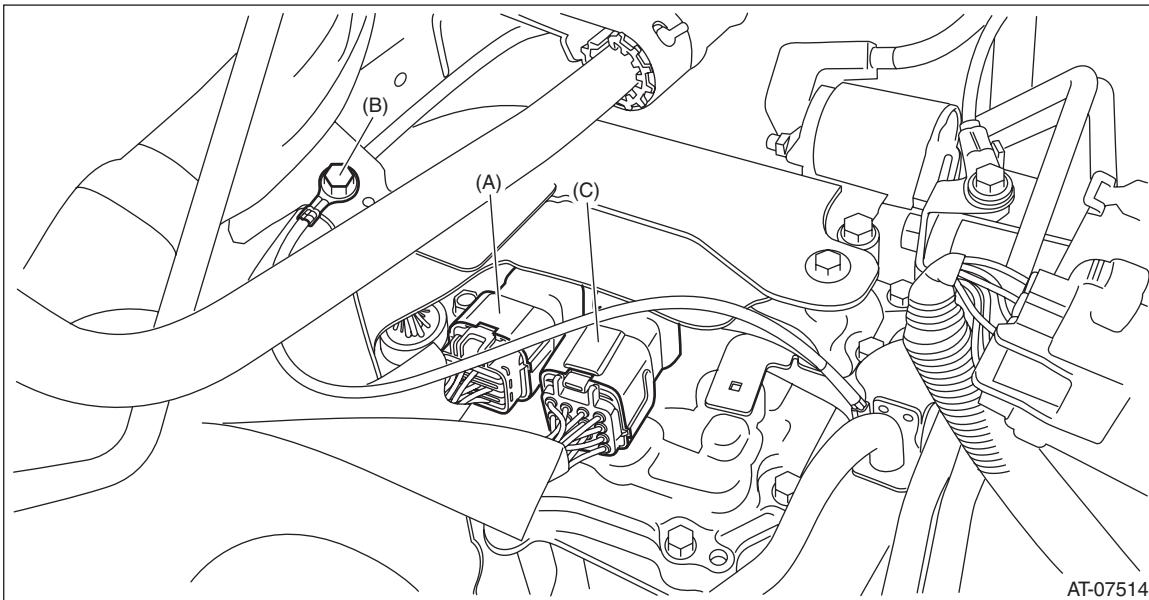

(A) Transmission harness connectors

(B) Transmission radio ground terminal

(C) Inhibitor harness connector

15) Install the air intake boot assembly. <Ref. to IN(H4DO)-13, INSTALLATION, Air Intake Boot.>

16) Adjust the CVTF level. <Ref. to CVT-36, ADJUSTMENT, CVTF.>

C: INSPECTION

- 1) Visually check the harness and connector for damage or crack.
- 2) Check the harness terminal for rust, disconnection or poor contact.
- 3) Check the continuity between harness terminals.

NOTE:

For details of transmission harness circuit, refer to wiring diagram. <Ref. to WI-114, WIRING DIAGRAM, CVT Control System.>

Harness continuity standard

Less than 1 Ω