


24. Air Breather Hose


A: REMOVAL

1. FRONT DIFFERENTIAL SIDE


- 1) Remove the clip (A) from the air intake boot.
- 2) Loosen the clamp (B) connecting the air intake boot and air cleaner case (rear).
- 3) Loosen the clamp (C) which connects the air intake boot and throttle body.

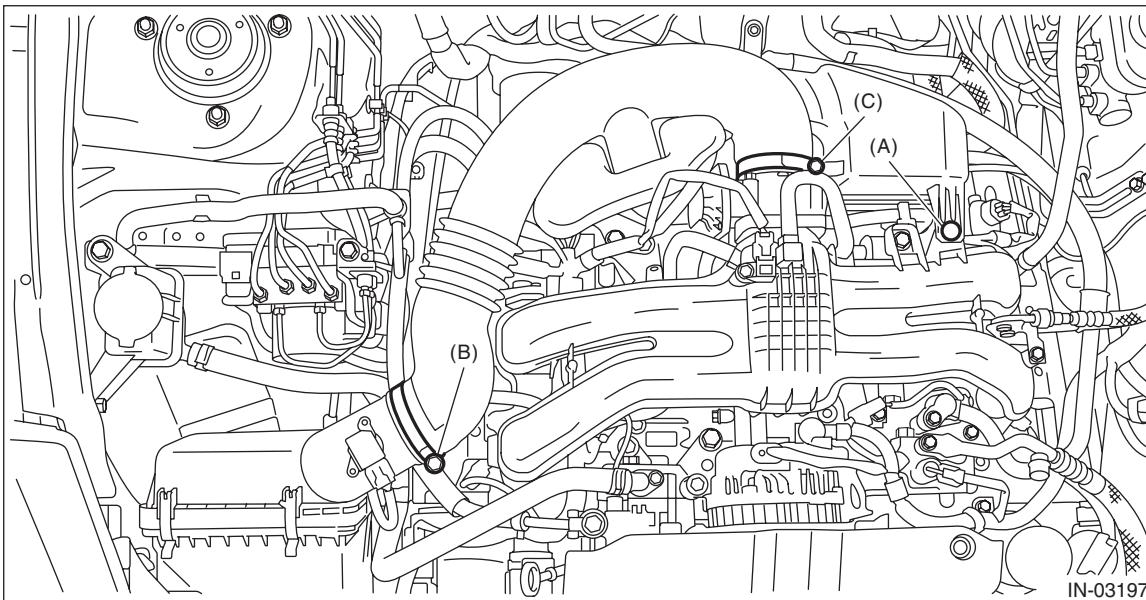

- 4) Remove the air intake boot from the throttle body, and move it to the left side wheel apron.

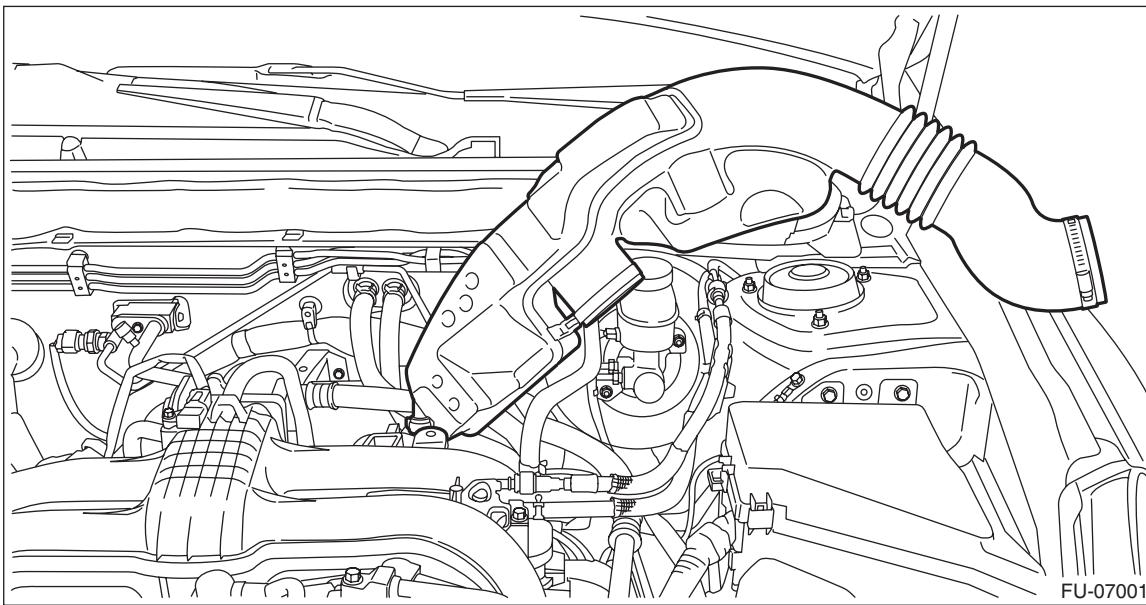


5) Remove the air breather hose.

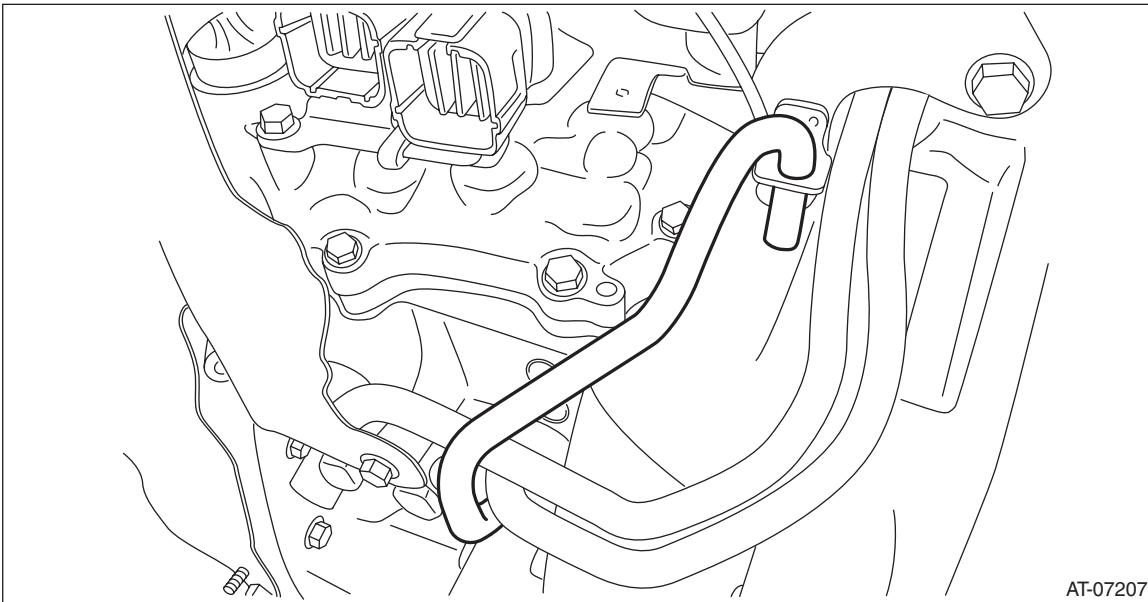

2. TRANSMISSION CASE SIDE


- 1) Remove the transmission assembly. <Ref. to CVT-57, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the transmission case cover.

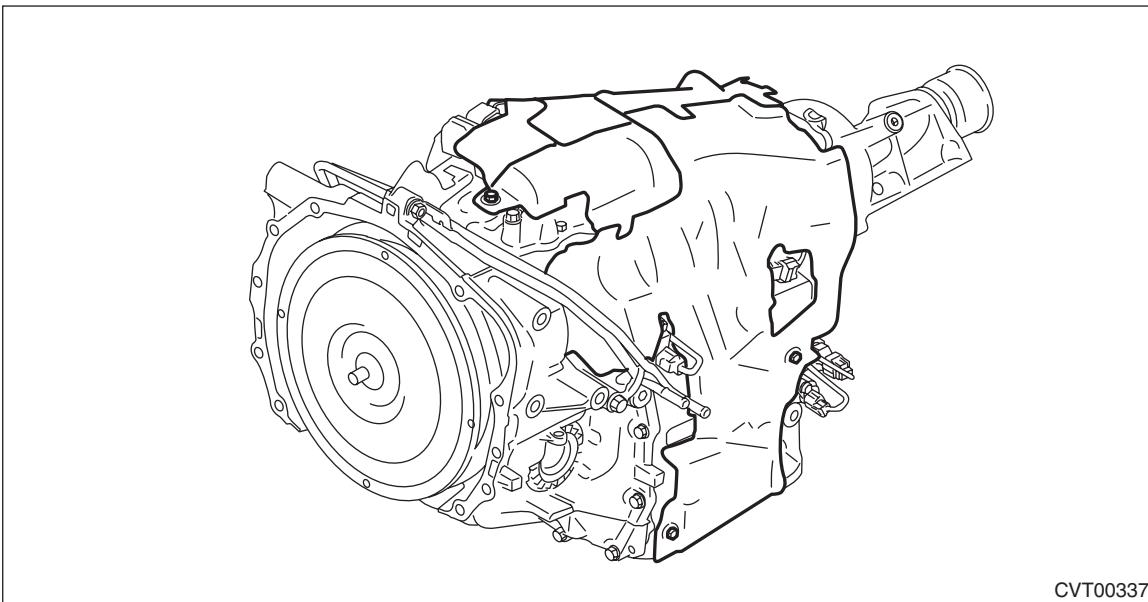

Air Breather Hose

CONTINUOUSLY VARIABLE TRANSMISSION

- 3) Remove the air breather hose.

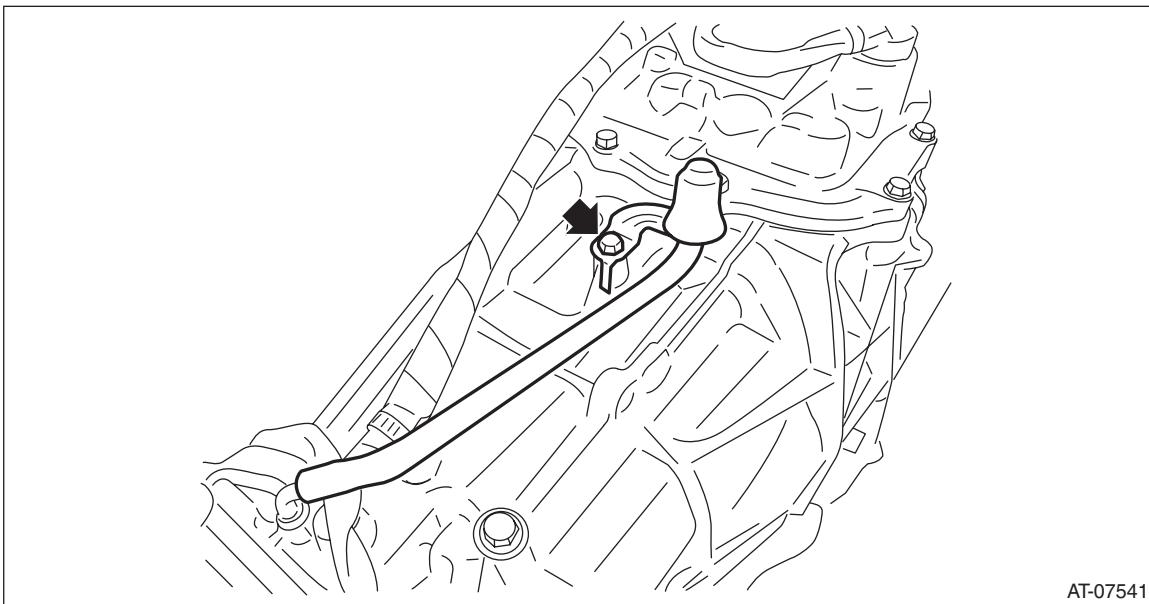


B: INSTALLATION

1. FRONT DIFFERENTIAL SIDE

Install in the reverse order of removal.

Insertion depth A:

16 — 36 mm (0.63 — 1.42 in)

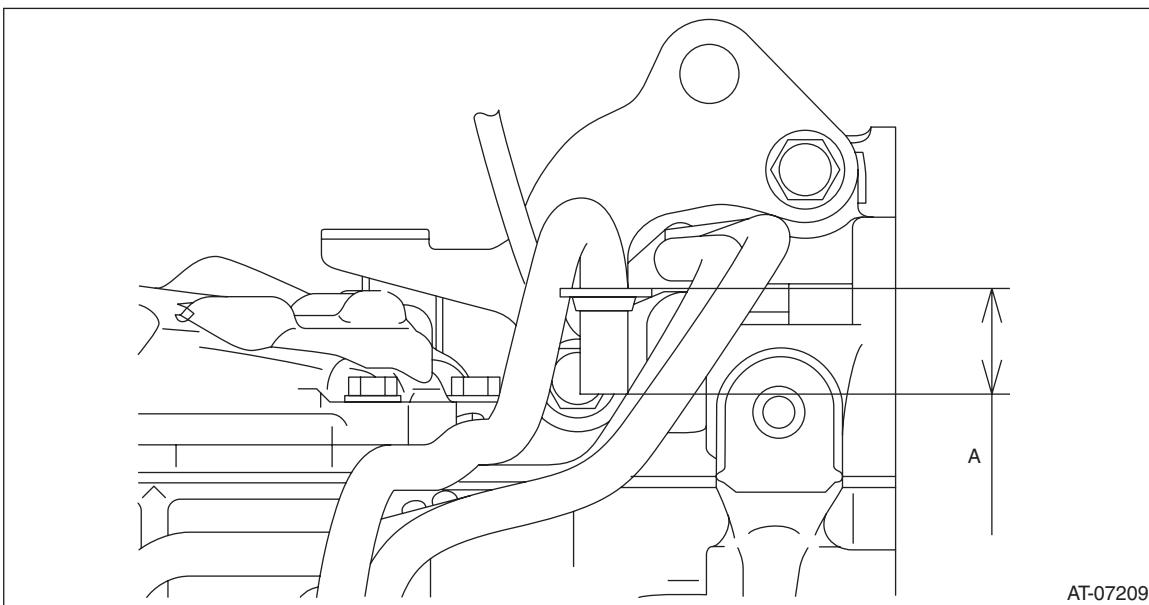

2. TRANSMISSION CASE SIDE

Install in the reverse order of removal.

Tightening torque:

Air breather hose:

5 N·m (0.5 kgf·m, 3.7 ft-lb)

Transmission case cover:

8 N·m (0.8 kgf·m, 5.9 ft-lb)

C: INSPECTION

Check the hose for peeling, crack or clogging.