

## 4. AWD ON/OFF Switching Mode

### A: GENERAL DESCRIPTION

- Follow the messages displayed on the Subaru Select Monitor when working.
- Perform as necessary in FWD mode.
- When switched to FWD, AWD light illuminates.

### B: PROCEDURE

#### CAUTION:

- **Do not turn the power of the Subaru Select Monitor OFF during work, and do not disconnect the data link connector.**

- **On completing the work in FWD, switch back in AWD.**

- 1) Shift the select lever to “P” range.
- 2) Connect the Subaru Select Monitor to data link connector.
- 3) Turn the ignition to ON. (For model with push button ignition switch, press the push button ignition switch twice without depressing brake pedal.)
- 4) Turn off all switches causing an electrical load, such as headlights, A/C, seat heater and rear defogger.
- 5) Select {Work Support} in the «Transmission Diagnosis» screen of Subaru Select Monitor.
- 6) Select {Maintenance mode} in the «Work Support» screen of Subaru Select Monitor.
- 7) Select {AWD ON/OFF switching mode} in the «Maintenance mode» screen of the Subaru Select Monitor.
- 8) Follow the messages displayed on the Subaru Select Monitor screen when working.

Switching completes successfully if any of the following messages is displayed.

- When switching from AWD to FWD: {Switched to FF. To return to AWD, perform basic mode again.}
- When switching from FWD to AWD: {Switched to AWD. To return to FF, perform basic mode again.}

#### NOTE:

- If communication error occurs during switching mode, start in the “AWD ON/OFF switching mode” again.
- If operation is interrupted before the successful end message is displayed, perform the {AWD ON/OFF switching mode} from the beginning until confirming the operation is successfully ended. If this mode fails to complete successfully, the cause is as follows.
  - Select lever is not in “P” range.
  - Engine is running.
- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.