

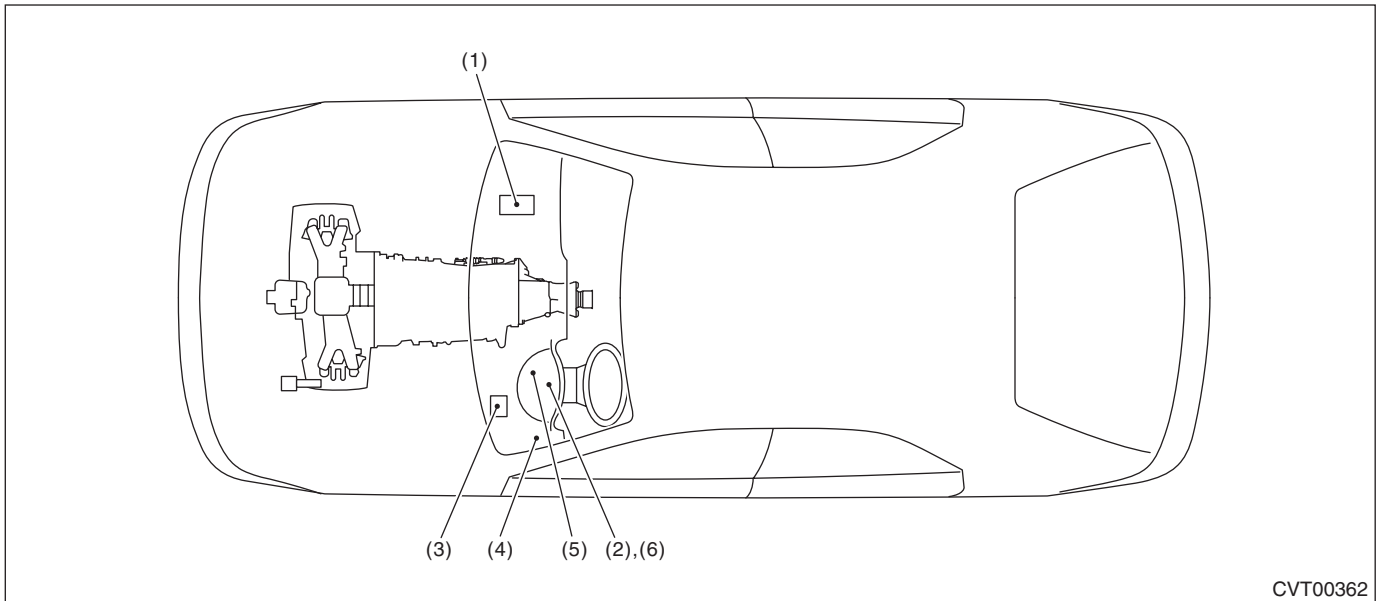
Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

1. CONTROL MODULE



(1) Engine control module (ECM)

(3) Transmission control module (TCM)

(5) Body integrated unit

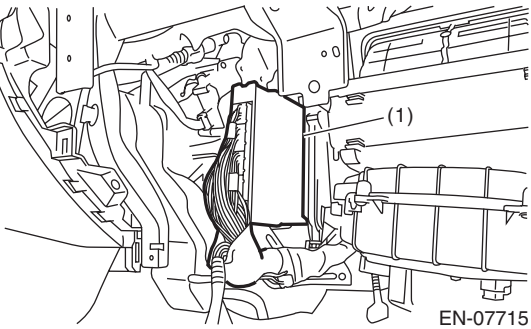
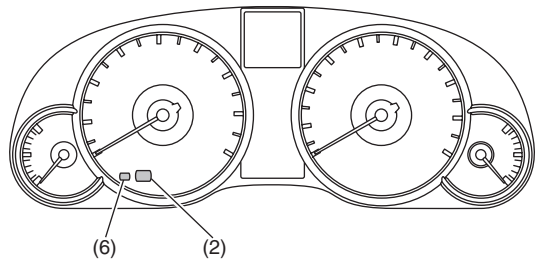
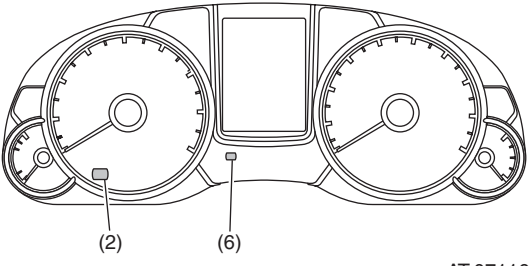
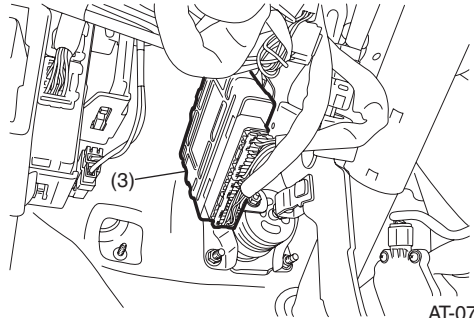
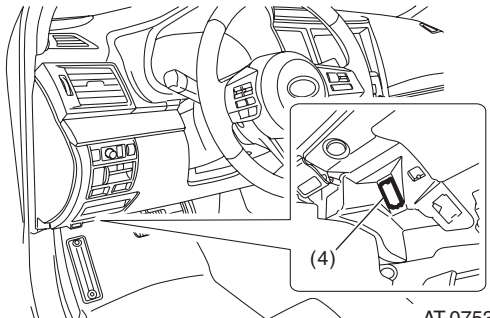
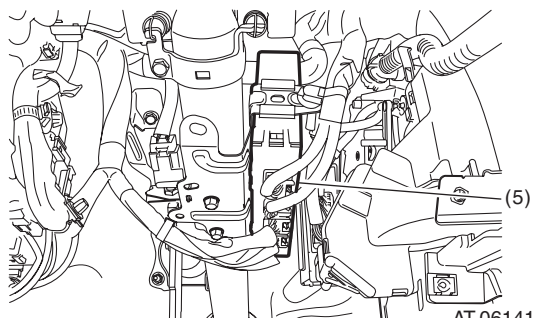
(2) AT OIL TEMP light

(4) Data link connector

(6) AWD light

Electrical Component Location


CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

 EN-07715	• Normal meter  AT-06101
• Luminescent meter  AT-07116	 AT-07565
 AT-07533	 AT-06141

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

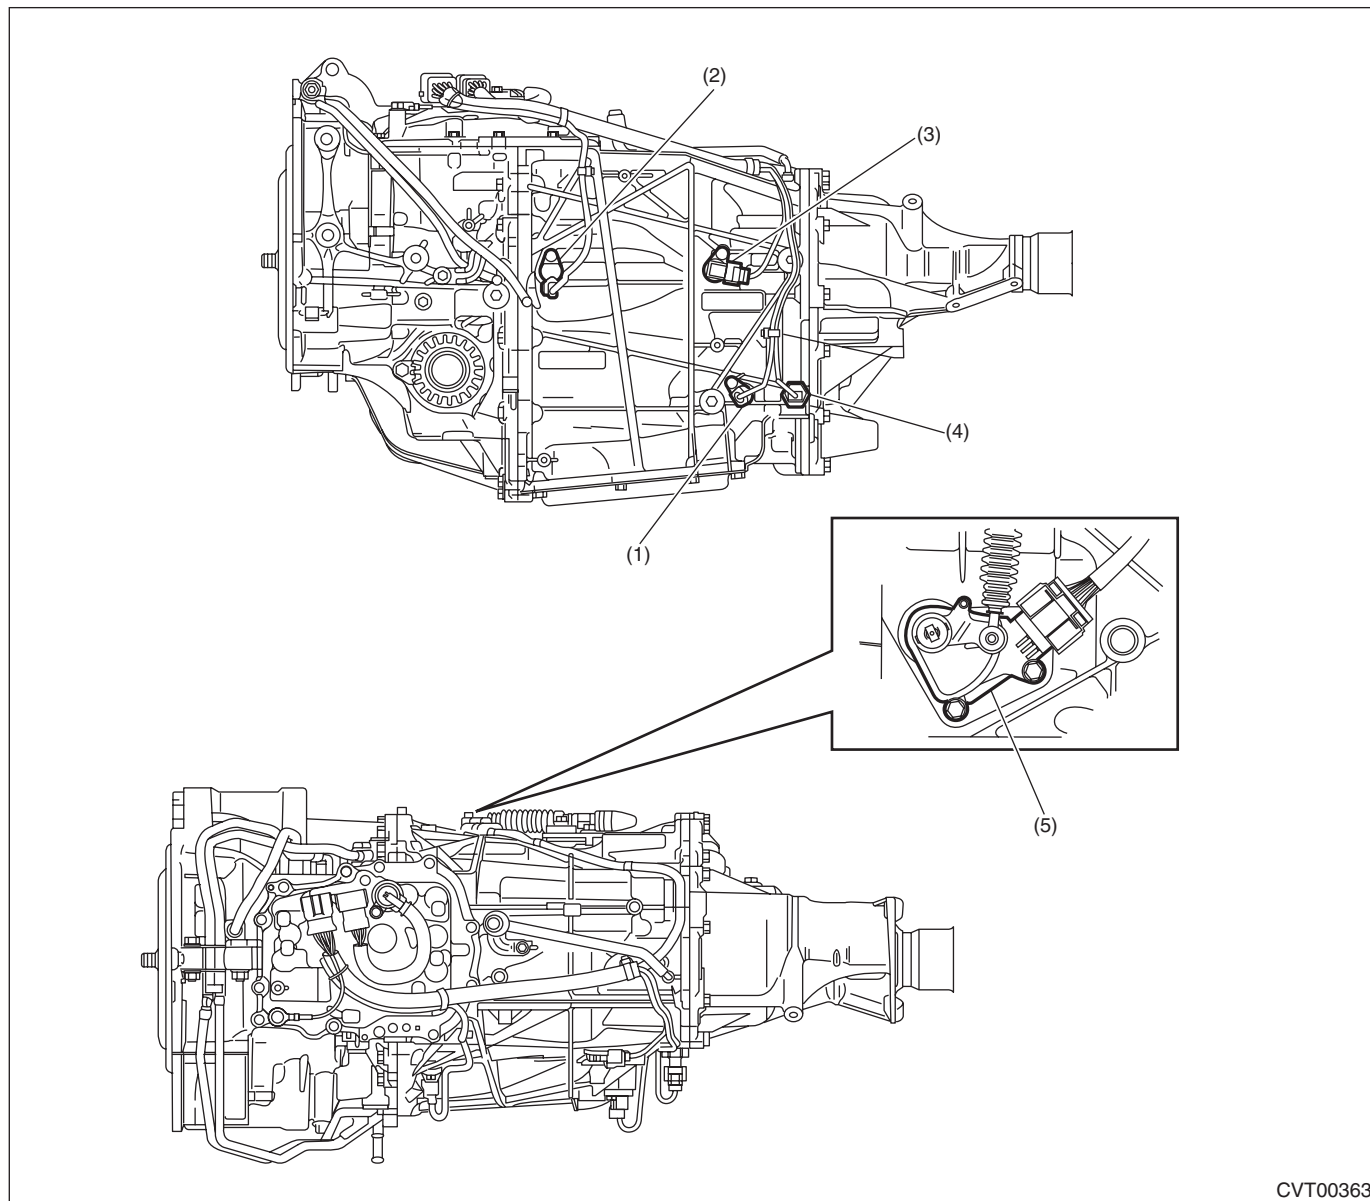2. SENSOR



CVT00363

(1) Secondary speed sensor

(2) Turbine speed sensor

(3) Primary speed sensor

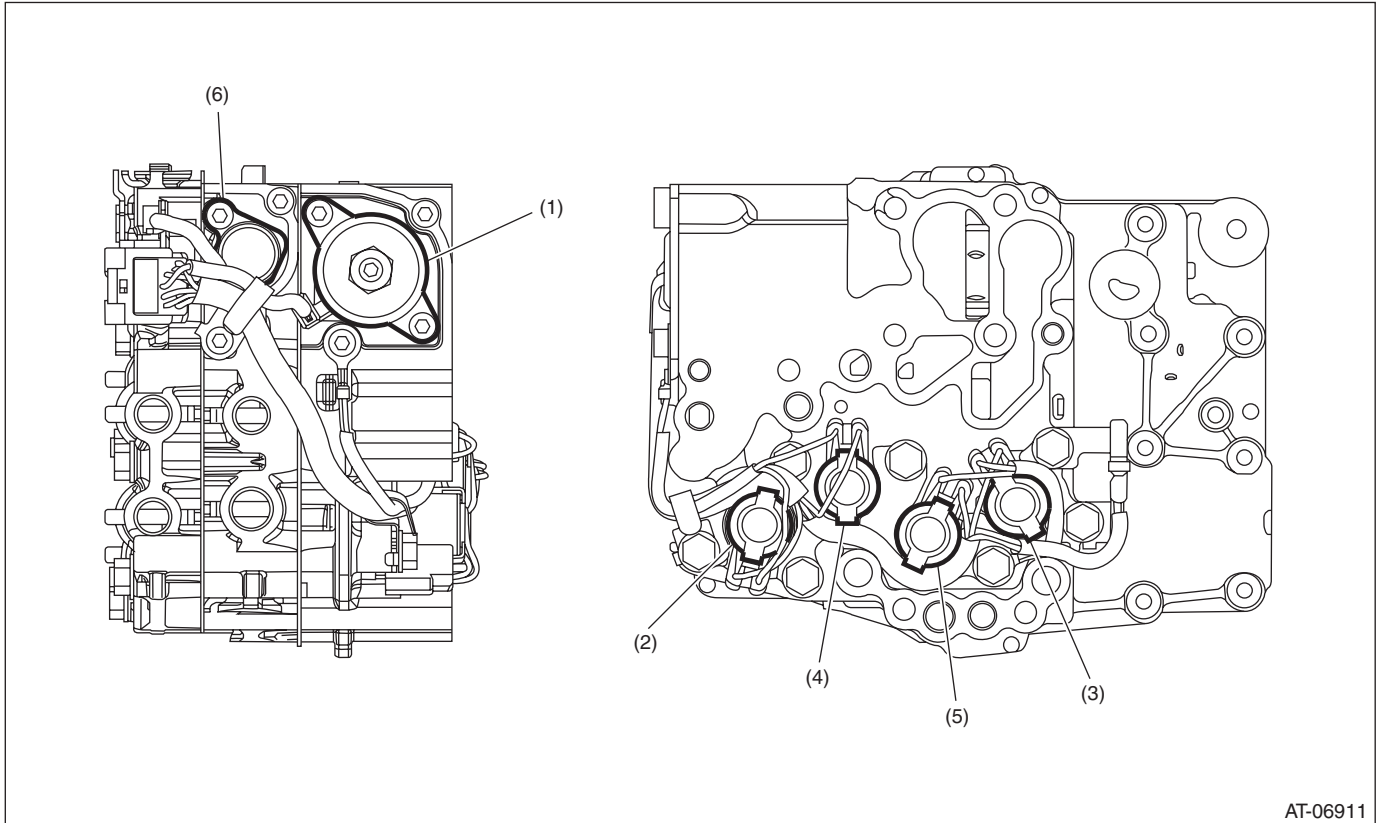
(4) Secondary pressure sensor

(5) Inhibitor switch

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

3. SOLENOID



AT-06911

- | | | |
|------------------------|---------------------------|-------------------------|
| (1) Secondary solenoid | (3) Lock-up duty solenoid | (5) Primary UP solenoid |
| (2) AWD solenoid | (4) Primary DOWN solenoid | (6) F&R solenoid |