


Control Unit

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

15. Control Unit


A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-65, REMOVAL, Glove Box.>
- 3) Remove the control module.
 - (1) Release the lock and remove the relay bracket.

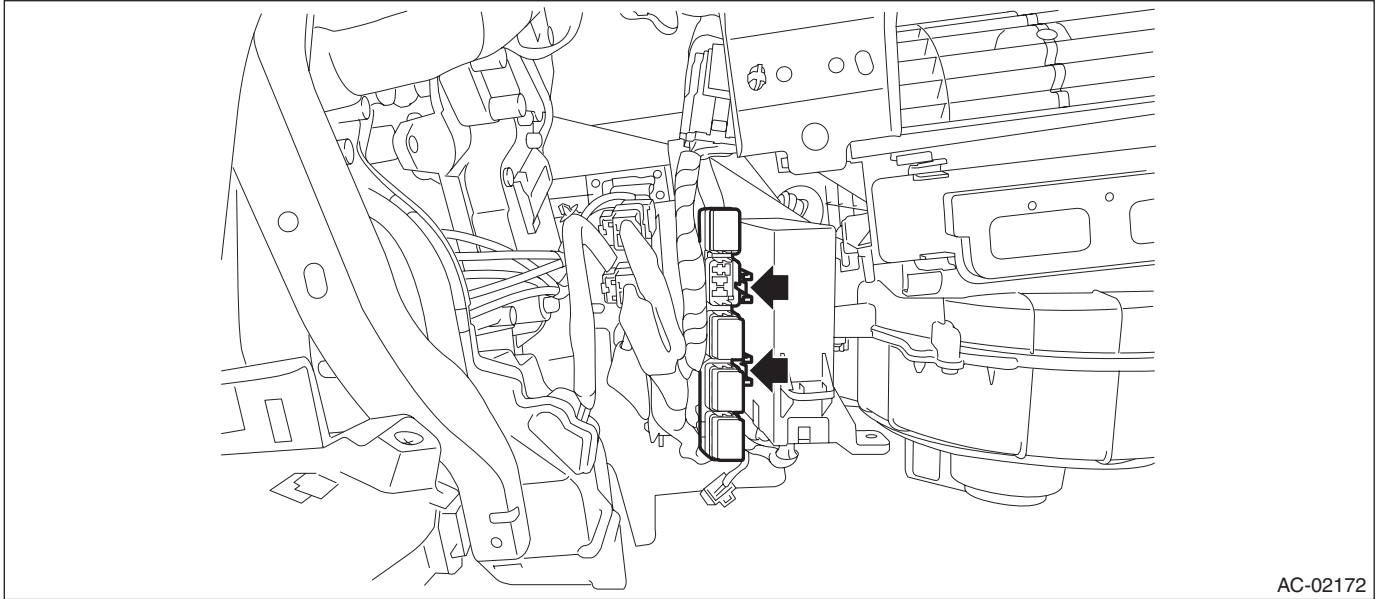

AC-02172

- (2) Disconnect the connector.
- (3) Remove the screws, and remove the control module.

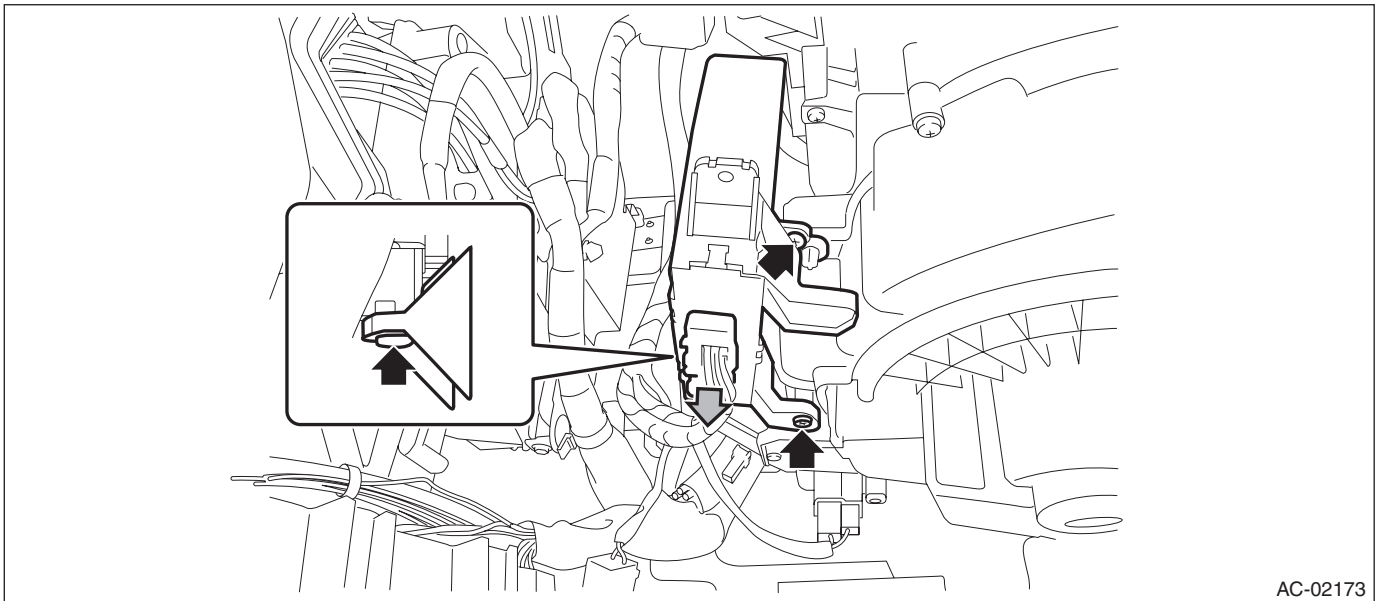

AC-02173

B: INSTALLATION

Install each part in the reverse order of removal.