

Air Vent Grille

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

31. Air Vent Grille

A: REMOVAL


1. CENTER GRILLE ASSEMBLY

1) Remove the center panel assembly.

CAUTION:

Do not put your finger on the fin of the air vent grille. Doing so may damage the fin.


(1) Attach the protective tape (a) to the meter visor.

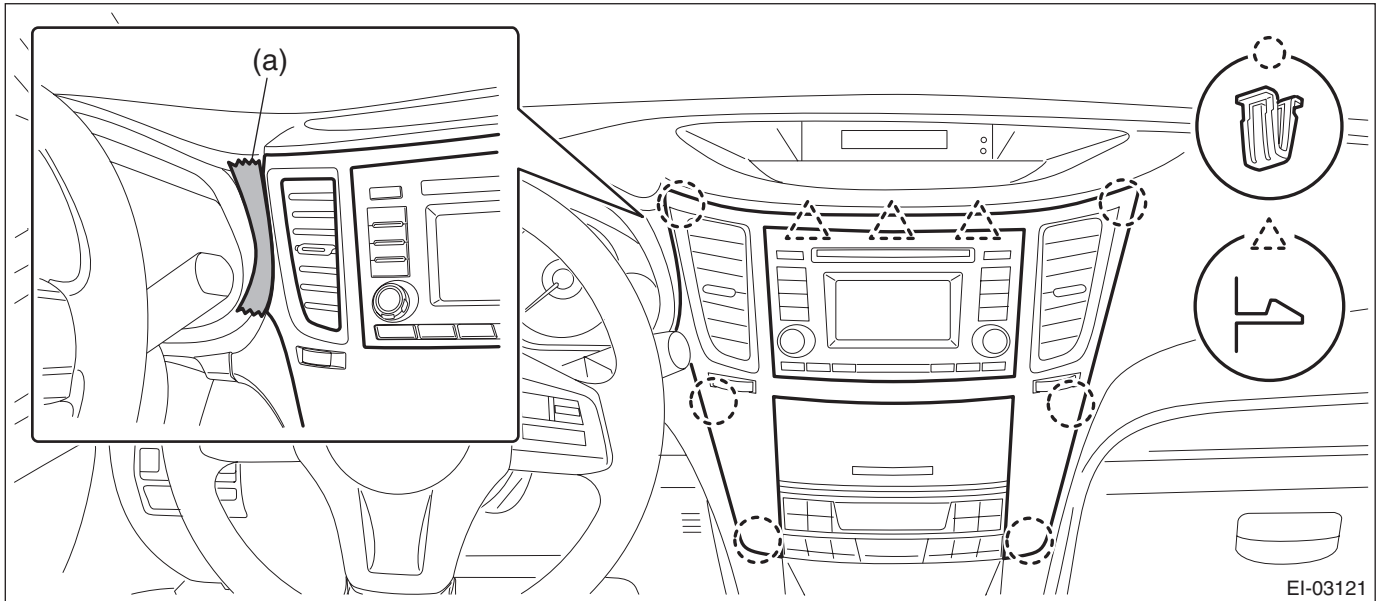


Air Vent Grille

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

- (2) Insert a finger into the air vent grille and release the left and right clips at the top of the center panel.
(A), (B)
- (3) Insert a finger into the air vent grille and release the left and right clips at the center of the center panel.
(C), (D)
- (4) Release the clips at the bottom of the center panel and remove the center panel assembly.

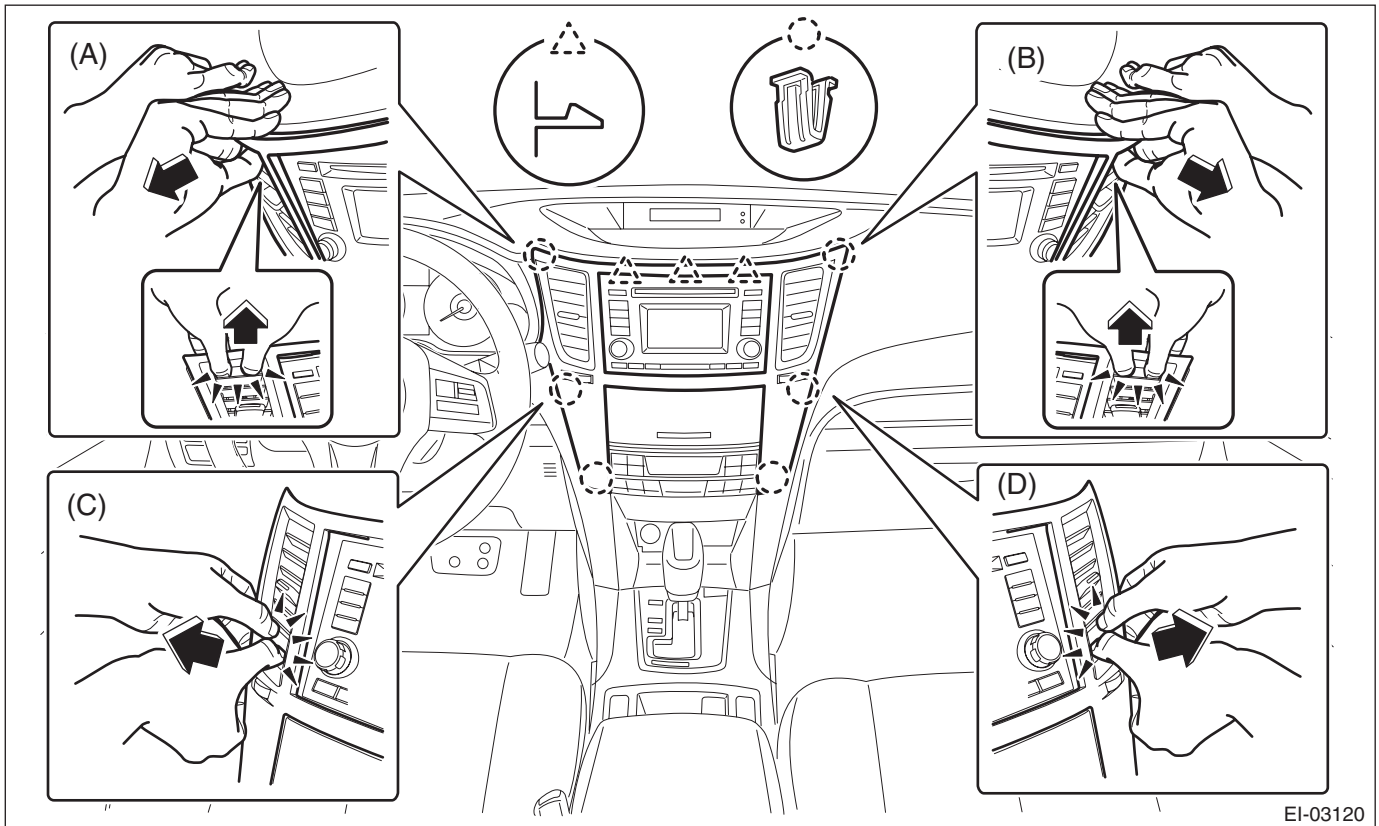

- 2) Release the claws, and then remove the center grille assembly.

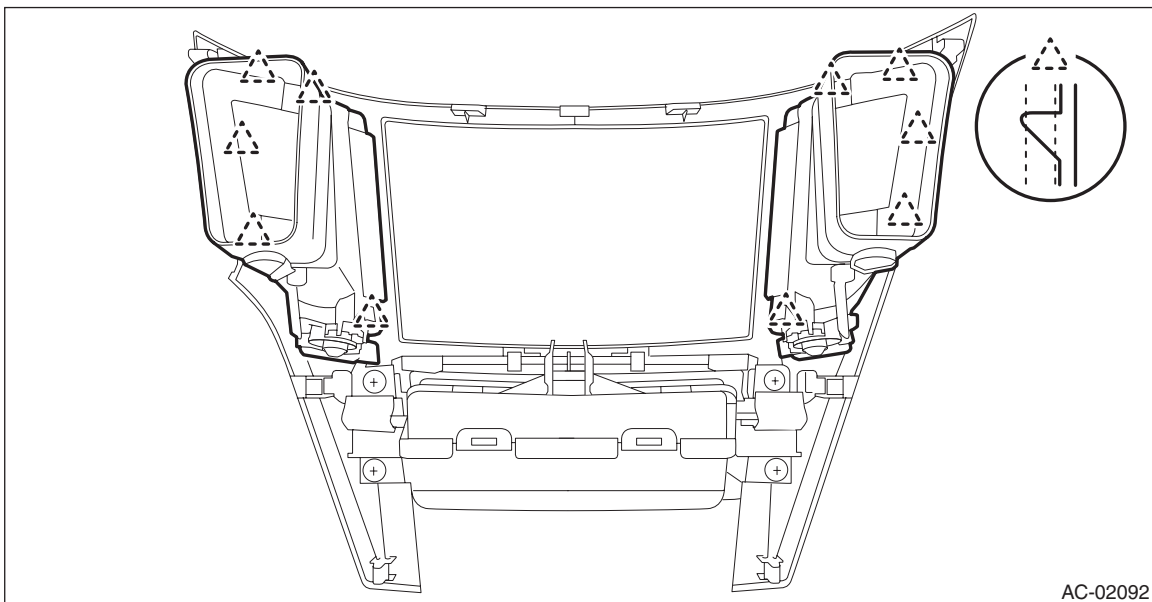


2. SIDE GRILLE ASSEMBLY RH

- 1) Remove the instrument panel lower cover. <Ref. to EI-63, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the side vent grille assembly RH.
 - (1) Remove the screws.

Air Vent Grille


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

- (2) Release the claws and clips, then detach the side grille assembly RH.

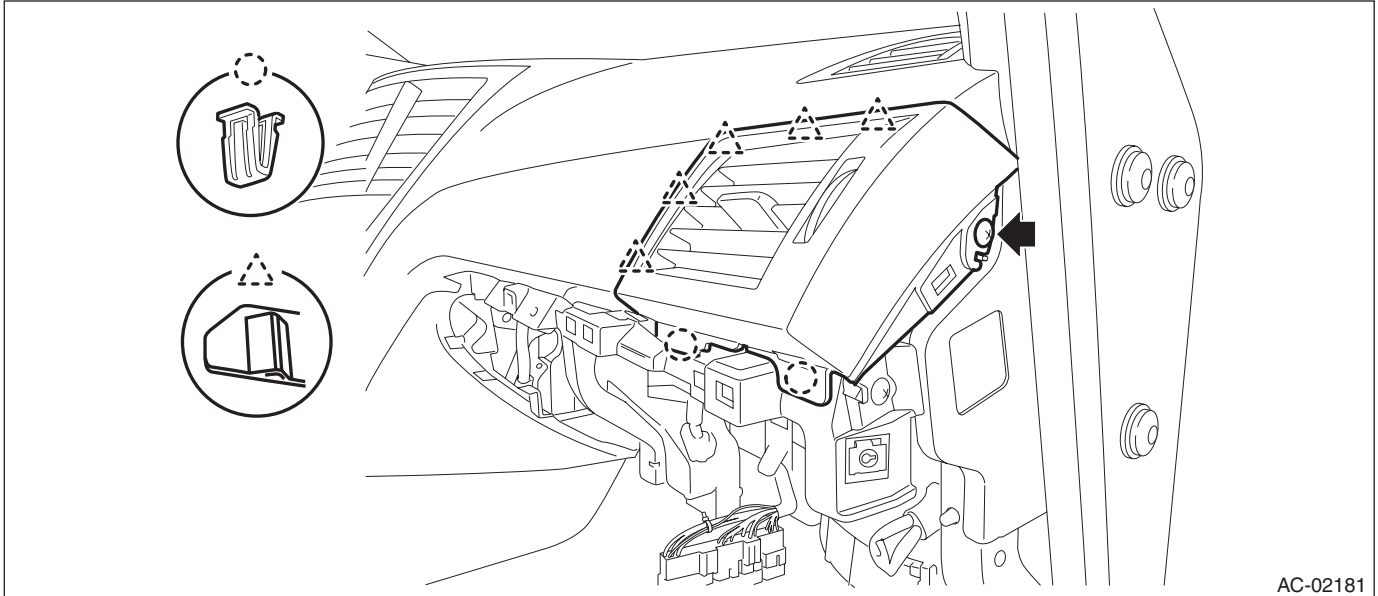

3. SIDE GRILLE ASSEMBLY LH

- 1) Remove the glove box. <Ref. to EI-65, REMOVAL, Glove Box.>
- 2) Remove the side vent grille assembly LH.
 - (1) Remove the screws.
 - (2) Release the claws and clips, then detach the side grille assembly LH.

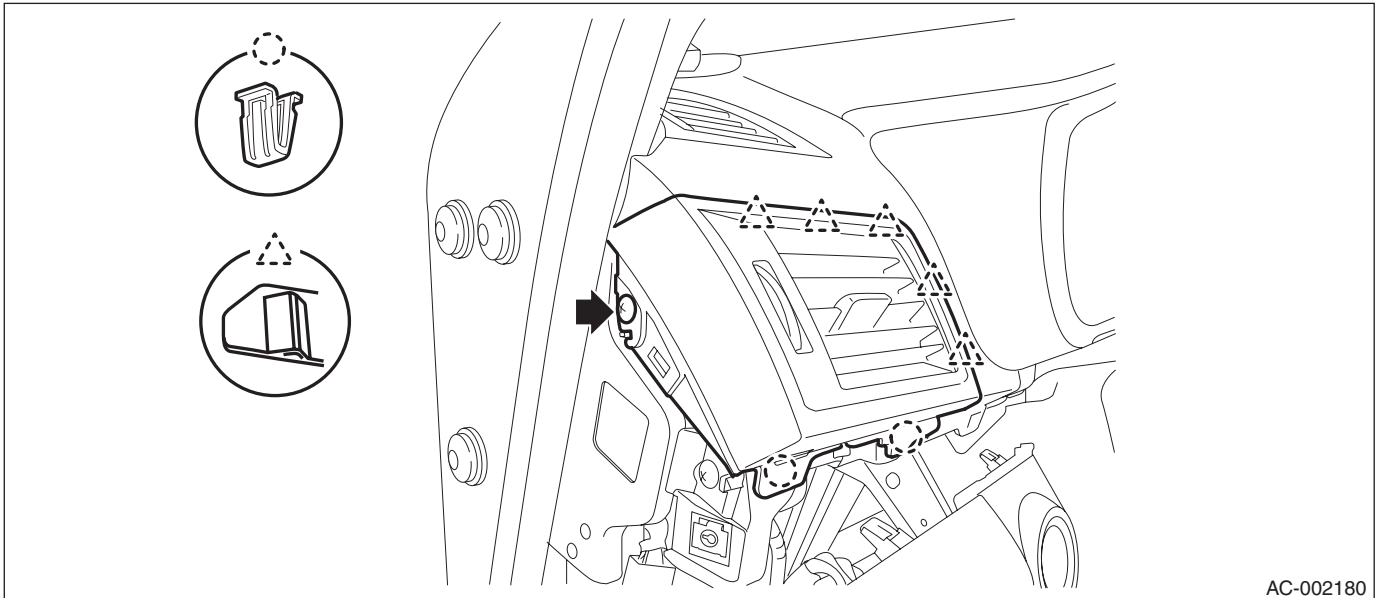

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly. Replace the air vent grille if faulty.
- 2) Check that the adjustment can be maintained in each position. Replace the air vent grille if faulty.