


33. Heater Vent Duct


A: REMOVAL

- 1) Remove the instrument panel face assembly. <Ref. to EI-75, REMOVAL, Instrument Panel Assembly.>
- 2) Remove the heater vent duct.
 - (1) Remove the screws, and then remove the front vent duct.

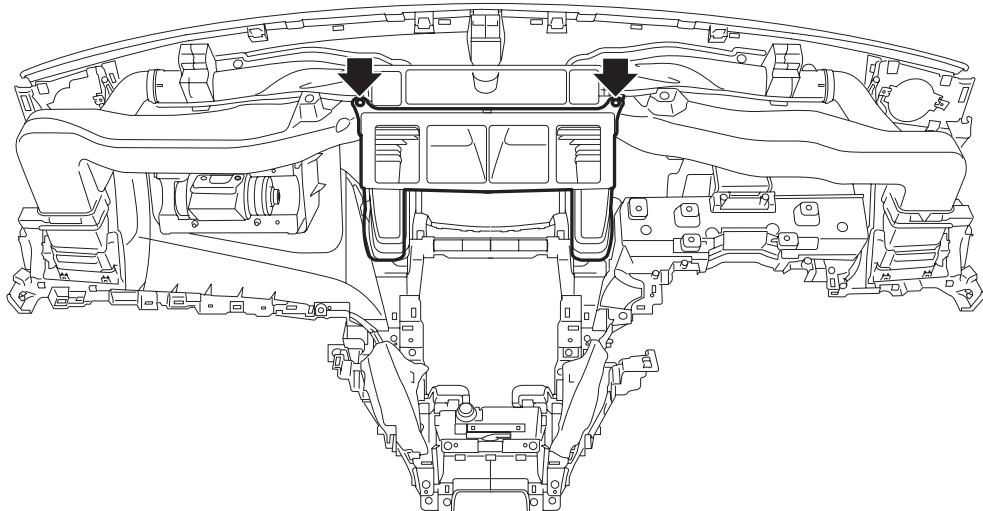

AC-02639

- (2) Release the claws and remove the screws, then detach the side vent duct LH and RH.

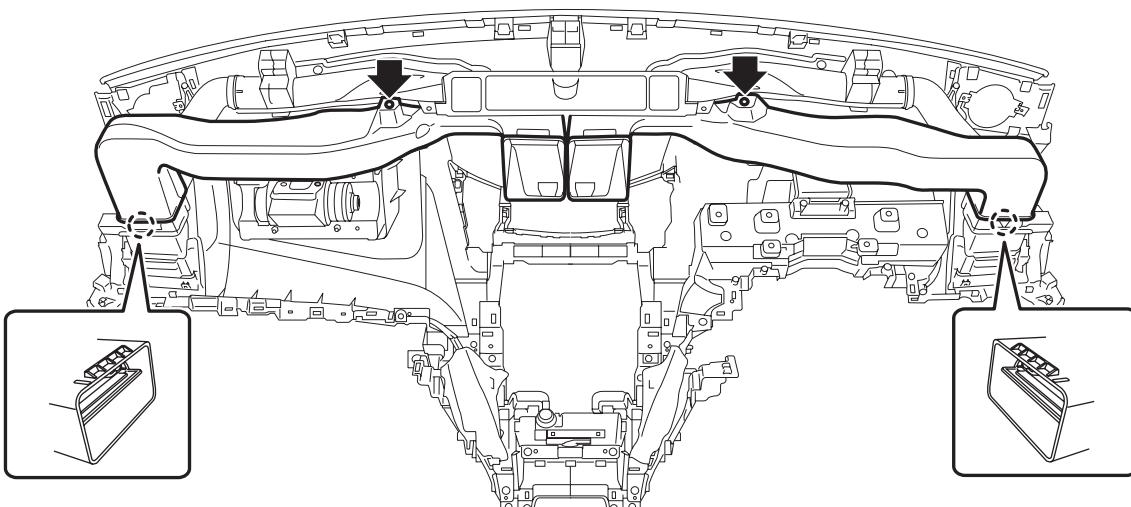

AC-02640

B: INSTALLATION

Install each part in the reverse order of removal.

NOTE:

Refer to "INSTALLATION" of "Instrument Panel Assembly". <Ref. to EI-96, INSTALLATION, Instrument Panel Assembly.>

C: INSPECTION

- 1) Check installation condition of duct. Connect the duct properly if defective.
- 2) Check that no foreign matter is mixed in the duct. Remove the foreign matter if any.