

# Blower Motor Unit Assembly

## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


### 9. Blower Motor Unit Assembly

#### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Using the refrigerant recovery system, discharge refrigerant. <Ref. to AC-26, PROCEDURE, Refrigerant Recovery Procedure.>
- 3) Drain the coolant from the radiator.
  - H4 model: <Ref. to CO(H4DO)-14, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
  - H6 model: <Ref. to CO(H6DO)-12, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 4) Remove the connector and bolts, and remove the high-pressure hose and AC pipe from the expansion valve.
- 5) Loosen the heater hose clamps and remove the hoses.

NOTE:

Put alignment marks to hoses, clamps, etc. and remove them.

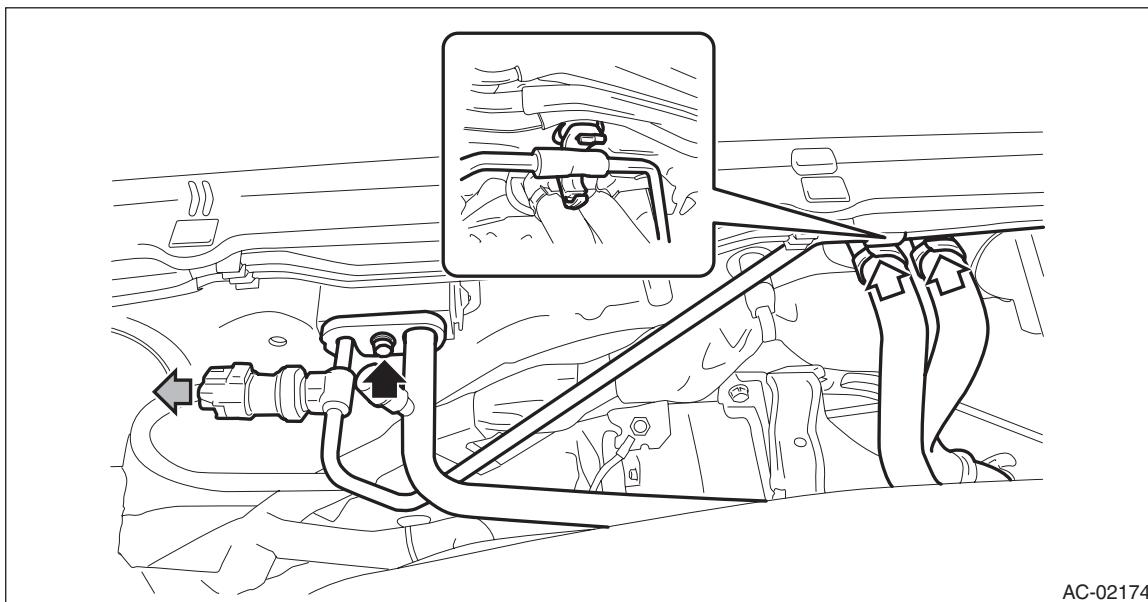

- 6) Remove the instrument panel assembly. <Ref. to EI-75, REMOVAL, Instrument Panel Assembly.>
- 7) Remove the engine control module (ECM).
  - (1) Release the lock and remove the relay holder.
  - (2) Remove the nuts, and remove the engine control module (ECM).

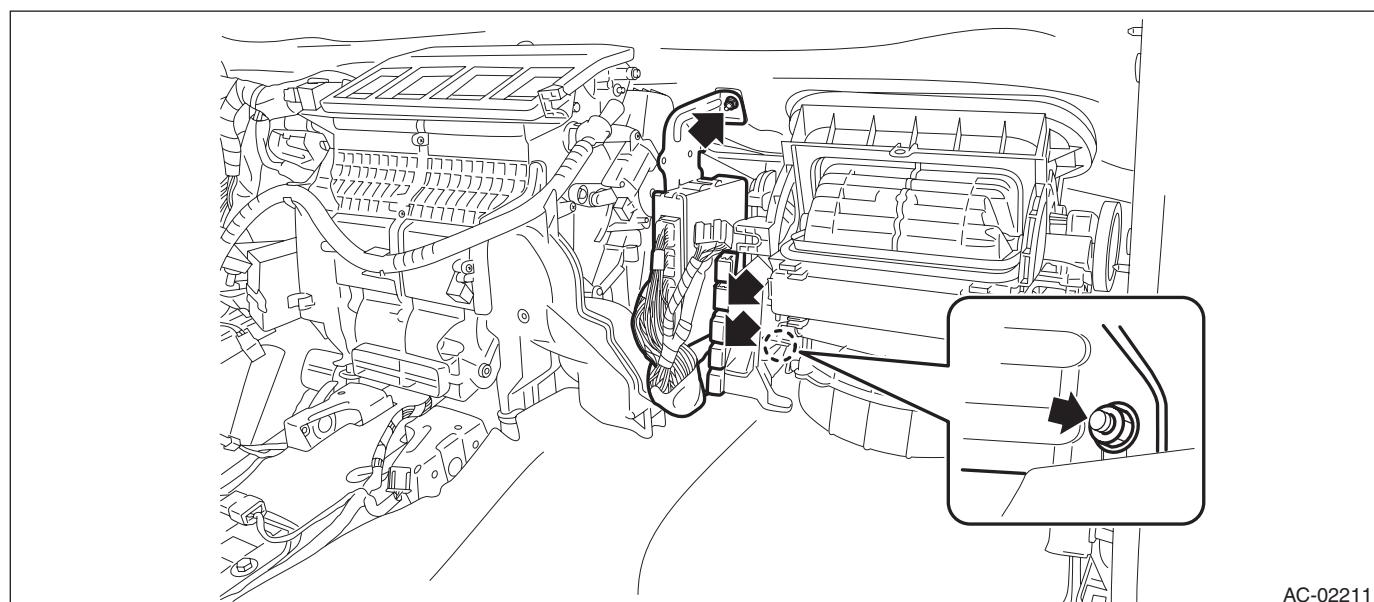


## Blower Motor Unit Assembly

### HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


8) Remove the heater and cooling unit.

- (1) Remove the clip, and remove the rear center duct.
- (2) Turn over the floor carpet and remove the rear heater duct slide locks on the left and right.
- (3) Remove the bolt and remove the heater and cooling unit.

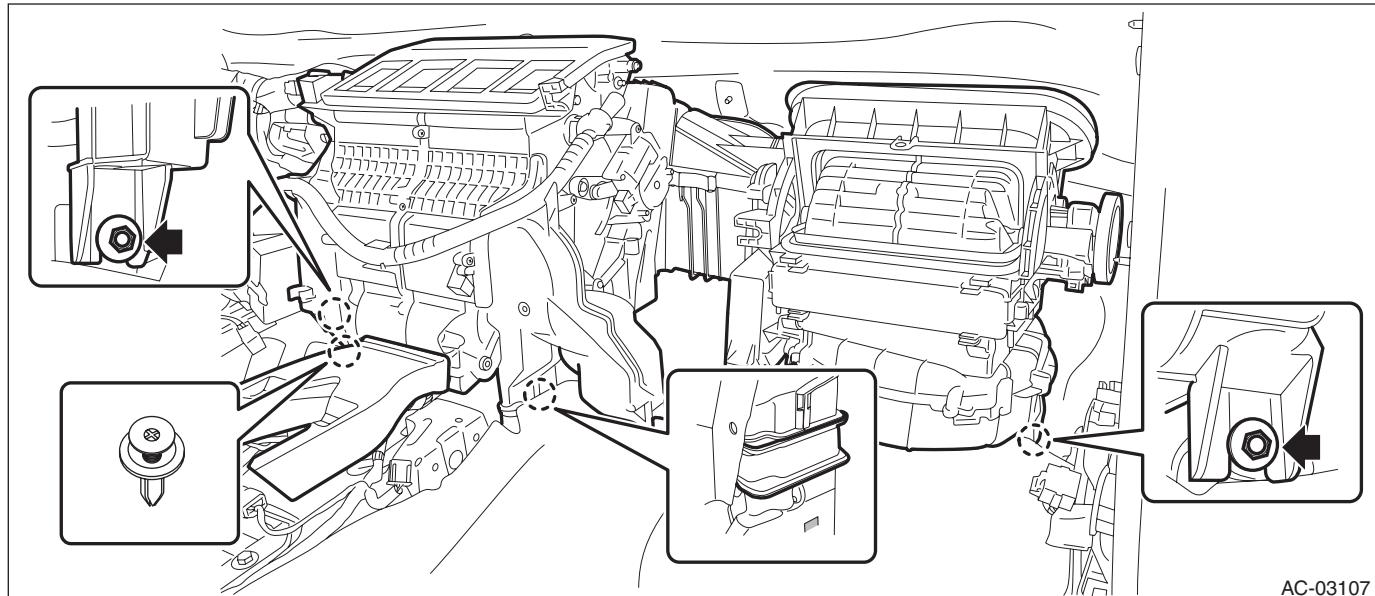

9) Remove the blower motor unit assembly.


- (1) Release the claws and remove the bolts.

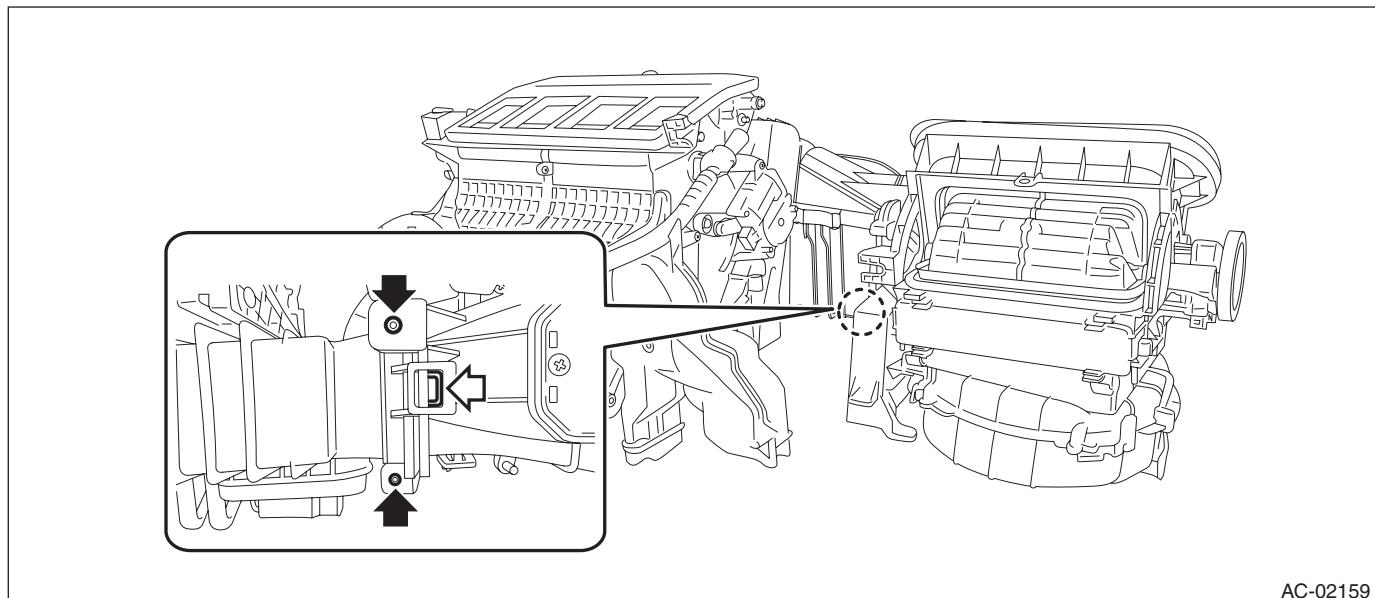

# Blower Motor Unit Assembly

## HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

(2) Remove the blower motor unit assembly as shown in the figure.

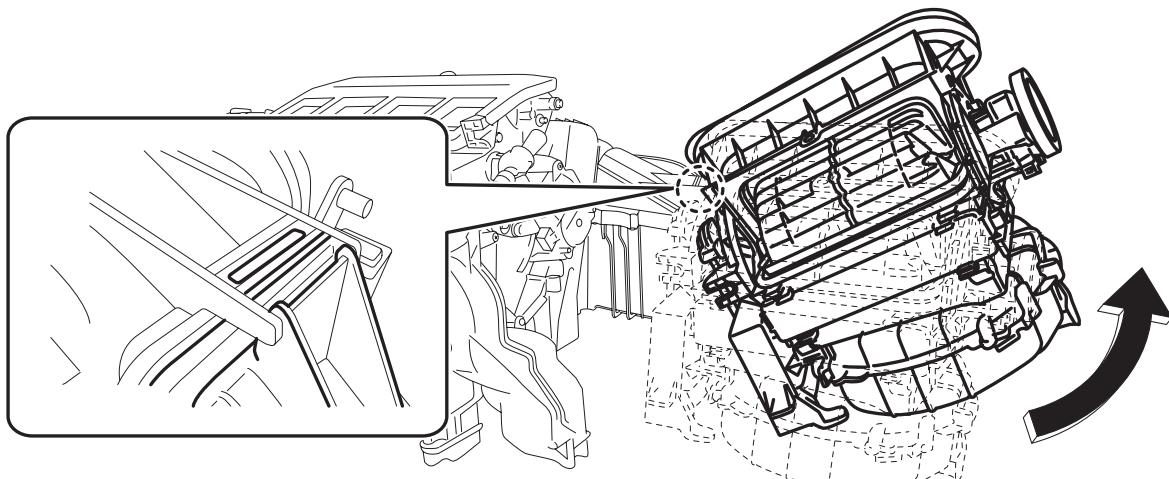

AC-02160

## B: INSTALLATION

### CAUTION:

- After installing the compressor, do not start the engine until the A/C system is charged with refrigerant.
- If the engine is started with no refrigerant charge, replace the compressor.
- Replace O-rings and pipe clamps with new parts and install securely.

1) Install each part in the reverse order of removal.

### NOTE:

Refer to "INSTALLATION" of "Instrument Panel Assembly". <Ref. to EI-96, INSTALLATION, Instrument Panel Assembly.>

2) Fill engine coolant.

• H4 model: <Ref. to CO(H4DO)-15, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

• H6 model: <Ref. to CO(H6DO)-12, FILLING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>

3) Charge refrigerant. <Ref. to AC-27, PROCEDURE, Refrigerant Charging Procedure.>

### Tightening torque:

*Heater cooling unit: <Ref. to AC-5, HEATER COOLING UNIT, COMPONENT, General Description.>*

*Blower motor unit: <Ref. to AC-7, BLOWER MOTOR UNIT, COMPONENT, General Description.>*

*Air conditioning unit: <Ref. to AC-9, AIR CONDITIONING UNIT, COMPONENT, General Description.>*

*Engine control module (ECM): 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)*