


Air Breather Hose

AUTOMATIC TRANSMISSION

21. Air Breather Hose


A: REMOVAL

- 1) Remove the air intake chamber. <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 2) Disconnect the air breather hose.

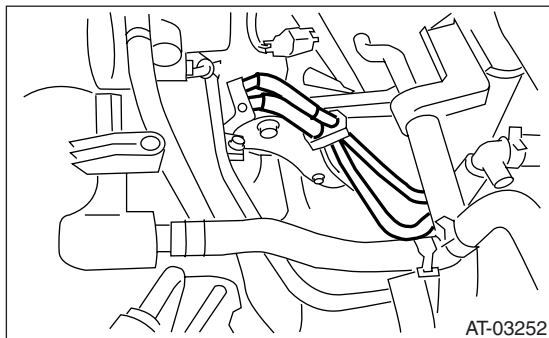

B: INSTALLATION

- 1) Connect the air breather hose.

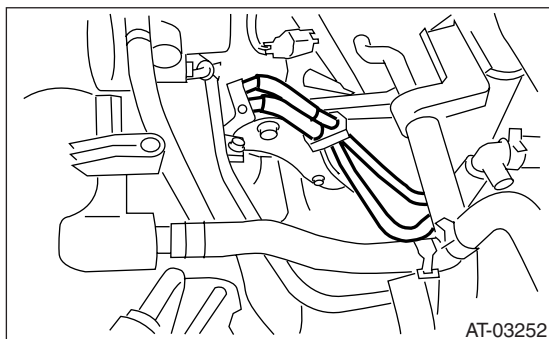

- 2) Install the air intake chamber. <Ref. to IN(H6DO)-6, INSTALLATION, Air Intake Chamber.>

C: INSPECTION

Make sure the hose is not cracked or clogged.