

## 7. General Diagnostic Table

### A: INSPECTION

| Symptom      | Possible cause                                  | Corrective action  |
|--------------|---|--|
| Select Lever | Starter does not run.                           | Adjust the select cable, or inspect circuit.                             |
|              | Back-up light does not illuminate.              | Adjust the select cable, or inspect circuit.                             |
|              | AT shift lock system does not operate normally. | Adjust the select cable, or inspect circuit.                             |
|              | Will not change to manual or sports mode.       | Inspect the mode change switch and select lever, or inspect the circuit. |
|              | Up-shift is not engaged at manual mode.         | Check the shift-up switch and circuit.                                   |
|              | Down-shift is not engaged at manual mode.       | Check the shift-down switch and circuit.                                 |

# General Diagnostic Table

CONTROL SYSTEMS

---