


### 7. Spare Tire Hoist

#### A: REMOVAL

- 1) Remove the spare tire from the vehicle.
- 2) Lift-up the vehicle.
- 3) Remove the spare tire guide.

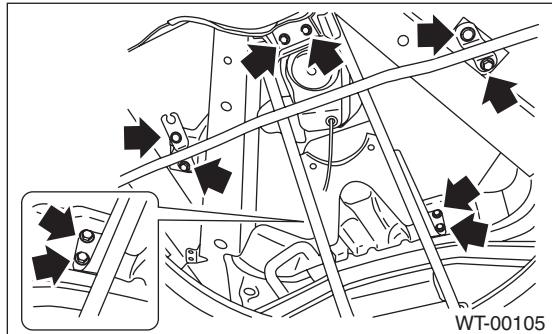

#### B: INSTALLATION


Install in the reverse order of removal.

*Tightening torque:*

**33 N·m (3.7 kgf-m, 24.3 ft-lb)**

#### C: DISASSEMBLY

Remove the spare tire hoist.

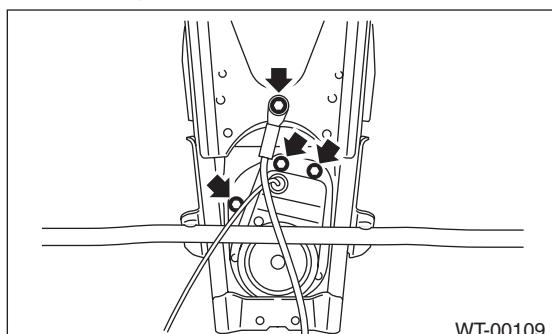

#### D: ASSEMBLY

Assemble in the reverse order of disassembly.

*Tightening torque:*

**33 N·m (3.7 kgf-m, 24.3 ft-lb)**