


12. Rear Door Lock Actuator

A: REMOVAL

- 1) Remove the rear door latch and door lock actuator assembly. <Ref. to SL-39, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>
- 2) Remove the screw from the rear door latch and door lock actuator, and then remove the door lock actuator.

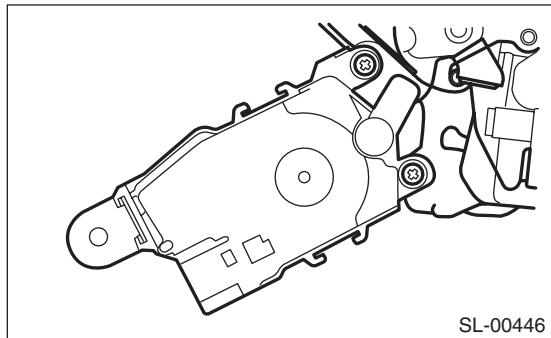

(1) Rear door lock actuator

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Make sure lock and unlock work correctly after installation.

C: INSPECTION

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.
- 3) Check the actuator operation.
If defective, replace the door lock actuator.

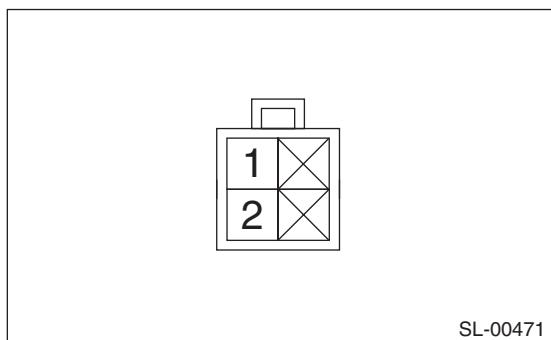

Terminal No.	Actuator operation
No. 1 (+) and No. 2 (-)	Unlock → Lock
No. 2 (+) and No. 1 (-)	Lock → Unlock