

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

60. Bulkhead Wiring Harness (In Compartment)

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B31	10	★	C-3	AB1	Airbag wiring harness
B32	8	★	C-2		Turn signal and hazard unit
B36	28	Blue	B-2	i1	Instrument panel wiring harness
B38	16	★	B-5	i3	
B41	2	★	C-2		Power window circuit breaker
B47	6	Brown	B-5		Main relay
B52	24	★	B-2		Fuse & relay box (F/B)
B54	35	★	C-3		TCM
B55	35	★	B-3		
B65	4	Black	B-3		Stop light & brake switch
B68	8	★	B-3		Roll connector
B69	4	★	B-4		Parking switch
B70	18	★	B-3		Combination Switch (Wiper)
B71	17	★	B-3		Combination switch (lighting)
B72	6	★	B-3		Ignition switch
B77	7	Green	B-4		Mode actuator
B86	5	★	B-4		Power transistor
B87	2	★	B-4		Blower motor
B88	2	★	B-4		Evaporator thermo switch
B90	12	★	B-4	R50	Roof cord
B91	7	Green	B-4		Intake door actuator
B96	8	Black	B-2		Daytime running light control module
B97	20	★	C-1	R2	Rear wiring harness
B98	24	Black	B-5	R1	
B116	12	★	D-4		AT select lever
B122	6	★	D-5		Joint connector (E/G)
B134	34	★	C-4		ECM
B135	35	★	C-4		
B136	35	★	C-4		
B137	31	★	C-5		
B152	10	Gray	B-2		Fuse & relay box (F/B)
B158	8	★	B-2		
B159	9	Brown	B-2		
B177	2	★	B-4		Wiper deicer
B225	40	Black	C-2		Seat heater relay
					Starter relay
					Power window relay
					Fuse (Relay block)
					Accessory relay 2
					Front fog light relay
					Mirror heater relay
					Low beam relay
	Wiper deicer relay				
B231	4	★	B-3		Steering angle sensor
B235	7	Green	B-4		Passenger's side air mix actuator
B242	10	★	B-2		Daytime running light control module

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B280	30	★	C-3		Body integrated unit
B281	28	★	C-3		
B282	16	★	C-5		Auto A/C control module
B283	26	★	B-5		Auto A/C control module & rear defogger switch
B315	6	Black	B-4		Accelerator pedal position sensor
B327	6	Brown	B-5		Main relay 2
B330	4	Black	B-5		Inhibitor relay
B331	20	★	B-4		CAN joint connector
B333	2	★	B-1		Short connector
B334	24	★	B-2		Remote engine start control module
B350	4	★	B-3		Key warning switch & key lock solenoid
B351	2	Black	B-4		Antenna
B356	4	Black	B-5		Back-up light relay
B359	6	Black	D-4		Yaw rate & lateral G sensor
B362	8	Black	B-5		Relay holder
B370	4	Brown	B-4		Diode (Tail & engine status)
B373	2	★	B-2		Fuse & relay box (F/B)
B390	7	Green	B-4		Driver's side air mix actuator
B402	16	Black	B-2		Data link connector
B403	25	★	B-2	i2	Instrument panel wiring harness
B404	1	Black	B-2		Parking brake switch
B405	2	Black	B-2		Diode (Daytime running light)
B413	2	★	B-3		In-vehicle sensor
B414	2	★	B-4		Key illumination
B416	8	★	D-4		CAN joint connector
B418	2	★	B-4		Foot light (Passenger's seat)
B419	7	★	B-4		Blower motor relay
B420	2	Green	C-4		Delivery (test) mode connector
B421	2	Green	C-4		
B424	8	★	D-5		Joint connector
B426	6	★	D-5		
B431	2	★	B-3		Foot light (Driver's seat)

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	10	Gray	B-3	B31	Bulkhead wiring harness
AB2	4	Yellow	B-3	AB7	Driver's airbag module (roll connector)
AB6	28	Yellow	C-4		Airbag control module
AB9	4	Yellow	C-3		Passenger's airbag module
AB35	2	Black	B-1		Fuse & relay box (F/B)
AB55	2	Yellow	B-5	AB57	Rear wiring harness

Bulkhead Wiring Harness (In Compartment)

WIRING SYSTEM

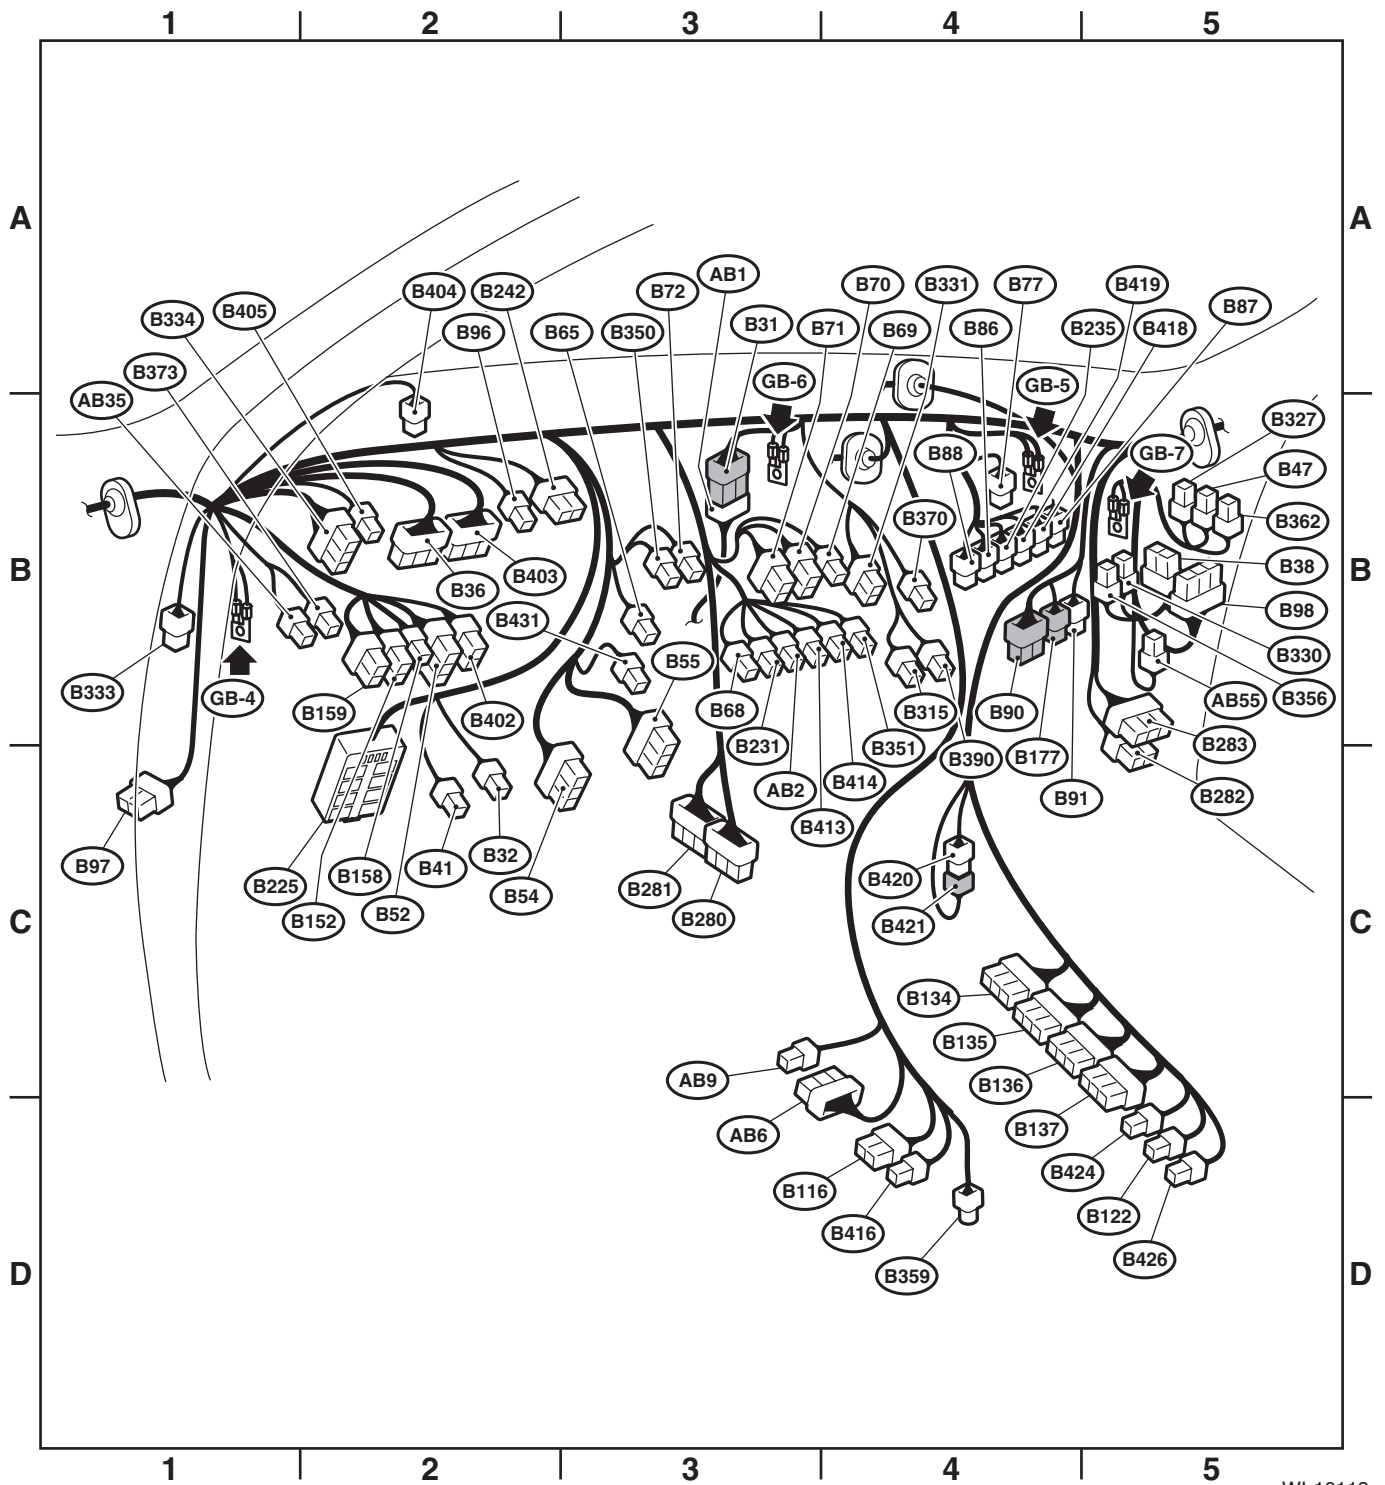

WI-16113