


## 10.Curtain Airbag Sensor

### A: REMOVAL

**CAUTION:**

Do not separate the curtain airbag sensor and bracket. Doing so will cause the airbag system malfunction. If the sensor is removed from the bracket, be sure to replace with a new part.

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the rear quarter lower trim. <Ref. to EI-46, REMOVAL, Rear Quarter Trim.>
- 4) Remove the nut and disconnect the airbag connector to remove the curtain airbag sensor.

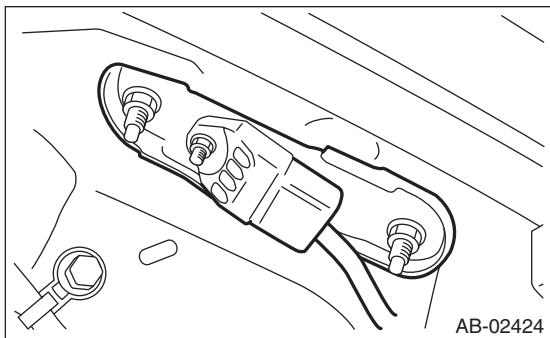

### B: INSTALLATION

**CAUTION:**

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

***Tightening torque:***

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

### C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Curtain airbag sensor, mounting bracket or connector is damaged.
- Curtain airbag is deployed.