


7. Radiator Cap

A: INSPECTION

- 1) Check that the radiator cap does not have deformation, cracks or damage.
- 2) Attach the radiator cap tester to radiator cap.

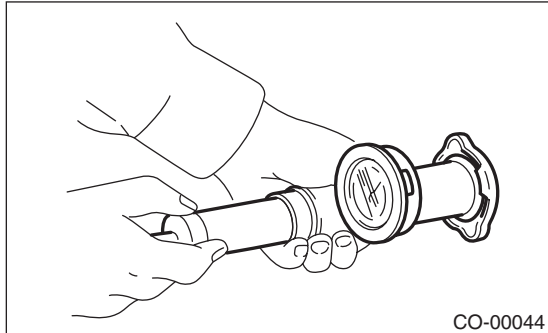

- 3) Increase pressure until the radiator cap tester gauge needle stops. Radiator cap is functioning properly if it holds the service limit pressure for 5 — 6 seconds. Replace the radiator cap if its valve opens at less than the service limit.

Standard:

**73.6 — 103.0 kPa (0.75 — 1.05 kgf/cm²,
11 — 15 psi)**

Service limit:

63.6 kPa (0.65 kgf/cm², 9 psi)

CAUTION:

Be sure to remove foreign matter and rust from the cap in advance. Otherwise, results of pressure test will be incorrect.