

PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


11.PCV Valve

A: REMOVAL


CAUTION:

Do not remove unless the PCV valve is broken.

- 1) Remove the collector cover.
- 2) Remove the battery and battery carrier. <Ref. to SC(H6DO)-18, REMOVAL, Battery.>
- 3) Disconnect the PCV hose.

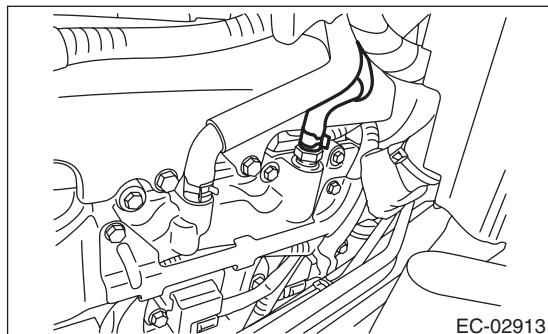

- 4) Remove the PCV valve from rocker cover.

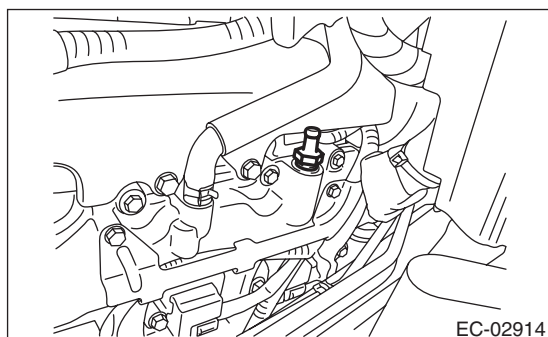

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Apply liquid gasket to the bolt threads of PCV valve.

Liquid gasket:

THREE BOND 1324 (Part No. 004403042) or equivalent


Tightening torque:

25 N·m (2.5 kgf·m, 18.4 ft·lb)


C: INSPECTION

1. PCV VALVE

- 1) Check that the PCV valve has no deformation, cracks or other damages.
- 2) Check that air is discharged from (B) when air is blown into (A).

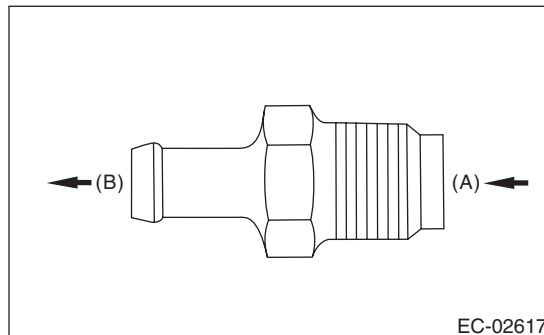

- 3) Check that air does not come out from (B) when air is blown into (A).

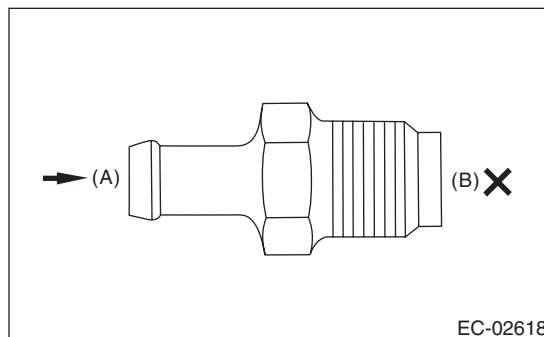

2. OTHER INSPECTIONS

Check that the PCV hose has no cracks, damage or loose part.

PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

INTAKE (INDUCTION)

IN(H6DO)

	Page
1. General Description	2
2. Air Cleaner Element	4
3. Air Cleaner Case	5
4. Air Intake Chamber	7
5. Air Intake Duct	8
6. Resonator Chamber	9