


# Fuel Pump Relay

FUEL INJECTION (FUEL SYSTEMS)

## 19. Fuel Pump Relay

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the passenger's front door scuff plate. <Ref. to EI-44, FRONT DOOR SCUFF PLATE, REMOVAL, Side Trim.>
- 3) Remove the front pillar lower trim. <Ref. to EI-44, FRONT PILLAR LOWER TRIM, REMOVAL, Side Trim.>
- 4) Remove the fuel pump relay from the relay holder.

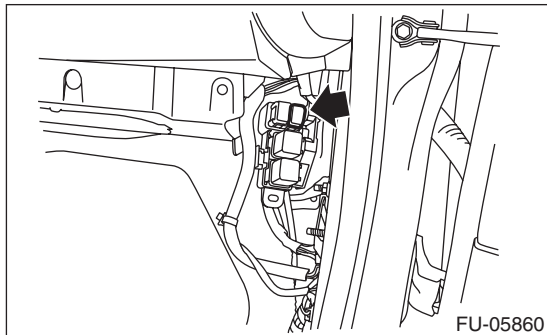


### B: INSTALLATION

Install in the reverse order of removal.


### C: INSPECTION

- 1) Check that the fuel pump relay has no deformation, cracks or other damages.
- 2) Measure the resistance between fuel pump relay terminals.

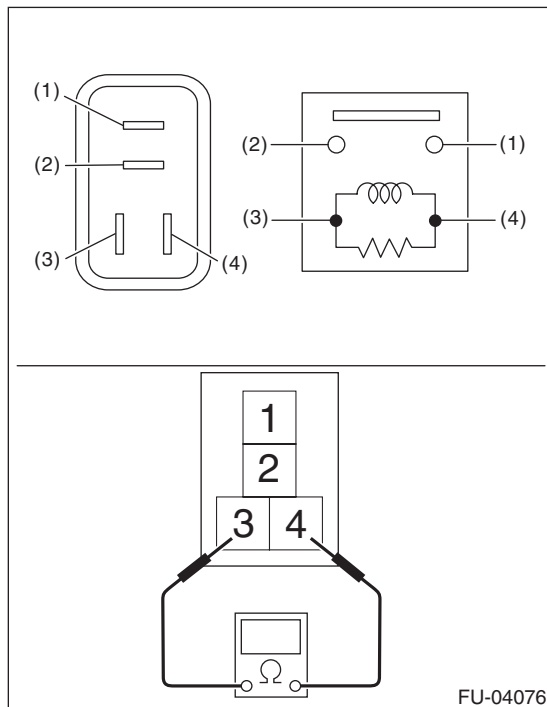

Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	93.8 — 136.4 Ω (when 20°C (68°F))

- 3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the fuel pump relay terminals.

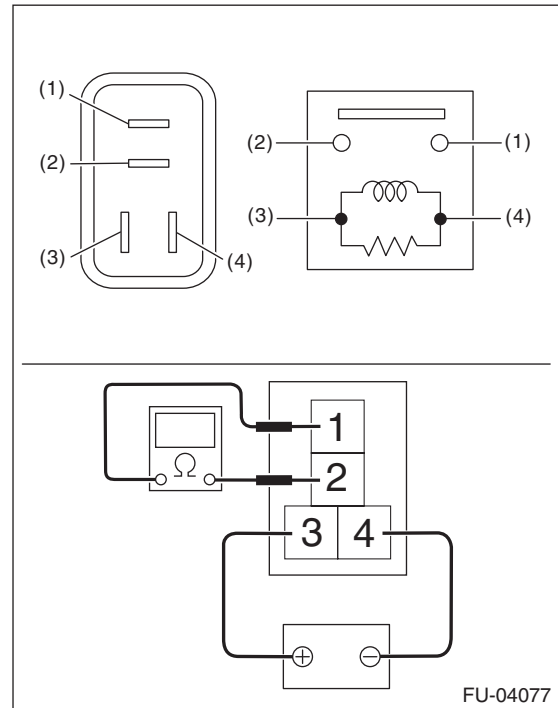

Terminal No.	Standard
1 and 2	Less than 1 Ω