


4. Air Intake Chamber

A: REMOVAL

- 1) Remove the collector cover.
- 2) Loosen the clamp (A) which connects air intake chamber to throttle body.
- 3) Loosen the clamp (B) which connects intake boot to air intake chamber.
- 4) Remove the bolt (C) which secures air intake chamber and collector cover bracket to the stay.

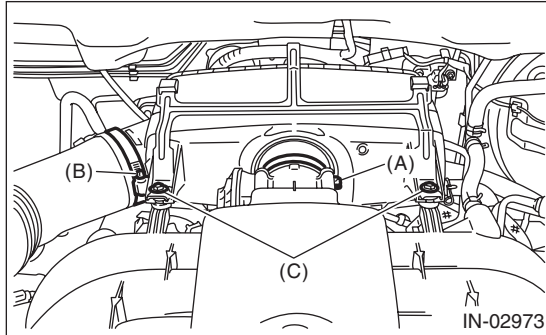

- 5) Disconnect the blow-by hoses, and then remove air intake chamber.

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

Clamp (A), (B)

3 N·m (0.3 kgf·m, 2.2 ft·lb)

Bolt (C)

6.5 N·m (0.7 kgf·m, 4.8 ft·lb)

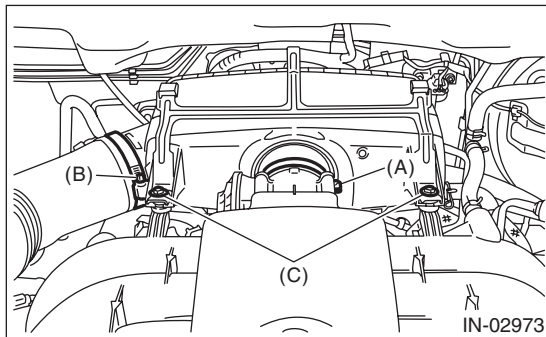

C: INSPECTION

- 1) Check the intake boot for deformation, cracks or other damages.
- 2) Check that no foreign matter is mixed in air intake chamber.